


Getting Started

1. Packing List

- | | |
|------------------|----------------------|
| 1. eBook Reader | 2. USB Cable |
| 3. Earphone | 4. Quick Start Guide |
| 5. Warranty Card | |

2. Device Overview

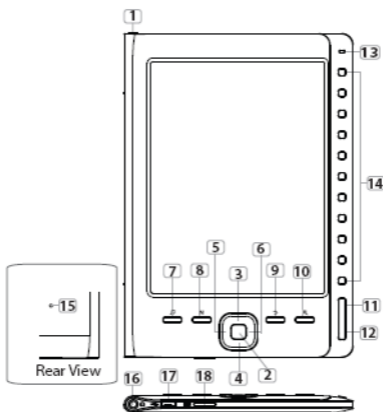



- | | | |
|----------------------------|----------------------------|--|
| 1 | Power Button | Turn on/off the device |
| 2 | Enter Button | Confirm the option |
| 3 4 5 | Directional Buttons | Navigate through all options; Adjust the volume |
| 6 | Music Button | Enter music playback screen during background music mode |

8	MENU Button	Enter the options menu
9	Back Button	Return to the previous option; Press and hold the button to return to Home screen
10	Zoom Button	Zoom in/out the contents on screen
11	PREV Page Button	Turn to the previous page
12	NEXT Page Button	Skip to the next page
13	LED Indicator	Power and battery status
14	Navigational Buttons	Select the corresponding items; Input the page numbers
15	Reset Button	Reset the device to the default settings
16	Earphone Jack	Connect to the earphones
17	Mini USB Port	Connect to the mini USB connector
18	Micro SD Card Slot	Insert the micro SD card

3. Power On/Off the Device

- Press and hold the **Power Button** to turn on the device. The start-up screen appears before entering the main menu on the **Home** screen.
- Press and hold the **Power Button** to turn off the device.

4. Charging

- Connect the device and the PC/Notebook for charging. Normally it takes approximately 4 hours to fully charge the device.
- Recharge the device as soon as possible when the battery is in low-power level shown as . The icon  appears when charging.

5. Using a Micro SD Card

- The device supports micro SD cards.
- To insert a micro SD card, place the connector towards the device and the card label towards the rear side of the device.
- To remove a micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

Reading BOOKs

Press **Navigational Buttons** to select **Books** to enter reading books.


NOTE

- Select **Reading History** to review the files read before.
- If files were ever saved on the micro SD card, they still appear on the file list even if the micro SD card has been removed. But the files cannot be opened if the micro SD card is removed.

- During reading, press **PREV/NEXT Page Buttons** to turn pages.
- Press **Zoom Button** to zoom in/out the contents on screen.
- Press **Menu Button** to enter options menu.
- Press **BACK Button** to return to the previous option.

Note:

Under direct sunlight or in low-temperatures the characters displayed on the screen may fade.

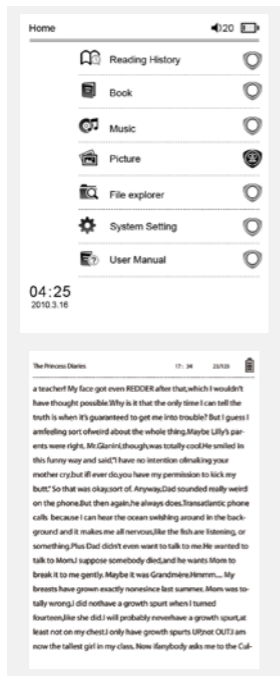

How to Get eBooks


1. Installing Adobe Digital Edition (ADE)

1. Please download Adobe Digital Edition (ADE) online at the website:
<http://www.adobe.com/products/digitaleditions>.
2. Install Adobe Digital Edition (ADE) on you PC/Notebook.
3. If you do not have an Adobe ID, create it by following the on-screen instructions.

2. Download eBooks from an online E-Book store to your PC/Notebook.

1. Authorize your PC/Notebook to download eBooks from an e-Book store.
2. Authorize the device to transfer and read downloaded eBooks on the device.
3. Download eBooks in Adobe PDF or EPUB formats to your PC/Notebook and transfer them to the device.

3. Transfer Content to the device connected with your PC/Notebook.

1. Connect the device to your PC/Notebook using the USB cable.
2. Select the content you want to transfer from your PC/Notebook.
3. Drag the content from the PC/Notebook to the device.
4. Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
5. Left click on  to disconnect the device and PC/Notebook safely.

NOTE:

Content can also be transferred to a micro SD card on the device.