


## Getting Started

### 1. Device Overview

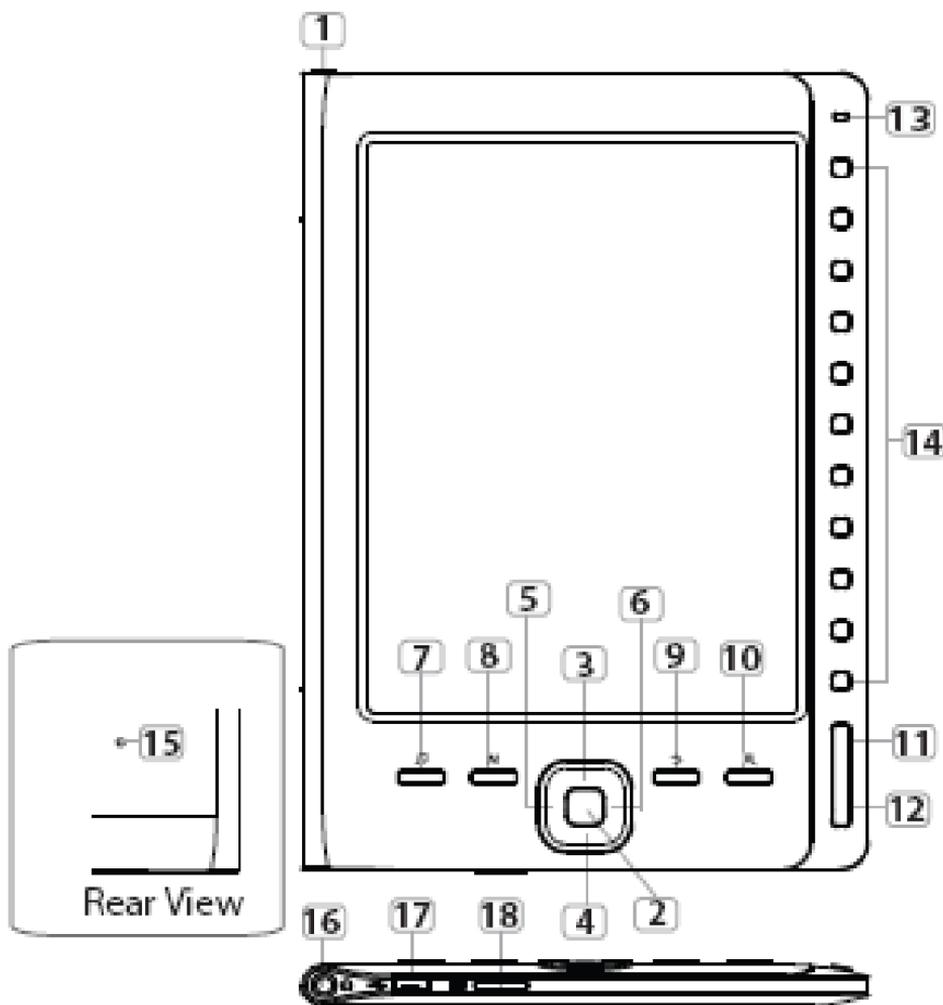

<b>1</b>	<b>Power Button</b>	Turn on/off the device
<b>2</b>	<b>Enter Button</b>	Confirm the option
<b>3</b> <b>4</b> <b>5</b> <b>6</b>	<b>Directional Buttons</b>	Navigate through all options; Adjust the volume
<b>7</b>	<b>Music Button</b>	Enter the music playback screen during the background music mode
<b>8</b>	<b>MENU Button</b>	Enter the options menu
<b>9</b>	<b>Back Button</b>	Return to the previous option; Press and hold the button to return to <b>Home</b> screen
<b>10</b>	<b>Zoom Button</b>	Zoom in/out the contents on screen
<b>11</b>	<b>PREV Page Button</b>	Turn to the previous page
<b>12</b>	<b>NEXT Page Button</b>	Skip to the next page
<b>13</b>	<b>LED Indicator</b>	
<b>14</b>	<b>Navigational Buttons</b>	Select the corresponding items; Input the page numbers
<b>15</b>	<b>Reset Button</b>	Reset the device to the default settings
<b>16</b>	<b>Earphone Jack</b>	Connect to the earphones
<b>17</b>	<b>Mini USB Port</b>	Connect to the mini USB connector
<b>18</b>	<b>Micro SD Card Slot</b>	Insert the micro SD card

**NOTE:**

*Under direct sunlight or in low-temperatures the characters displayed on the screen may fade.*

**2. Charging the device**

- Connect the device and the PC/Notebook for charging. Normally it takes approximately 4 hours to fully charge the device.
- Recharge the device as soon as possible when the battery is in low-power level shown as . The icon  appears when charging.

### 3. Power on/Power off the Device

- Press and hold the **Power Button** to turn on the device. The start-up screen appears before entering the main menu on the **Home** screen.
- Press and hold the **Power Button** to turn off the device.

### 4. Inserting a Memory Card


- The device supports micro SD cards.
- To insert a micro SD card, place the connector towards the device and the card label towards the rear side of the device.
- To remove a micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.
- To access the files on the memory card, press the **Navigational Buttons** to select **File Explorer/Card**.

#### **NOTE**

The user available capacity is approximately 1.5 GB. The device supports micro SD cards and micro SDHC cards up to 32GB.

## 5. Home Screen

After the start-up screen, the **Home** screen appears.  
Press the **Navigational Buttons** to select the desired item.

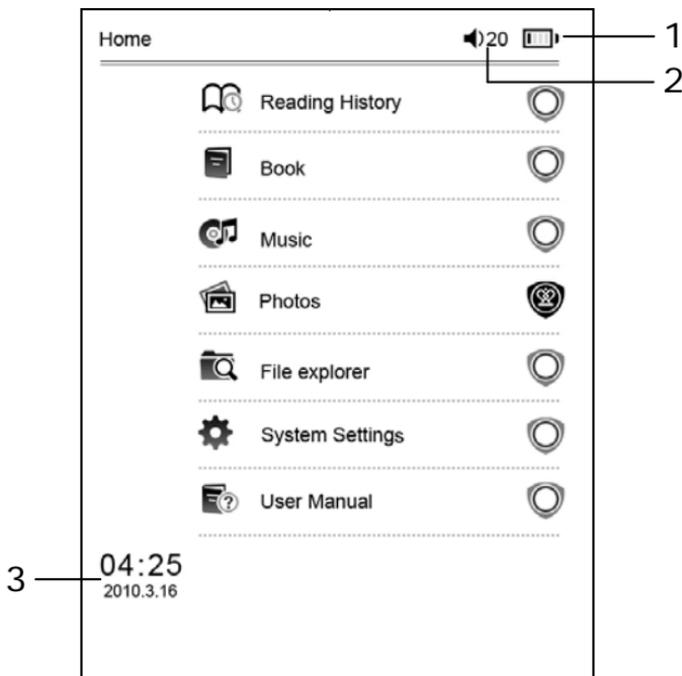

### • *Icons on the status bar*

- |          |                             |          |                  |
|----------|-----------------------------|----------|------------------|
| <b>1</b> | Battery Indicator           | <b>2</b> | Volume Indicator |
| <b>3</b> | Current Time/Date indicator |          |                  |

## How to Get eBooks

## **1. Installing Adobe Digital Edition (ADE)**

1. Please download Adobe Digital Edition (ADE) online at the website: *http : // [www.adobe.com /products/digitaleditions](http://www.adobe.com/products/digitaleditions).*
2. Install Adobe Digital Edition (ADE) on you PC/Notebook.
3. If you do not have an Adobe ID, create it by following the on-screen instructions.

## **2. Download eBooks from an online E-Book store to your PC/Notebook.**

1. Authorize your PC/Notebook to download eBooks from an e-Book store.
2. Authorize the device to transfer and read downloaded eBooks on the device.
3. Download eBooks in Adobe PDF or EPUB formats to your PC/Notebook and transfer them to the device.

## **3. Transfer Content to the device connected with your PC/Notebook.**

1. Connect the device to your PC/Notebook using the USB cable.
2. Select the content you want to transfer from your PC/Notebook.
3. Drag the content from the PC/Notebook to the device.
4. Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
5. Left click on  to disconnect the device and PC/Notebook safely.

### **NOTE:**

Content can also be transferred to a micro SD card on the device.

## **Basic Operations**


---



## Reading History

The last read books list appears. Press the **PREV/NEXT Page Buttons** to turn pages. Press the **Navigational Buttons** to open a book.

You can also press the **Directional Buttons** to select a specific book and press the **Enter Button** to open the book.

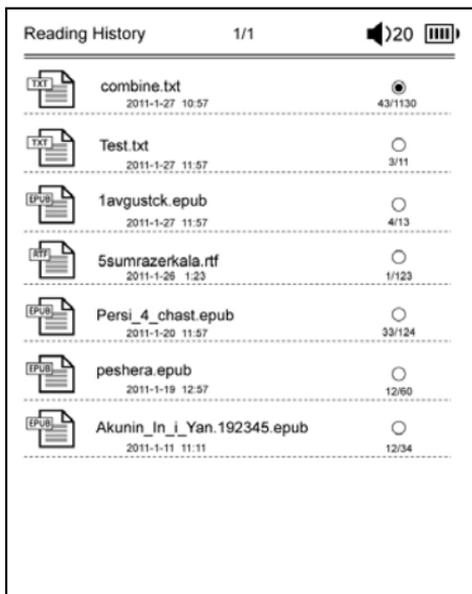

Reading History		1/1	 20 
	combine.txt 2011-1-27 10:57	<input checked="" type="radio"/>	43/1130
	Test.txt 2011-1-27 11:57	<input type="radio"/>	3/11
	1avgustck.epub 2011-1-27 11:57	<input type="radio"/>	4/13
	5sumrakerkala.rtf 2011-1-26 1:23	<input type="radio"/>	1/123
	Persi_4_chast.epub 2011-1-20 11:57	<input type="radio"/>	33/124
	peshera.epub 2011-1-19 12:57	<input type="radio"/>	12/60
	Akunin_In_i_Yan.192345.epub 2011-1-11 11:11	<input type="radio"/>	12/34


### NOTE

If files were ever saved on the micro SD card, they are still displayed in “Reading History” even if the SD card has been removed. But the files cannot be opened if the SD card is removed.

### Operations during book reading

When reading a book the following operations can be

performed.

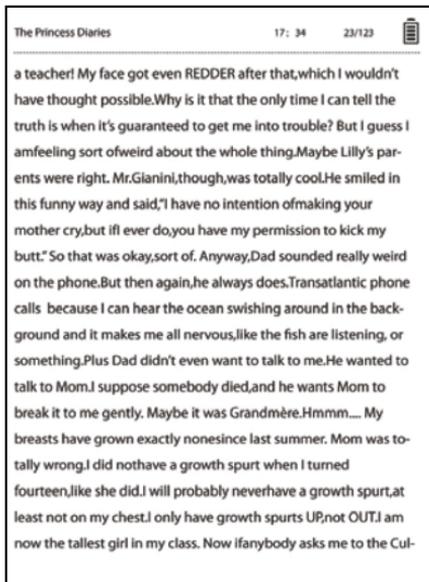

- Press the **PREV/NEXT Page Buttons** to turn pages.
  - Press the **Zoom Button** to zoom in/out the contents on screen. Press the **Navigational Buttons** to select a desired font size or zooming ratio. When the page is zoomed, use the **Directional Buttons** to show the rest of the page.
  - Press the **Back Button** to return to the previous option/screen.
  - Press the **Music Button** to enter the music playback screen in the background music mode.
- Press the **Menu Button** to show the options menu. Please refer to the **Book Mode** for more detailed instructions.



**Book**

The book list appears.

The device supports txt, epub, pdf, pdb, fb2, and html file formats.



Press the **PREV/NEXT Page Buttons** to turn pages.

Press the **MENU Button** to show the options menu detailed as follows.

### • Search

Press the **Navigational Buttons** to input desired characters.

Select  to backspace.

Upon successful search pages containing the input

characters or words will appear. Press the **PREV/NEXT**

**Page Buttons** to turn pages if available. Press the

**Directional Buttons** to select a desired book and press the


**Enter Button** to open a book.

## • Sort Items

Select a desired option (**By date/title/file type**) to arrange the book list.

## Reading Books

Press the **Navigational Buttons** to open a book.

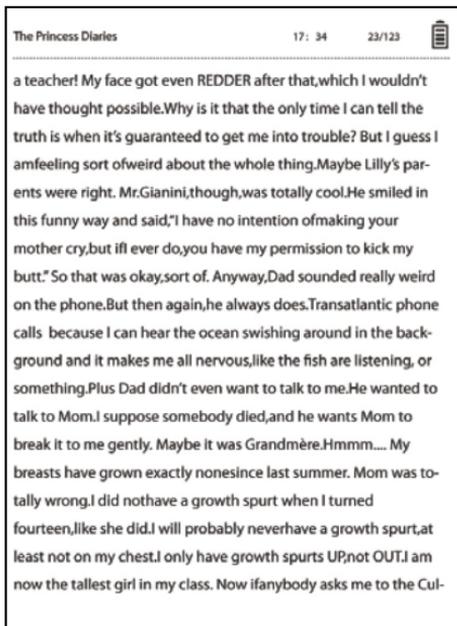


- Press the **PREV/NEXT Page Buttons** to turn pages.
- Press the **Zoom Button** to zoom in/out the contents on screen.
- Press the **Back Button** to return to the previous option/screen.
- Press the **MENU Button** to pop up the options menu.

## About the Options Menu

When reading a book press the **MENU Button** to show the

options menu. The options available for this book format will be shown.

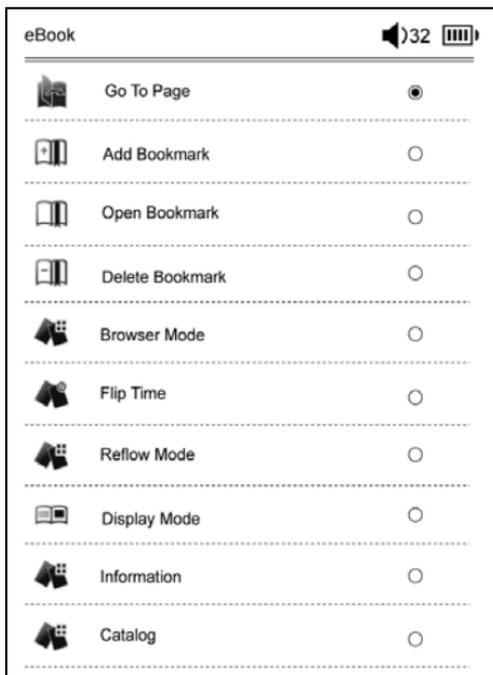

- ***Go To Page***

Skip to a specific page.

Input a page number and press the **Enter Button** to skip to a specific page.

- ***Add Bookmark***

Create a bookmark on the current page.

Press the **Navigational Buttons** to store the bookmark. You can create 8 bookmarks in one book.

- ***Open Bookmark***

Display a bookmark.

Press the **Navigational Buttons** to show a bookmark.

- **Delete Bookmark**

Delete a bookmark in the current book.

Press the **Navigational Buttons** to delete a bookmark.

- **Browse**

Select **Auto Flip** to start autoplay or select **Manual Flip** to turn pages manually.

- **Page Flip Interval**

Set the duration time of the **Auto Flip**.

30/50/80/120/150 seconds are available.

- **Reflow Mode**

Rearrange the PDF files in form of text to fit the screen size.

- **Display Header and Footer**

Show the title, time indicator, battery indicator, and pages indicator on the top or bottom of the screen.

- **Information**

Display the technical information of the current book.

- **Table of Contents**

Skip to the table of contents.

Press the **PREV/NEXT Page Buttons** to turn pages if available. Press the **Navigational Buttons** to select the desired item.

**NOTE**

The function is only available when the table of contents is in the form of hyperlink.

- **Screen rotate settings**

The device can rotate the screen to Landscape or Portrait mode according to its position towards earth. Select


**Turn On** to set the screen rotation manually.



## Music

The list of audio files appears.

The device supports mp3, wma, ogg, flac, and wav file formats.

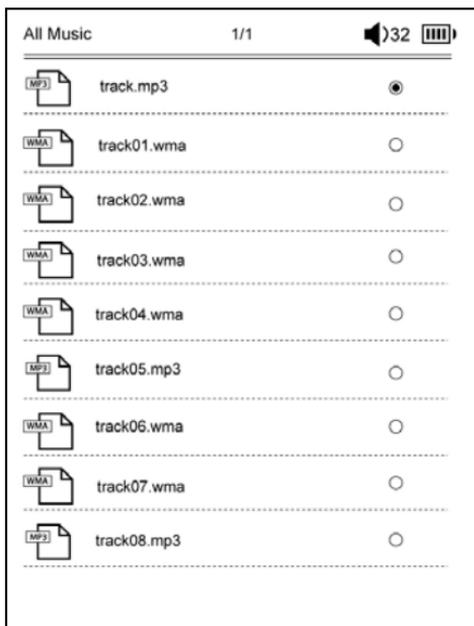

Press the **MENU Button** to show the options menu detailed as follows.

- **Search**

Press the **Navigational Buttons** to input desired characters. Select **AB+** to backspace.


Upon successful search pages containing the input characters or word will appear. Press the **PREV/NEXT Page Buttons** to turn pages if available. Press the **Directional Buttons** to select a desired track and press the **Enter**

**Button** to play a track.

### • Sort Items

Select a desired option (**By date/title/file type**) to arrange the audio file list.

## Operations on the Playback Screen

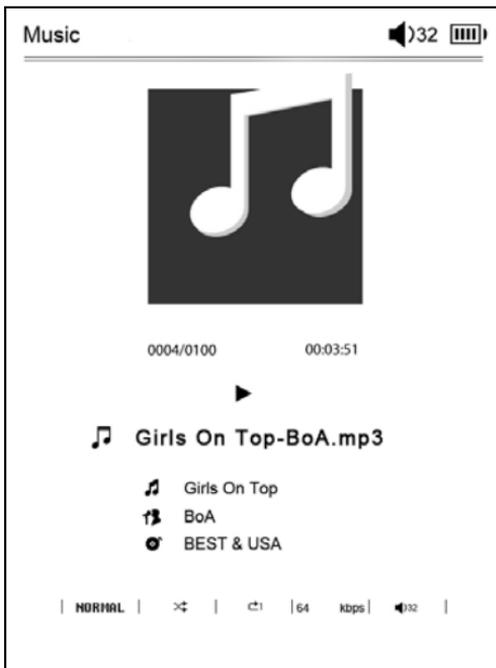

Press the **Enter Button** to pause or resume the playback.


Press the Up/Down Button of the **Directional Buttons** to adjust the volume.

Press the Left/Right Button of the **Directional Buttons** to turn to previous/next track.

Press and hold the Left/Right Button of the **Directional Buttons** to rewind/go forward.

## About the Options Menu

Press the **MENU Button** to enter the options menu detailed as follows.

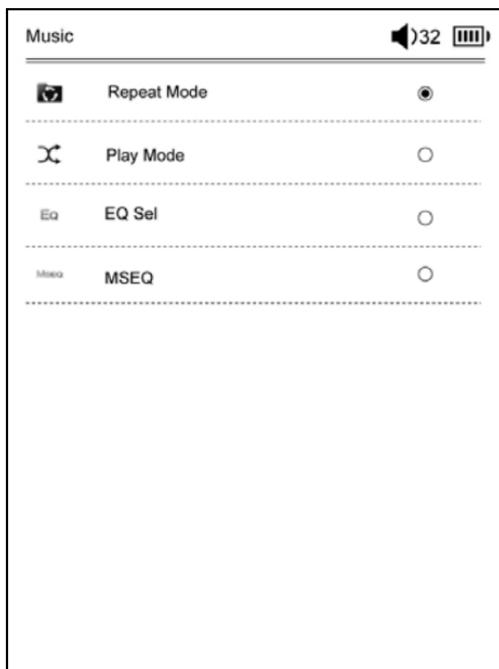

---

### Repeat Mode

Press the **Navigational Buttons** to select a desired repeat mode. Once, Repeat, All, Repeat All are available.

---

### Play Mode

Press the **Navigational Buttons** to select a desired play mode. Loop and Shuffle are available.

---

### EQ Sel

Press the **Navigational Buttons** to select the desired sound quality.

---

### MSEQ

3D, Bass and LEQ are available.

---

## Background Music Mode


During the music playback, press the **Back Button** to enter the background music mode, in which you can use the device with playing music.

To stop the music playback, press the **Music Button** to enter the playback screen, and then press the **Enter Button**.



## Photos

Pictures saved on the SD card and flash appear in the list. The device supports .jpg and .bmp picture formats.

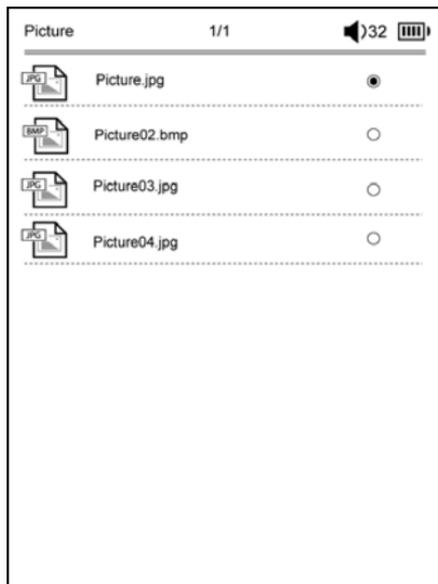

Press the **MENU Button** to show the options menu detailed as follows.

### • Search

Press the **Navigational Buttons** to input desired characters. Select **AB←** to backspace.

Upon successful search pages containing the input characters or words will appear. Press the **PREV/NEXT Page Buttons** to turn pages if available. Press the **Directional Buttons** to select a desired picture and press the **Enter Button** to view a picture.


- **Sort Items**

Select a desired option (**By date/title/file type**) to arrange the pictures list.

## Operations when viewing a picture

Press the **Navigational Buttons** to view a specific picture.

Press the **PREV/NEXT Page Button** to skip to the previous/next picture.

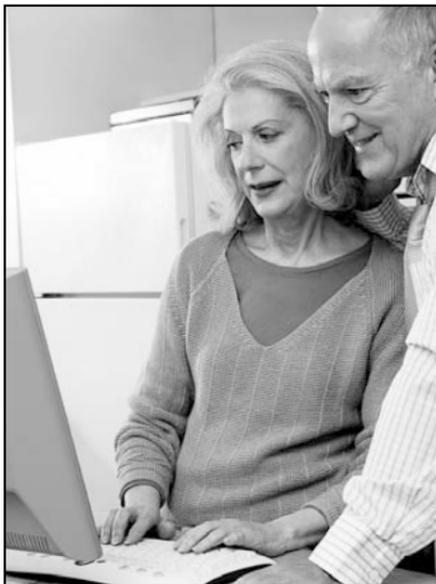

While viewing a picture, press the **MENU Button** to pop up the options menu.

- **Browse**

**Slide Show** and **Manual Flip** are available.

- **Slide Duration**

Select the duration time of a slide show. 10/20/30/60 seconds are available.



## **File explorer**

---

Select file from a Flash or SD Card. All files on Flash or SD Card are in the list.

Select the desired file (all formats compatible) for playback.



## System Settings

---

### 1. Language

Set the desired language. 23 languages are available.

### 2. Time

Configure the date and time setup.

Press the **Directional Buttons** to adjust the value and press the **Enter Button** to confirm the **Time** settings.

### 3. Calendar

Display the calendar.

Press the **PREV/NEXT Page Buttons** and the **Directional Buttons** to adjust the value.

### 4. Reading History Settings

#### • Keep Reading History

Store the Reading History.

#### • Disable

Deactivate the function.

#### • Clear History

Remove the files from the **Reading History** list.

### 5. Screen Refresh Mode

It's recommended that Full Screen Refresh should be used

under strong light or low temperature environment.

## **6. Erase activation record**

Clear the Adobe activation record.

You can not read the Adobe DRM books once you clear the Adobe activation record. You are required to activate the device via ADE again.

## **7. Auto Shut Down Settings**

Select the shut down time or select **Disable** to deactivate the function.

## **8. Restore system**

Restore the device to factory default settings. All files will be deleted permanently once factory default settings are restored.

## **9. System Information**

Show the technical information of the device.



## User Manual

---

This PDF-format User Manual can be browsed on the device. Press the **PREV/NEXT Page Buttons** to turn pages. Press the **Back Button** to return to **Home** screen.

Press the **MENU Button** to enter the options menu.

### **NOTE**

*Please refer to **Book/About the Options Menu** for more detailed instructions.*

## Technical Specifications

---

<b>Display</b>	6 inch E-Ink Display, 800x600 pixels
<b>User Available Capacity</b>	Approx. 1.5GB after initial setting
<b>Storage Memory</b>	Supports micro SD card and micro SDHC card up to 32GB
<b>Media File Formats Supported</b>	Book: txt, pdb, pdf, epub, fb2, html Music: mp3, wma, wav, ogg, flac, aac Photo: jpg, bmp
<b>Battery Life</b>	6000 pages (approx: 20 hours)
<b>Power Supply</b>	USB power (DC 5.3V, 1A optional)
<b>Minimum System Requirement</b>	Windows 2000, ME, XP, Vista, Win 7, Mac OS 10x
<b>Physical properties</b>	Dimension: 172.5 x 120.6 x 9 mm (approx) Weight: 169.2g (approx)

## **Technical Support and Warranty**

---

Please refer to [www.prestigio.com](http://www.prestigio.com) for technical support and included warranty card for warranty information.

## **Disclaimer**

---

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.