


Getting Started

1. Packing List

1. eBook Reader Main Unit
2. Power Adapter
3. USB Cable
4. Quick Start Guide
5. Warranty Card
6. Carry Case

2. Device Overview

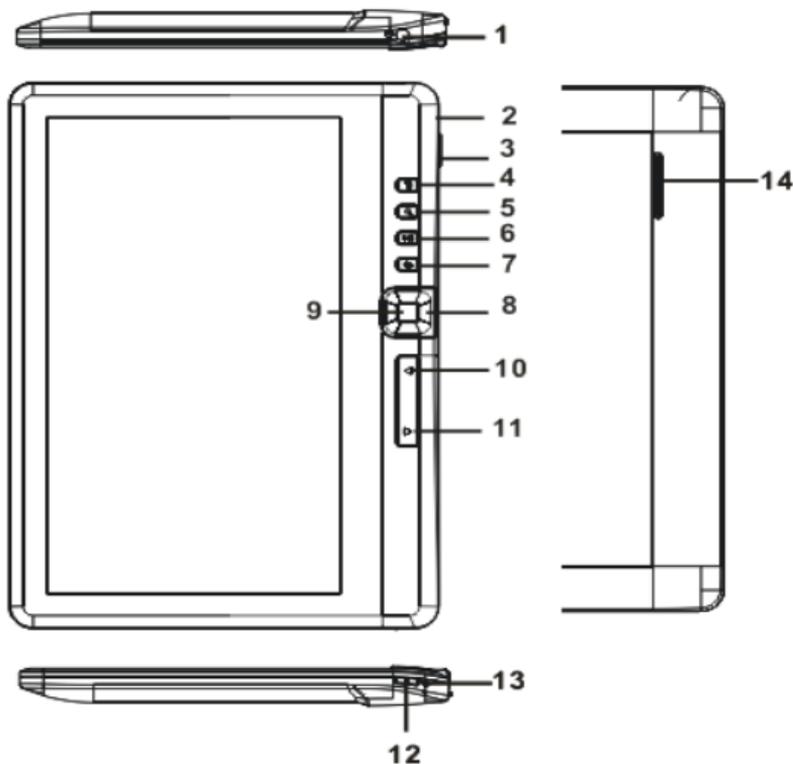

- | | | |
|-----------|---------------------------|---|
| 1 | Earphone jack | Connect the earphones |
| 2 | Micro USB jack | Data transfer and emergency charging |
| 3 | TF card slot | For Micro SD putting |
| 4 | Menu button | Press to display options menu |
| 5 | Zoom Button | Adjust font size or zoom in/out |
| 6 | Play/Pause button | Enter music play menu |
| 7 | Back button | Press once to return to previous menu, press and hold to return to Home menu |
| 8 | Navigation buttons | Move the cursor |
| 9 | OK/Enter button | Confirm or enter the desired option |
| 10 | PRE page button | Press to turn to previous page |
| 11 | Next page button | Press to turn to next page |
| 12 | Power button | Press and hold for 3 sec to turn on/off, press and hold for 6 sec to reset |
| 13 | Charging indicator | While device is being charged, the red light is on, once fully charged, the blue light is on. |
| 14 | Speaker | |

3. Power On/Off the Device

- Press and hold the **Power Button** to turn on the device. The start-up screen will be displayed before entering the main menu on the **Home** screen.
- Press and hold the **Power Button** to turn off the device.
- Press the **Power Button** to enter sleep mode. Press the **Power Button** again to exit the mode.


4. Charging

- Insert the Micro USB connector to the USB port on the device and connect the power adapter to the wall socket for charging. Normally it takes approximately 6 hours to fully charge the device.
- Recharge the device as soon as possible when the battery is in low-power level shown as . The icon  appears when charging.

5. Using a Micro SD Card

- The device supports Micro SD/SDHC card up to 16GB.
- To insert a Micro SD card, place the connector towards the device and the card label towards the rear side of the device.
- To remove a Micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

Reading BOOKs

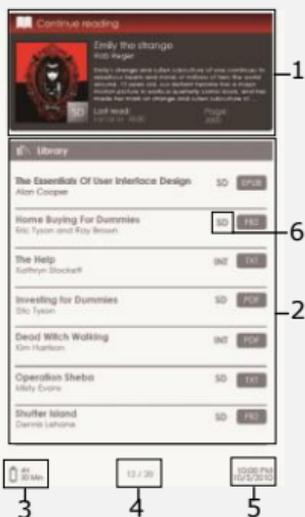

1. Continue Reading

The most recent file appears on the screen. Press the **Enter Button** to resume reading.

2. Library

Books list is displayed on screen. Press the **Navigation Buttons** to select the desired book and press the **Enter Button** to enter reading.

3. Battery Indicator

4. Current/Total Page

5. Time and Date

6. File Directory

Display the file location.
SD-Micro SD card, **INT**-internal memory.

7. Press the **Menu button** to enter options menu.

How to Get eBooks

1. Installing Adobe Digital Edition (ADE)

1. Please download Adobe Digital Edition (ADE) online at the website:
<http://www.adobe.com/products/digitaleditions>.
2. Install Adobe Digital Edition (ADE) on you PC/Notebook.
3. If you do not have an Adobe ID, create it by following the on-screen instructions.

2. Download eBooks from an online E-Book store to your PC/Notebook.

1. Authorize your PC/Notebook to download eBooks from an e-Book store.
2. Authorize the device to transfer and read downloaded eBooks on the device.
3. Download eBooks in Adobe PDF or EPUB formats to your PC/Notebook and transfer them to the device.

3. Transfer Content to the device connected with your PC/Notebook.

1. Connect the device to your PC/Notebook using the USB cable.
2. Select the content you want to transfer from your PC/Notebook.
3. Drag the content from the PC/Notebook to the device.
4. Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
5. Left click on  to disconnect the device and PC/Notebook safely.

NOTE:

Content can also be transferred to a micro SD card on the device.