


## Basic Operations


Press and hold the **Power Button** to turn on the device. It will automatically enter the **Home** page after the start-up screen.

From the **Home** page, press the **Menu Button** to enter the **Home menu**. Press the **Directional Buttons** to select the desired item and press the **Enter Button** to confirm the option. Press the **Back Button** to return to the previous option.

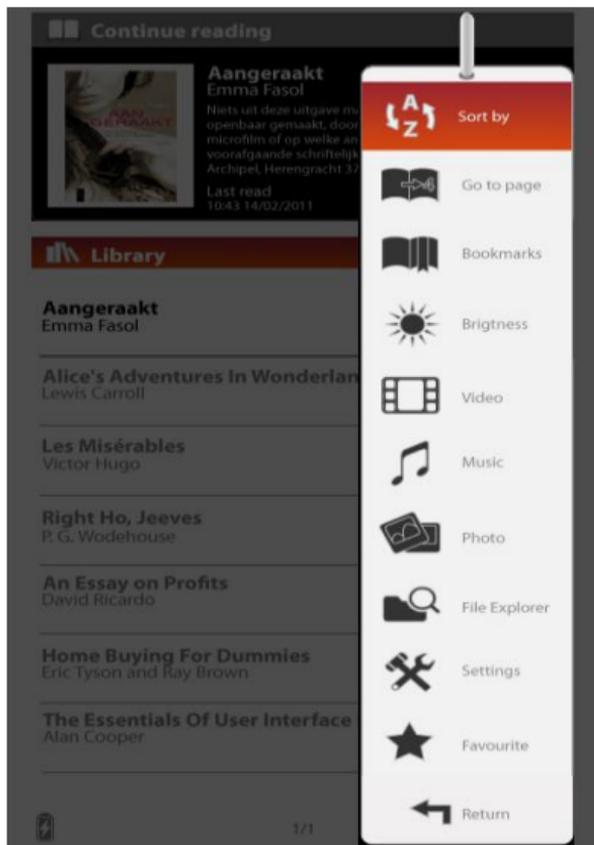


### **Sort by**

Press the **Directional Buttons** to select the desired arrangement (By **Title / Author / Category / Data / Format**) and press the **Enter Button** to confirm the option.

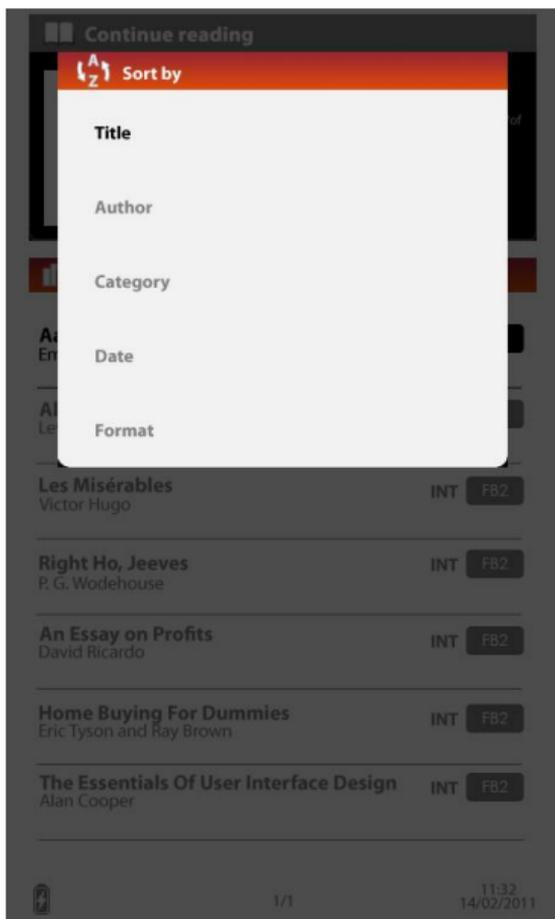


### Go to Page

Press the **Directional Buttons** to move the cursor and adjust the value.  
Highlight **Apply** and press the **Enter Button** to confirm the option.

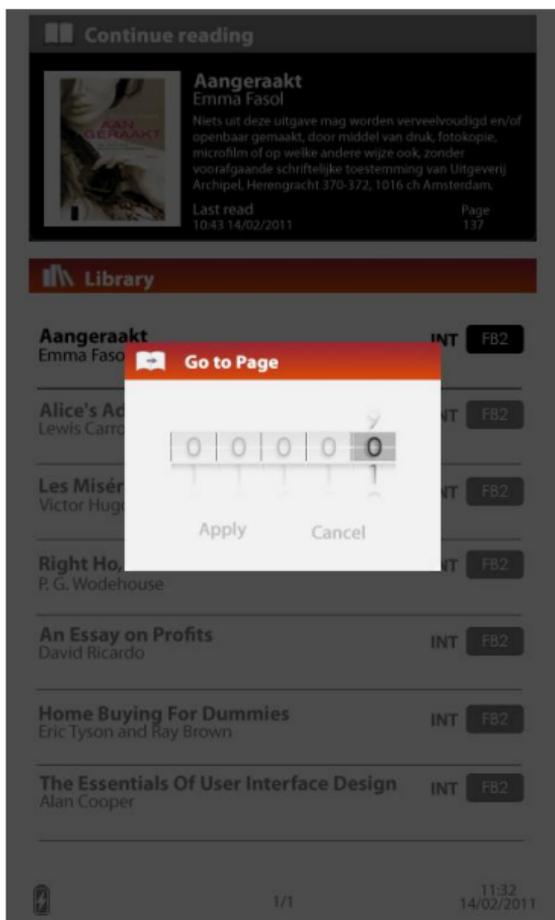

### **Brightness**

Adjust the brightness of the display screen. Press the **Directional Buttons** to adjust the value and press the **Back Button** to confirm the settings.

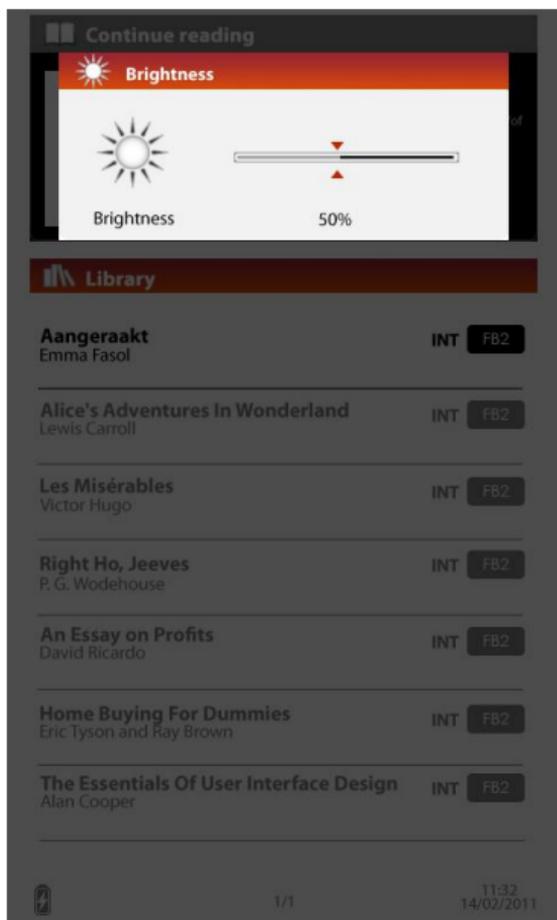

### ***Favorite***

The list of favorite books appears. Press the **Directional Buttons** to highlight the desired book and press the **Enter Button** to open it. From **Favorite** list, press the **Menu Button** to enter the submenu detailed as follows.

**Sort by title:** The list is sorted by title.

**Delete:** Delete the current book from the list.




★ Favourite	
<b>Aangeraakt</b> Emma Fasol	INT <b>FB2</b>
<hr/>	
Alice's Adventures In Wonderland Lewis Carroll	INT <b>FB2</b>
<hr/>	
Les Misérables Victor Hugo	INT <b>FB2</b>
<hr/>	
Right Ho, Jeeves P. G. Wodehouse	INT <b>FB2</b>
<hr/>	
An Essay on Profits David Ricardo	INT <b>FB2</b>
<hr/>	
Home Buying For Dummies Eric Tyson and Ray Brown	INT <b>FB2</b>
<hr/>	
The Essentials Of User Interface Design Alan Cooper	INT <b>FB2</b>
<hr/>	



For information about **Bookmarks, Video, Music, Photo, Explorer** and **Settings**, please refer to the operating instructions as below.

## Reading Books

The device supports EPUB/PDF with Adobe DRM, PDF, TXT, FB2, PDB (palm format) and HTML file formats. Follow the below steps to read books.

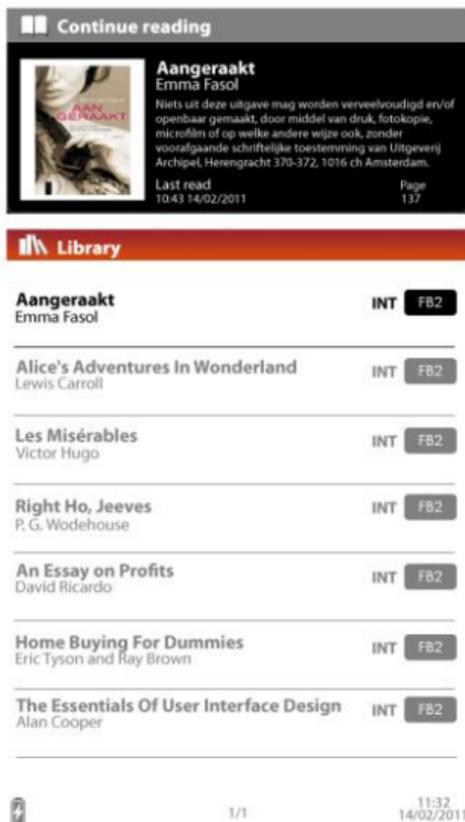

The screenshot shows the 'Continue reading' section of the application. It features a book cover for 'Aangeraakt' by Emma Fasol. Below the cover, there is a warning text in Dutch: 'Niets uit deze uitgave mag worden vervaardigd en/of openbaar gemaakt, door middel van druk, fotokopie, microfilm of op welke andere wijze ook, zonder voorafgaande schriftelijke toestemming van Uitgeverij Archipel, Herengracht 370-372, 1016 ch Amsterdam.' It also shows the 'Last read' time as 10:43 on 14/02/2011 and the current page as 137.

**Continue reading**

**Aangeraakt**  
Emma Fasol

Niets uit deze uitgave mag worden vervaardigd en/of openbaar gemaakt, door middel van druk, fotokopie, microfilm of op welke andere wijze ook, zonder voorafgaande schriftelijke toestemming van Uitgeverij Archipel, Herengracht 370-372, 1016 ch Amsterdam.

Last read  
10:43 14/02/2011

Page  
137

**Library**

<b>Aangeraakt</b> Emma Fasol	INT	FB2
<b>Alice's Adventures In Wonderland</b> Lewis Carroll	INT	FB2
<b>Les Misérables</b> Victor Hugo	INT	FB2
<b>Right Ho, Jeeves</b> P. G. Wodehouse	INT	FB2
<b>An Essay on Profits</b> David Ricardo	INT	FB2
<b>Home Buying For Dummies</b> Eric Tyson and Ray Brown	INT	FB2
<b>The Essentials Of User Interface Design</b> Alan Cooper	INT	FB2

1/1

11:32  
14/02/2011

### Continue Reading

The most recent file appears on the screen. Press the **Directional Buttons** to highlight the option and press the **Enter Button** to resume reading.

### Library


Book list is displayed on the screen. Press the **Previous/Next Page Buttons** to turn pages. Press the **Directional Buttons** to select the desired book and press the **Enter Button** to enter reading.

### Operations on the book page Screen



## Options Menu

When reading a book, press the **Menu Button** to enter the options menu detailed as follows. Press the **Directional Buttons** to highlight the item and press the **Enter Button** to confirm the option. Press the **Back Button** to return to the previous option/screen.

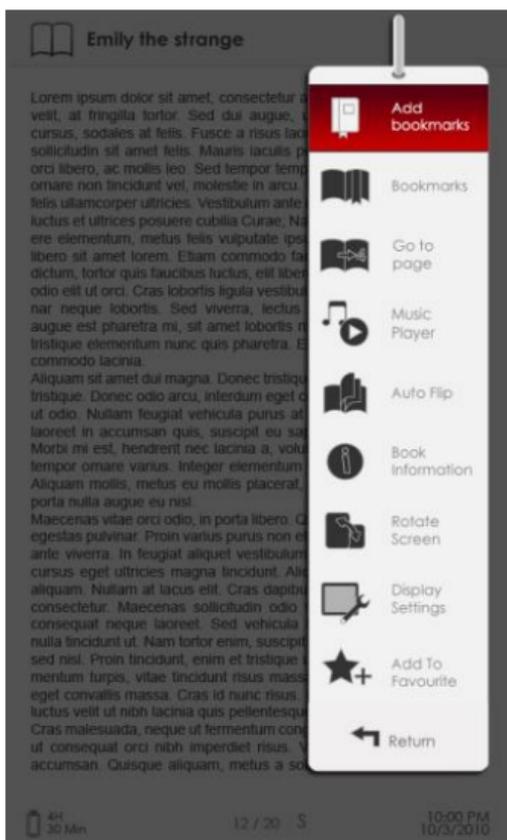

### **Add/Remove bookmarks**

Create/delete a bookmark on the current page. A mark appears on the top right corner of the page.

### **Bookmarks**

Select this option and bookmark list appears. Bookmarked pages of the current book are displayed in the list.

Press the **Enter Button** to view the desired bookmark.

In the bookmark list, press the **Menu Button** to enter the submenu detailed as follows:

#### **Go to page:**

Press the **Directional Button** to move the cursor and adjust the value. Highlight **Apply** and press the **Enter Button** to confirm the option.

#### **Delete:**

Delete the bookmark from the list.

### **Go to page**

Press the **Directional Button** to move the cursor and adjust the value. Highlight **Apply** and press the **Enter Menu** to confirm the option.

### **Music**


Select to pop up the music status bar. You can read books with an audio file playing as background. Please refer to the **Music** mode for more detailed instructions.

### **Auto flip**

Press the **Directional Buttons** to set the slide show interval (5/10/20/30/40/50 seconds and 1 minute) and press the **Enter Button** to confirm. Highlight **Disable** and press the **Enter Button** to disable the function. Press the **Back Button** to exit slide show.

**Book information**

Displays the brief information of the current book. Such as title, format, author, size and so on.

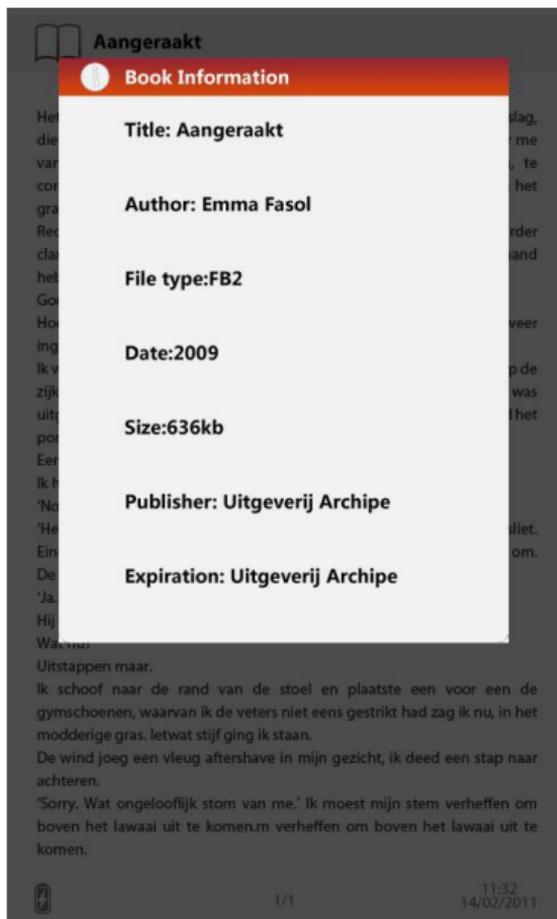


### **Rotate**

Screen orientation can be set manually.

### **Note:**

While the screen is rotated, highlight **More/Back** and Press the **Enter Button** to display the submenu as below.

Screenshot:

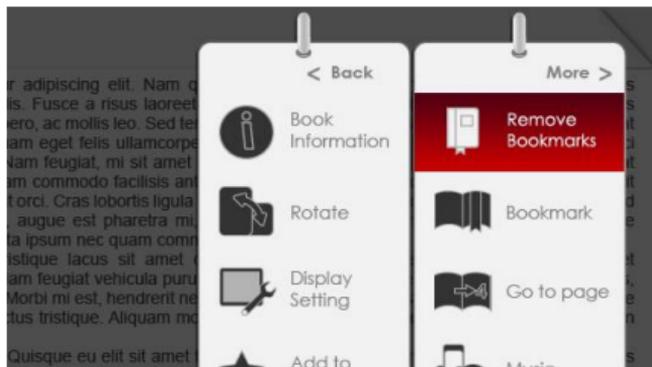


### **Display settings**

The **Font color**, **Background color** and **Brightness** can be adjusted.

### **Note:**

The color of the Font in PDF format files can't be changed.

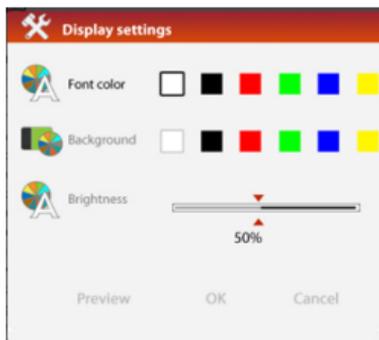


### **Add To/ Remove Favorites**

Add the current book to **Favorite** list or remove it from the **Favorite**.

## **Bookmarks**

From **Home** menu, press the **Enter Button** to enter the **Bookmarks** section. All books containing bookmarks are displayed in the list. Brief information on the current book is displayed on top of the screen.

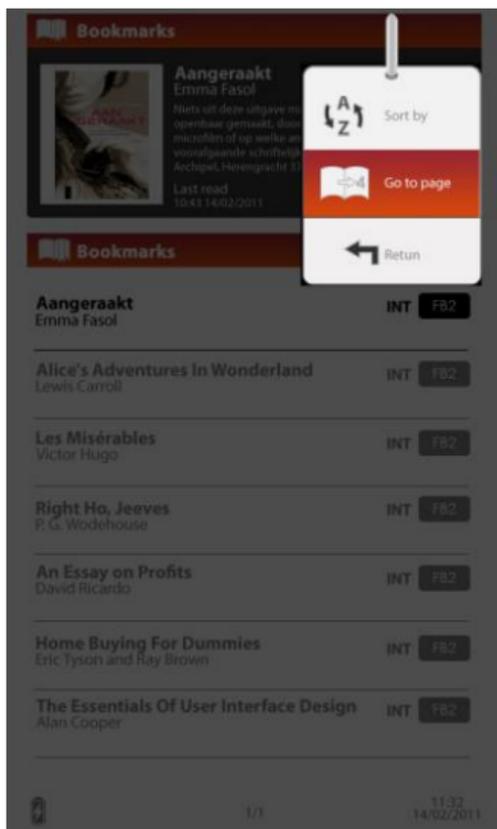

At the **Bookmark** interface, press the **MENU Button** to enter the submenu detailed as follows.

#### **1. Sort by**


Sort the files by **Title/Author/Category/Date/Format**.

#### **2. Go to page**

Press the **Directional Button** to move the cursor and adjust the value. Highlight **Apply** and press the **Enter Button** to confirm the option.

## ***Bookmarks list***

Press the **Directional Button** to highlight the desired book and press the **Enter Button** to enter **Bookmarks List**. Bookmarked pages of the current book are displayed in the list. Press the **Enter Button** to view the selected bookmark.

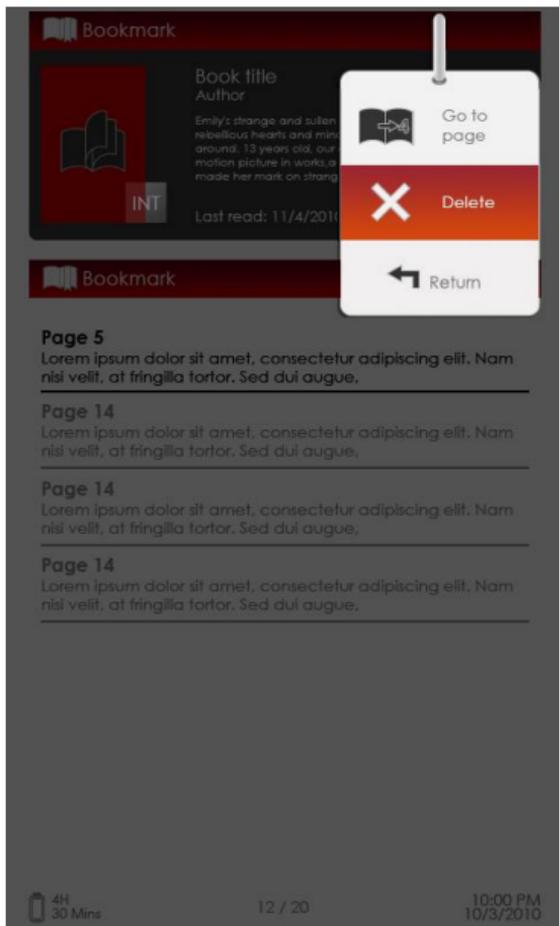

Press the **MENU Button** to enter the submenu detailed as follows.

- 1. Go to page**  
Press the **Directional Button** to move the cursor and adjust the value. Highlight **Apply** and press the **Enter Button** to confirm the option. Delete the bookmark from the list.
- 2. Delete**  
Delete the bookmark from the list.

## Video

The device supports MPEG-1, MPEG-2, MPEG-4(Xvid), Divx, H.263, H.264, RM/RMVB, MKV, MOV, VOB, FLV file formats.

From Home menu, press the **Enter Button** to enter the video file list. Press the **PREV/NEXT PAGE** Buttons to turn pages. Press the **Directional Button** to select the desired video file and press the **Enter Button** to view the video file. Highlight **Yes** and press the **Enter Button** to resume the playback when prompted. Press the **BACK Button** to return to the previous option.

O=In the video viewer, the following operations can be performed.



### **Zoom Button**

Switch between normal/full screen modes.

### **►/◀ Button (Directional Button)**

Adjust the volume.

### **▼/▲ (Directional Button)**


Press ▼/▲ to skip to the previous/next video file. Press and hold ▼/▲ to rewind/ go forward quickly.

### **►/|| Button**

Pause /resume playback.

## **Video Menu**

While viewing a video file, press the **MENU Button** to enter the Video menu detailed as follows.

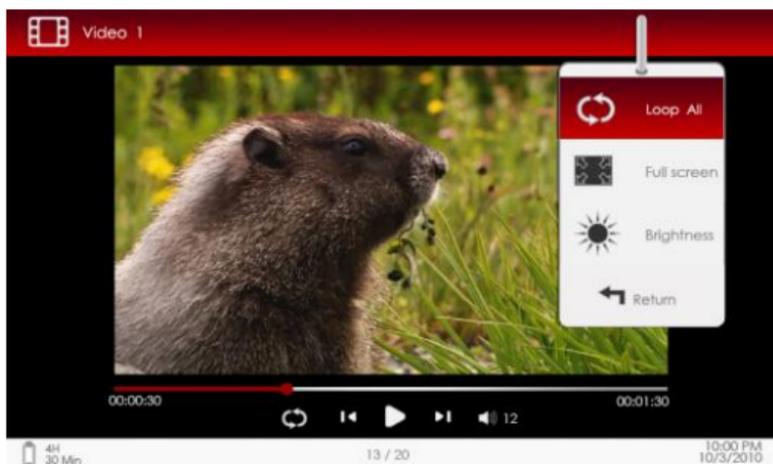

### **Loop All/Repeat One**

Highlight the option and press ▼/▲ (Directional Button) to switch between the two play modes.

### **Full screen/Fit to screen**

Switch between normal/full screen modes.

### **Brightness**

Press ▼/▲ (the Directional Button) to adjust the value and press the **BACK Button** to confirm the option.


### **NOTE**

The device supports subtitles in sub, ssa, srt, lrc formats.  
The file name of the subtitle must be identical to that of the video file.  
The subtitle will be loaded automatically during video playback.

## Music

From Home menu, press the Enter Button to enter the music playback screen. The device supports MP3, ACC, WAV, OGG, WMA (WMA loseless not supported) file formats.

### Music Menu

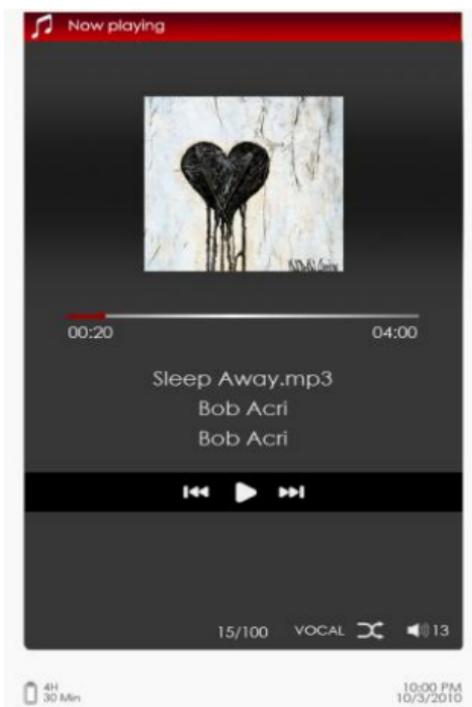

### Up/Down Button

Adjust the volume.

### Left/Right Button

Turn to the previous or next audio track. Press and hold Left/Right Button to rewind/go forward quickly.

### **▶|| Button**


Pause / Resume playback.

### **Back Button**

Exit the playback screen.

### **Music Submenu**

At music playback screen, press the **Menu Button** to enter the **Music** submenu detailed as follows.

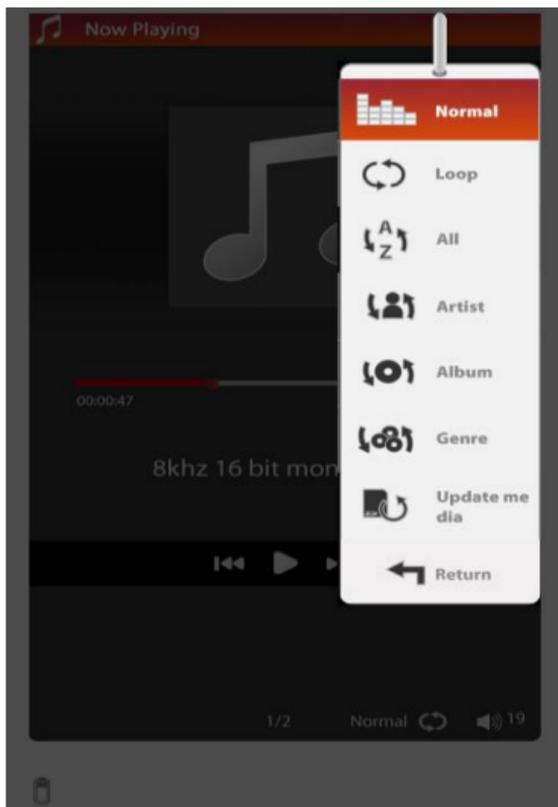



On the book/photo page screen, press ►/|| to display play bar and press it again to pause /resume playback any time.

Press **Up/Down button** (Directional Button) to adjust the volume level.

Press **Left/Right button** (Directional Button) to turn to the previous/next audio track. Press and hold **Left/Right** (Directional Button) to rewind/ go forward quickly.

Press the **Back Button** to exit the play bar.

**Note:**

It is also available in the other modes except video playback.

To exit the background music, enter the playback screen and press ►|| to pause the playback. You can also press ►|| to pause the playback while reading books/viewing pictures.

## Photo

---

The device supports picture formats such as JPG, GIF, BMP and PNG. From **Home** menu, press the **Enter Button** to enter the pictures list. Press the **Previous/Next Page Button** to turn pages. Press the **Directional Button** to select the desired picture and press the **Enter Button** to view it.

Press the **Back Button** to return to the previous option.

Press the **Menu Button** to enter the Photo submenu. Highlight **Sort by title** to arrange the photo list by title.

### Pictures Menu



### **Previous/Next Page Button**


Turn to the previous/next picture.

### **Zoom Button**

Zoom in/out a picture. Press the **Directional Button** to scroll the screen to display the rest of the page. Press the **Back Button** to turn to the original size.

### **Pictures Submenu**

Press the **Menu Button** to enter the **Pictures** submenu detailed as follows.

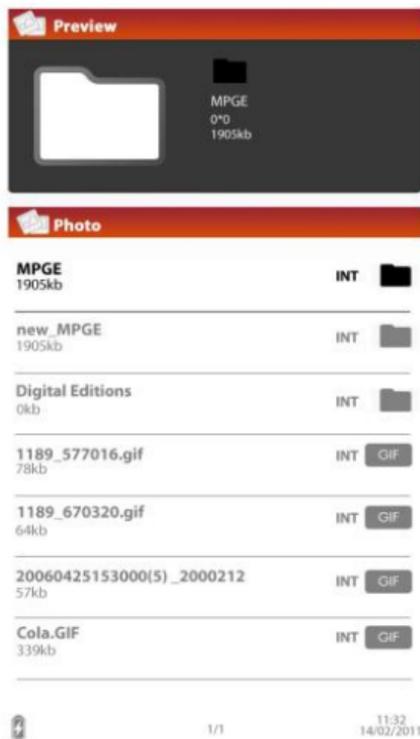

### **Slideshow**

Press the **Enter Button** to enter the slide show and press the **Back Button** to exit. The interval of a slide show can be set from the available ones.

### **Information**

Display the info of the current picture, such as the picture name, format, dimension, size and etc.

### **Thumbnail**

Arrange the pictures by thumbnails. Press the **Back Button** to exit thumbnail list.

### **Rotate**

Screen orientation can be set to Portrait/Landscape manually.

## **File Explorer**


---

From **Home** menu, press the **Enter Button** to enter the **File Explorer** section. Press **▶/◀** (**Directional Button**) to select files from **Flash** or **SD Card** and press the **Enter Button** to confirm. All files on flash or SD Card are in the list. When the cursor is on the list, press the **BACK Button** to exit the list and move the cursor to select **Flash** or **SD Card**. Use **▼/▲** (**Directional Button**) to select the desired file and press the **Enter Button** to confirm the option. Press the **PREV/NEXT PAGE Buttons** to turn pages.



## **File Explorer Menu**

From the file list, highlight the desired file or file folder and press the **MENU Button** to pop up the **File Explorer** menu detailed as follows. In the menu, highlight the item and press the **Enter Button** to confirm.

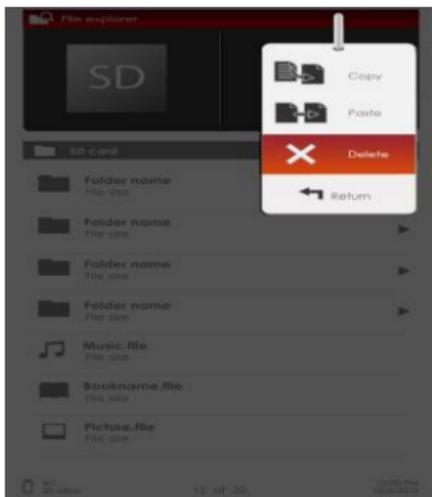

### **1. Copy**

Copy a document or file to other file folders.

To copy the selected file or document, press the **Enter Button** to confirm the option.

### **2. Delete**

Delete the current file or document from flash or SD card.

Press the **Enter Button** to delete the selected file from the list.

### **3. Paste**

Paste the files you have copied to a new location.


Highlight the item and press the **Enter Button** to paste the files to the current location.

#### **NOTE:**

It's impossible to paste files from internal memory to the SD card.

## Settings


Press the **Settings icon** to enter the **Settings** mode directly. In the **Settings** mode, the following settings can be performed.

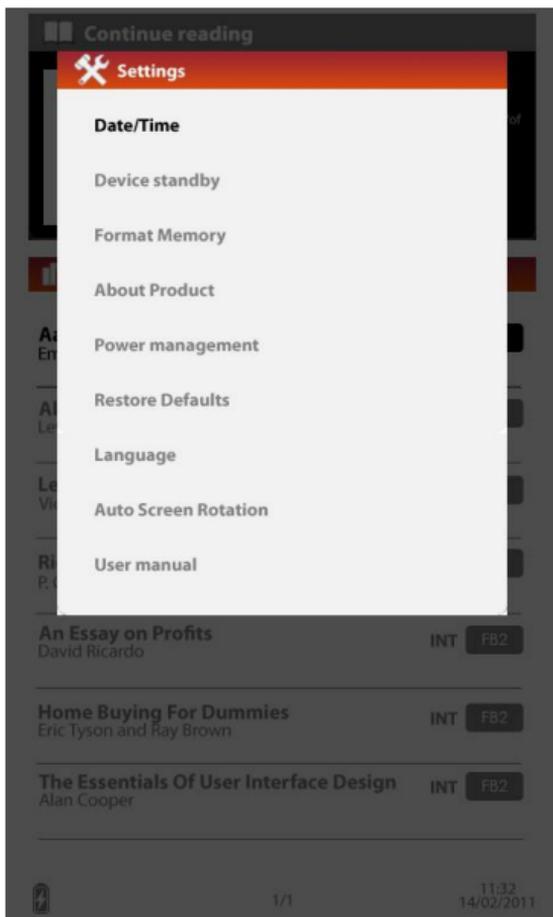

### **Date/Time**


Set the time and date displayed on the device.

Press the **Left/Right Button** to move the cursor. Press the **Up/Down Button** to adjust the value. Highlight **Apply** and press the **Enter Button** to confirm the option.

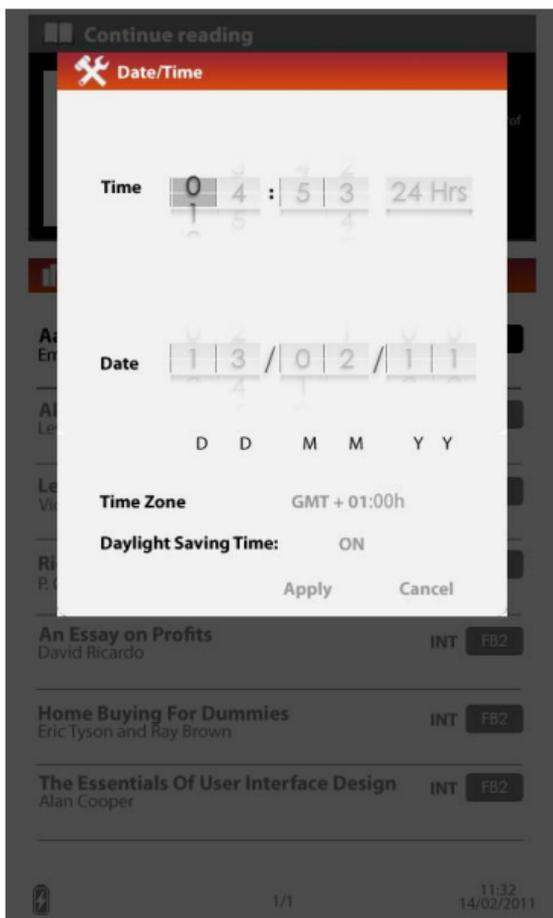

### **Device standby**

After a certain period of inactivity, the device will enter the sleep mode automatically. Press the **Directional Button** to set the time of non-working status to enter the sleep mode. Press the **Enter Button** to confirm. Select **Disable** to disable the function.

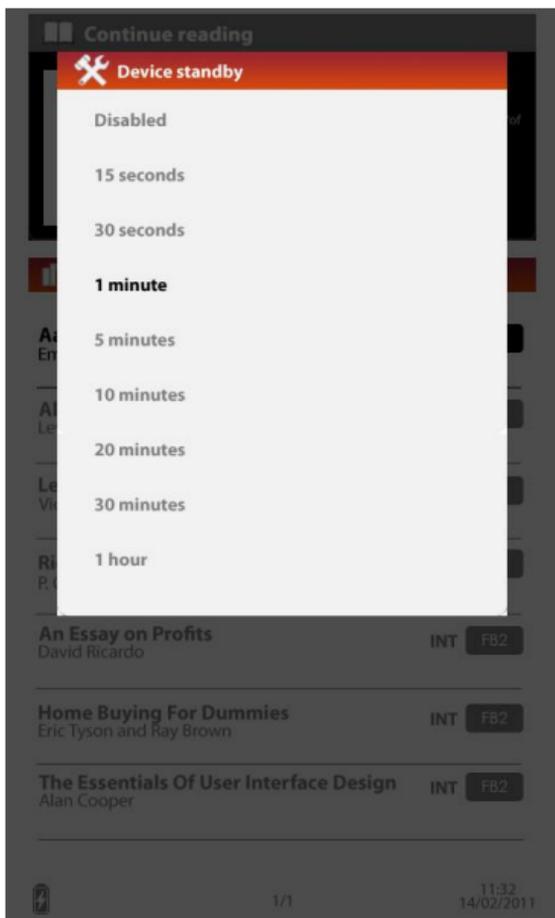


### **Format Memory**

**Noted:** Files will be deleted permanently once formatted.

Press the **Directional Button** to select Internal memory or SD Card and press the **Enter Button** to confirm.

### **About Product**

Display the Manufacturer, Firmware and model No. info of the device.

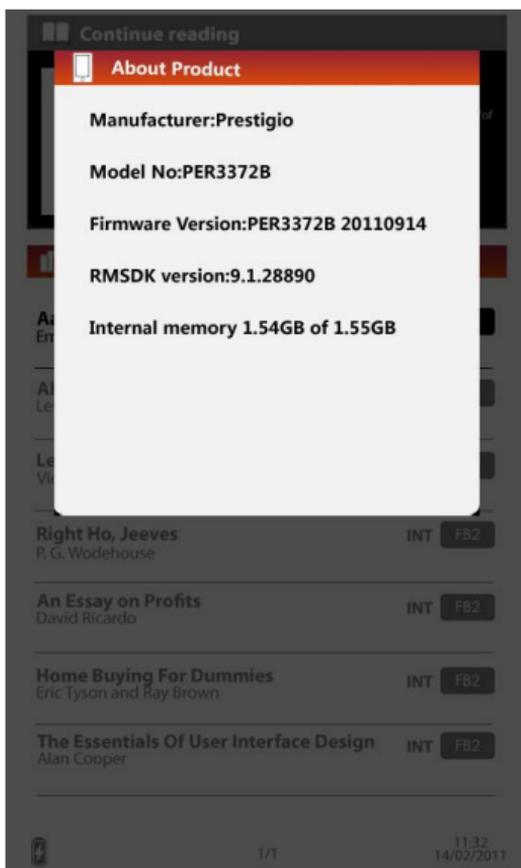

### **Power Management**

Display the current battery status.



### **Restore Defaults**

Restore the device to factory default settings. Files will be deleted permanently once factory default settings are restored. Press the **Directional Button** to highlight Restore and press the **Enter Button** to confirm.

### **Language**

Select the desired language from the available ones.

### **Auto Screen Rotation**

Select "On" or "OFF" of this function and press the **Enter Button** to confirm.

### **User Manual**

This PDF-format User Manual can be browsed on the device.

## Technical Specifications

<b>Display</b>	7" TFT
<b>Resolution</b>	800 x 480
<b>Supported File Formats</b>	<b>Book:</b> EPUB, PDF, TXT, FB2, PDB(palm format), HTML
	<b>Music:</b> MP3, ACC, WAV, OGG, WMA(WMA loseless not supported)
	<b>Picture:</b> JPG, GIF, BMP, PNG
	<b>Video:</b> MPEG-1, MPEG-2, MPEG-4(Xvid), Divx, H.263, H.264, RM/RMVB, MKV, MOV, VOB, FLV
<b>Adobe DRM</b>	EPUB/PDF with Adobe DRM, built-in Adobe Reader Mobile
<b>Expansion Slots</b>	micro SD card, up to 16GB
<b>Battery</b>	Built-in Li-on Polymer Battery, 2100 mAh
<b>Other Interfaces</b>	Micro USB2.0/3.5mm stereo audio jack
<b>Dimensions</b>	175.4 mm x 126.5 mm x 11.2mm (L x W x H)
<b>Weight</b>	260 g

## Technical Support and Warranty Information

Please refer to [www.prestigio.com](http://www.prestigio.com) for technical support and included warranty card for warranty information.

## Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.