


Getting Started

1 Packing List


- E-Book Reader
- USB Cable
- Quick Start Guide
- Carry Case
- Earphone
- Warranty Card

2 Unit View Description

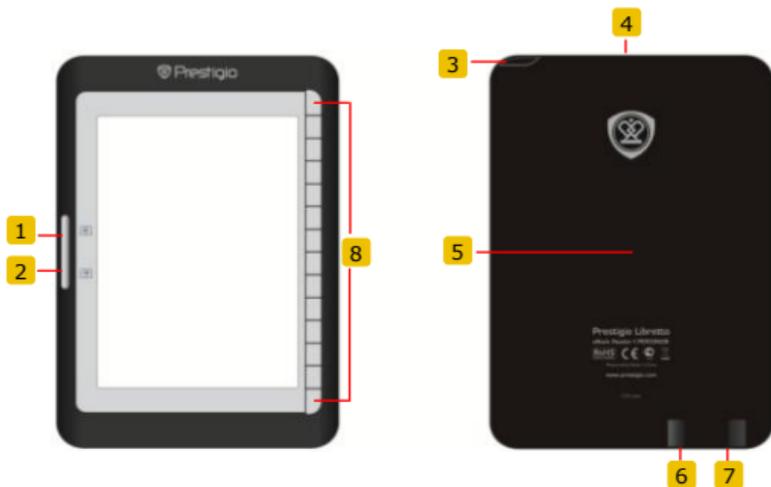

- | | | |
|----------|-------------------------|------------------------------|
| 1 | Page Jump Button | Skip to previous page |
| 2 | Page Jump Button | Skip to next page |
| 3 | Power Button | Turn on/off the device |
| 4 | SD Card Slot | Insert a SD card |
| 5 | Reset Button | Reset the device |
| 6 | mini USB Jack | Inserting mini USB connector |
| 7 | Headphone Jack | Connect the earphones |
| 8 | Function Button | Select/confirm the option |


3 Charging

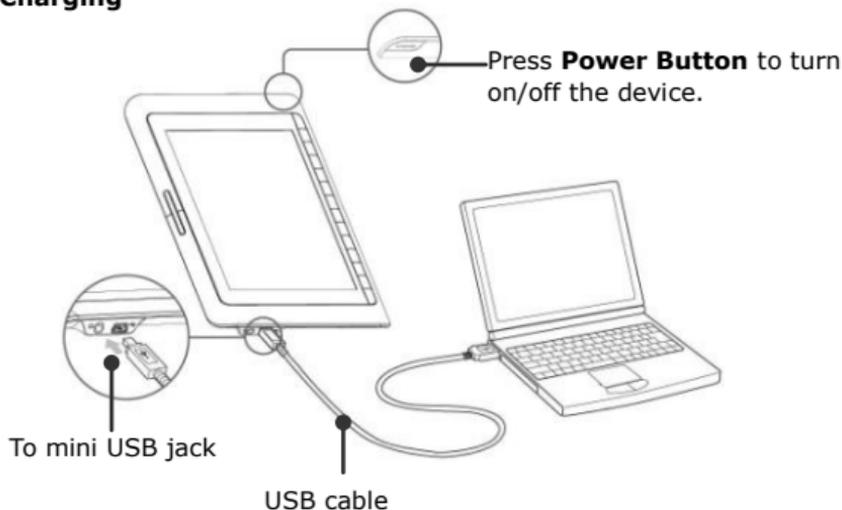

- Connect the PC/Notebook USB port and the device with the USB cable included to start charging.
- It is recommended to charge the device battery for 12 hours before the first time use. Normally, it takes approximately 8 hours to fully charge the device.

How to Get eBOOKs

1 Inserting a Memory Card

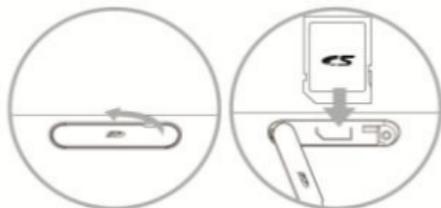

- Open the SD card slot cover and insert a SD card if available. Close the slot cover.
- The device supports SD card only. Be sure to insert the memory card correctly.

2 Installing Adobe Digital Edition (ADE)

1. Please download Adobe Digital Edition (ADE) online at the website: <http://www.adobe.com/products/digitaleditions>.
2. Install Adobe Digital Edition (ADE) on you PC/Notebook.
3. If you do not have an Adobe ID, create it by following the on-screen instructions.

3 Download eBooks from an online E-Book store to your

PC/Notebook.

1. Authorize your PC/Notebook to download eBooks from an e-Book store.
2. Authorize the device to transfer and read downloaded eBooks on the device.
3. Download eBooks in Adobe PDF or EPUB formats to your PC/Notebook and transfer them to the device.

4 Transfer Content to the device connected with your

PC/Notebook.


1. Connect the device to your PC/Notebook using the USB cable.
2. Select the content you want to transfer from your PC/Notebook.
3. Drag the content from the PC/Notebook to the device.
4. Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
5. Left click on  to disconnect the device and PC/Notebook safely.

NOTE:

Content can also be transferred to a micro SD card on the device.

Reading BOOKs

From the Main Menu, press the function button to select **Books** mode.

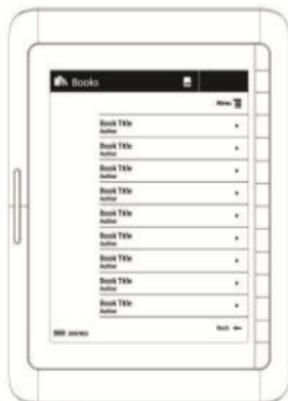

- Press the function button to select the desired book in the **Books** list.
- To turn pages, press **Page Button**.
- Press ← to return to previous option.