



Basic Operations



Press and hold **Power Button** to turn on the device. It will automatically enter the main menu on **Home** screen after the start-up screen. The main menu includes **Books, Music, Photos, Bookmarks, Favorites, History, File Explorer, Settings, and User Manual**. Press the function button to enter the desired mode directly.  is displayed on top of the screen when SD card is inserted. Press  to refresh screen display.



Books

The device supports 16 types of file formats, including PDF, CHM, EPUB, TXT, HTM, HTML, RTF, PDB, DJVU, DJV, iw44, iw4, FB2, PRC, MOBI, and TCR.

Book Submenu

Press the function button to enter **Books** mode. Booklist is displayed (Default Settings). Press  to return to **Main Menu**. Press  to enter **Books** submenu detailed as follows.



- | | |
|------------------------------|--------------------------------------|
| 1. Refresh | Refresh screen display. |
| 2. Display Mode | File list is sorted by display mode. |
| 3. Display Book Cover | File list is sorted by thumbnail. |
| 4. Sort by Name | File list is sorted by title. |
| 5. Sort by Author | Book list is sorted by author. |
| 6. Sort by Type | File list is sorted by category. |

7. My favorites


Press the function button to enter **Favorites** mode. Press  to enter submenu. Press  to exit **Favorites** submenu.

NOTE:

Please refer to **Favorites Mode** for more detailed instructions.





8. Add to Favorites

Add desired files to **My Favorites**.

Press the function button to select desired file(s) and press **confirm**  to confirm the option. Press the function button again to cancel selection.


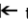


9. Go to page

Skip to desired page.

- Press the function button to input character(s) and press  to confirm option. Press  to backspace or press  to exit **Go to page** submenu.
- Press  to toggle input methods. Press the function button to confirm option.

10. Search

Search for a desired item.

- Press the function button to input character(s) and press  to confirm option. Press  to backspace or press  to exit **Search** submenu.
- Press  to toggle input methods. Press the function button to select input methods.
- Search result will be displayed. Press **Page Jump Buttons** to turn pages if available. Press the function button to open the desired file. Press **New Search** to restart search or press **Back** to exit **Search** menu.



11. Music

Please refer to **Music Mode**.

12. Return Button

Press the function button to return to previous option.

Reading Books

1. Booklist is displayed (Default Settings). Press **Page Jump Buttons** to turn pages. Press the function button to open the desired file.
2. During reading, press **Page Jump Buttons** to turn the page. Press  to enter submenu detailed as follows. Press  to exit submenu.

Refresh Refresh screen display.

Dictionary Not available.

View bookmarks Browser bookmarks if available.


Add bookmark Press the function button to save the address of the current page.

Music Please refer to **Music Mode** for more detail instructions about **Music** function.

Reflow Page fits the screen size. It's only available with files in PDF formats.

Go to page Please refer to **Book/9. Go to page** for more detail instructions.

Rotate Screen orientation can be set to vertical/horizontal manually. Press the function button to toggle between the two modes.

Zoom Press the function button to zoom in/out the contents on screen. 5 zooming circles are available. Press  to move to the desired part.

Settings Please refer to **Books/Reading Books/3. Settings menu**.

Search Search for a desired character/keyword.

View Contents The book index information is displayed.

3. Settings menu

From the submenu, Press the function button to enter **Settings menu** detailed as follows.

NOTE:

It's unavailable with files in PDF and DJVU formats.



Font	Set up the current font. Microsoft Yahei, Arial, Courier, Times , and ARIALN are available. Press the function button to confirm option.
Encode	Select corresponding code when random characters are displayed. The function is unavailable with files in PDF and DJVU formats.
Margins	Set up space to the left/right side of the text. 2 margin spacing cycles are available.
Line spacing	Set up space between lines in text.
Hyphenation	Toggle word division between hyphenation and justification.
Bold	Display the characters in bold type.
Italic	Display the characters in italic type.
Book info	Display technical information of the current book.



Music

Press the function button to enter **Music** mode. The playlists is displayed. Music files saved on micro SD card are also displayed in the list. The device supports MP3 (32kbps-384kbps) files format only.


Music Submenu

Press  to enter **Music** submenu detailed as follows. Press  to exit **Music** submenu.

My Favorites

Favorite music files are displayed if added.
Please refer to ***Favorites Mode*** for more detailed instructions.

Add to Favorites

Add the desired music files to **My Favorites**.
Press the function button to select desired file(s) and press **confirm**  to confirm the option. Press the function button again to cancel selection.

Go to page

Skip to the desired page. Please refer to **Book/9. Go to page** for more detail instructions.










Search

Search for a desired item. Please refer to **Book/10. Search** for more detailed instructions.


Music Playback


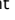
Press the function button to play the desired track. On the playback screen, the following operations can be performed.



1. Press  /  to adjust the volume level.
2. Press  to disable the sound. Press it again to resume the sound.
3. Press  (**Random**),  (**Loop**), and  (**Repeat Once**) to select cycle mode.
4. Press  to play/pause the playback. Press  to stop playback. Press **Page Jump Buttons** to skip to previous/next track.
5. Press  to return to **Playlists** screen.
6. Brief information of the file is displayed on the screen.

Background Music Mode

The function allows to read books or view photos while playing a track. During music playback, press  to enter **Background Music Mode**, in which you can use the device with playing music.


To exit the mode, press the function button to enter **Music Mode**, and then press  to enter current playback screen. Press  to stop/pause the playback.



Photos

Press the function button to enter **Photos** mode. Photos saved on SD card are also displayed in the list. The device supports picture formats such as TIFF, JPEG, GIF, BMP, and PNG.

Photos Submenu

Press  to enter **Photos** submenu detailed as follows.

1. My Favorites


Press the function button to enter **Favorites Mode**. Press  to enter submenu. Press  to exit **Favorites** submenu.

NOTE:

Please refer to **Favorites Mode** for more detailed instructions.

2. Add to Favorites

Add the desired photo files to **My Favorites**.

Press the function button to select desired file(s) and press **confirm**  to confirm the option. Press the function button again to cancel selection.

3. Go to Page

Skip to the desired page.

Please refer to **Book/9. Go to page** for more detailed instructions.

4. Search

Search for a desired item.

Please refer to **Book/10. Search** for more detail instructions.

5. Thumbnails

Display photos by thumbnail.

Press **View in List** to display photos by file name.

6. Music

Please refer to **Music Mode** for more detailed instructions.

Viewing Photos

Press the function button to view file. The following operations can be performed.



- Press **Zoom Button** to zoom in/out the contents on the screen.
- Press **←/↑/↓/→** to move to the desired part.
- Screen orientation can be set to portrait / landscape manually. Press **⌂** to activate the function.
- Press **⬅** to exit photo playback.





Bookmarks

All bookmarks are displayed on the screen. Numbers/titles/bookmarks are displayed in the list.

NOTE:

The function is only available with book(s) containing bookmark(s).



- Press **Page Jump Buttons** to turn the page. Press  to return to the previous option.
- Press the function button to browse bookmarks. Press  to enter the submenu.


NOTE:

Please refer to **Book/Book Submenu** for more detailed instructions about the submenu.



Favorites



All favorite files (books, music, and photos) are displayed. From **Favorites** list, press  to enter the submenu detailed as follows. Press  to exit **Favorites** menu.

Delete	Delete file(s) from Favorites . Press the function button to select desired book and press confirm  to confirm the option. Press the function button again to cancel selection.
Go to Page	Skip to the desired page. Please refer to Book/9. Go to page for more detailed instructions.
Search	Please refer to Book/10. Search for more detail instructions about Search function.
Music	Please refer to Music Mode for more detailed instructions about Music function.

Press the function button to open a favorite book/music/photo file.



History

Books viewed on flash or SD card are displayed on the screen. Press  to enter the submenu detailed as follows. Press  to exit the submenu.


Delete Delete file(s) from **Recent Books** list.

Add to Favorites Add file(s) to **Favorites**.

Go to page Skip to the desired page.

Search Search for an item.

Music Enter music playlists.

- Press **Page Jump Buttons** to turn pages. Press the function button to open the file. When reading a book, press  to enter the submenu.

NOTE:

Please refer to **Book/Book Submenu** for more detailed instructions about submenu.



- Files saved on the SD card can not be browsed if the SD card is removed.



File Explorer


Select a file from **Internal Memory** or **SD Card** and press the function button to enter. All files on flash or SD Card are in the list.

Press the function button to open the desired file or press **Page Jump Buttons** to turn pages.

From the **File Explorer** list, press  to enter **File Explorer** submenu detailed as follows. Press  to exit **File Explorer** submenu.


1. Cut

Move a document or file to other file folders.

Press the function button to select desired files and press **confirm**  to confirm the option. Press the function button again to cancel selection.


2. Copy

Copy a document or file to other file folders.

Press the function button to select desired files and press **confirm**  to confirm the option. Press the function button again to cancel selection.


3. Paste

Paste the files you have removed or copied to a new place.

Press the function button to select a place and then press  to enter submenu. Press the function button to paste the files you have removed or copied to the current place.

4. Delete

Delete current file from flash or SD card.

Press the function button to select desired files and press **confirm**  to confirm the option. Press the function button again to cancel selection.

5. Add to Favorites

Add desired files to **Favorites**.

Press the function button to select desired file(s) and press **confirm**✓ to confirm the option. Press the function button again to cancel selection.

6. Go to Page

Skip to the desired page.

7. New Folder

Create a new folder in the current place. Input characters to create a new folder name.

8. Search

Search for a desired item.

Please refer to **Book/10. Search** for more detailed instructions about **Search** function.


9. Music

Enter music play lists.

Please refer to **Book/11. Music** for more detailed instructions about the function.



Settings

From the main menu, Press the function button to enter **Settings** menu. Press  to return to previous option. In the **Settings** menu, the following settings can be performed.

- **Device Settings**

Device Name Set device name.

Language Select desired language. 19 kinds of languages are available.

Font Type Select the font size.


- **Auto Shutdown Settings**

Shut down the device to minimize the power consumption of the battery. Select the shut down time and press the function button to activate the function. Available options are **10 minutes**, **20 minutes**, and **30 minutes**. Select **Disable** to disable the function.

- **About Product**

Display the technical information of the device.

- **Restore Factory Settings**

Press the function button to restore the device to factory default settings. Press  to cancel.

NOTE:


Files will be deleted permanently once factory default settings are restored.



User Manual

This PDF-format User Manual can be browsed on the device.

From main menu, press the function button to browse this **User Manual** using the device.

Press **Page Jump Buttons** to turn pages. Press  to return to main menu.

Technical Specifications

Display	6"
Resolution	800 x 600, 16 Grey scale
Supported File Format	Book: PDF, CHM, EPUB, TXT, HTM, HTML, RTF, PDB, DJVU, DJV, iw44, iw4, FB2, PRC, MOBI, TCR Music: MP3 (32kbps-384kbps) Photo: JPEG, GIF, BMP, PNG, TIFF
Storage Temperature	-20°C ~ 60°C
Operating Temperature	0°C ~ 45°C
Expansion Slots	SD card, up to 8GB
Battery	Built-in Lithium Battery, 1700 mAh
Other Interfaces	USB2.0/3.5mm stereo audio jack
Dimensions	178 mm x 128.4 mm x 9.9 mm (L x W x H)
Weight	228 g

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.