 


Basic Operations


Press and hold the **Power Button** to turn on the device. It will automatically enter the main menu on **Home** screen after the start-up screen. The main menu includes **Internal Storage, SD Card, Books, History, Dictionary, Pictures, Music, Settings** and **Applications**. Press the **Navigation Button** and **OK Button** to move to the desired function and to confirm the option.

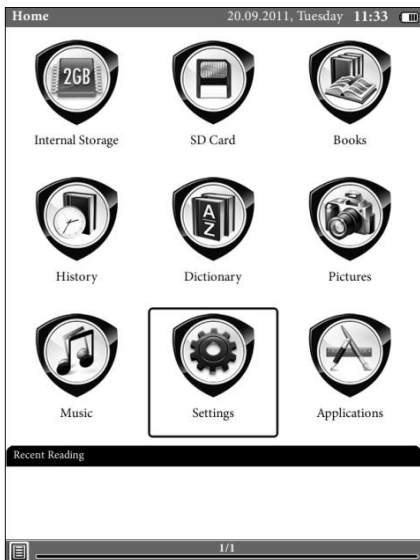



Internal Storage

Select the Internal storage icon, all of the files saved in it are displayed.

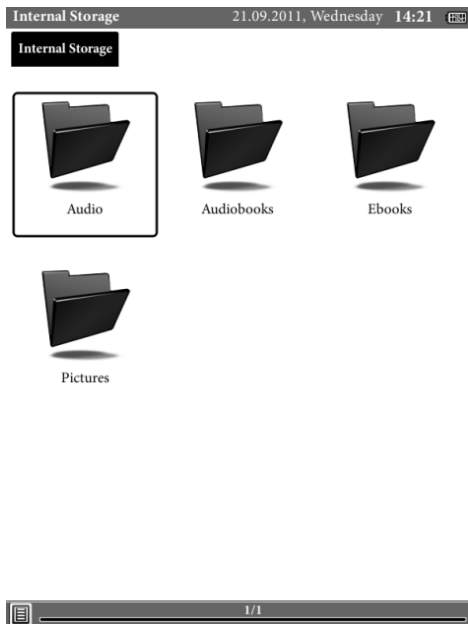 



SD Card

Select the SD Card icon, all of the items stored in SD card are displayed.



 


Books

The device supports 9 types of file formats, including EPUB, PDF, FB2, MOBIPOCKET, TXT, PDB, HTML, CHM, and DJVU.

Books Menu


In the **Books** list, press the **Menu Button** to enter **Books Menu**. Press the **Navigation Button** to select the option and to confirm. Press the **BACK Button** to exit.

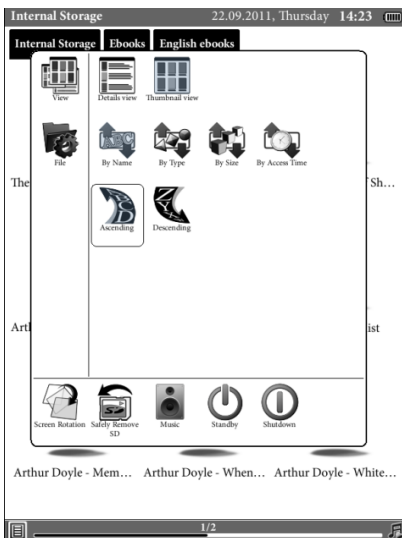


View	Details view and thumbnail view.
Sorting types	Sort by Name, by Type, by Size, by Access Time, by Ascending, by Descending.
Search	Search for a desired keyword. Input the word and press the Navigation Button to start the search.
Files	The files can be renamed, copied, cut and deleted

Reading a Book

 Press the **Direction Button** to select the desired book and to start reading. Press the **PREV/NEXT PAGE Buttons** to turn pages. Press the **BACK Button** to exit the reading. Press the **MENU Button** to enter the submenu with detailed as follows.

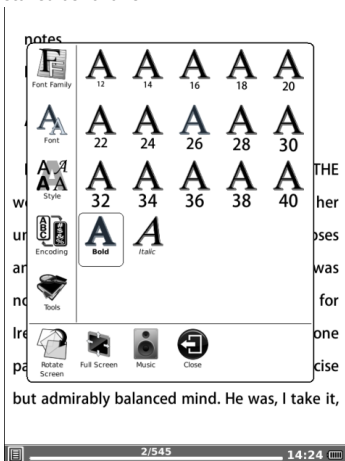

 
Font Family: Select the desired font family.

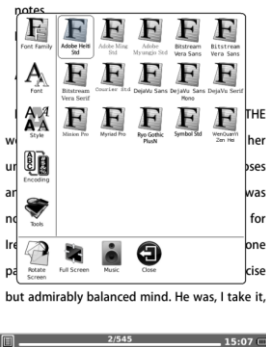


Font: Adjust the font by ratio or by Numbers, select Bold/Italic.




 Style: Select the line spacing while viewing documents.

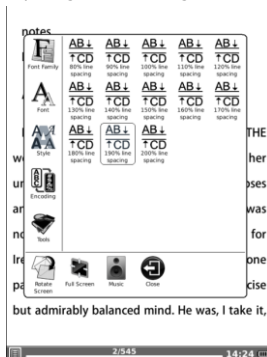

  Encoding: Configure the encoding type while viewing text-based document.

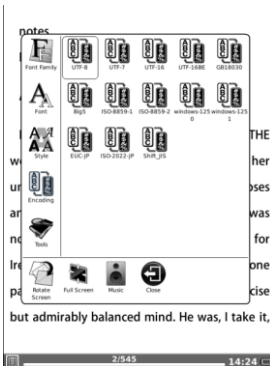

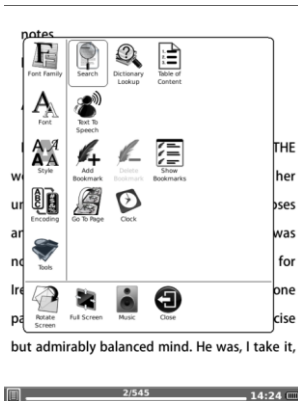
Tools:


Search	Input the key words to search desired info
Dictionary look-up	Refer to the dictionary instruction
Bookmark	Add bookmark, delete and show all the bookmarks
Go to page	Flip to the desired page
Clock	Show the current time and reading time, same function as in other options.



History

 All the recent read documents are displayed. Press the **Clear All Button** to delete all the files under this button.

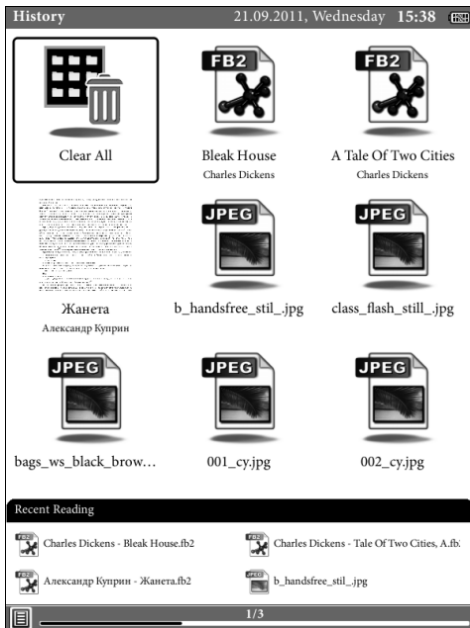



Dictionary

StarDict compatible programs are available for the device. It supports dictionary format in StarDict.

Installing Dictionaries

Download the dictionary from <http://xdxf.revdanica.com/download/>, follow the notice to download the dictionary you want accordingly.

Eg: You can submit data:

From: English

To: Russian

Submitted by: Any

Download format: StarDict to the web page.

Create a new folder named **dicts** in root directory of the SD card. Unzip the downloaded dictionary and put it into SD Card's "dicts" folder. There are 3 files (.dict.dz, idx, ifo) in each dictionary folder.






NOTE:

There's no dictionary pre-installed on the device.

Dictionary look-up

Main page of the dictionary and input the words by software keyboard.





	Dictionaries list: select the dictionary you want to use
	Similar words: check the similar words and their meaning
	Searching: after you input the word, please click it for searching
	Explanation: check words meaning
	Voice

Use Dictionary while reading files:

While reading, press Menu-tools-Dictionary look-up to use the installed dictionaries. Follow the below steps:

1. Select "Retrieve words"
2. Press OK
3. Press down button to start selecting the word, then move Navigation keys to select words
4. Press OK for words explanation

  
Note: PDF file can not retrieve words.

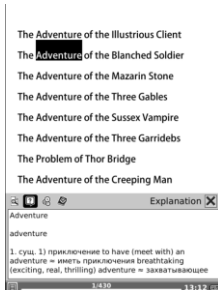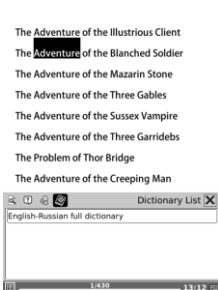



Pictures

 The device supports picture formats such as TIFF, JPEG, GIF, BMP, and PNG. Press **the Menu Button** to enter the **Pictures Menu**. Press the **Navigation Button** to select the option and to confirm. Press the **BACK Button** to exit.

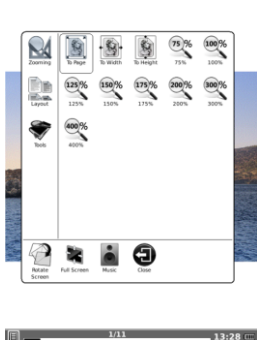

Zooming:

Adjust the size of the picture to page, to width, to height or by ratio.

Layout:

There are three ways of display: single page, scroll page and thumbnail view.



Tools:

There are four tools available for choice.

**Set Boot Splash:**

Select desired picture to be start-up screen.

Slide show:

Display the pictures in this way and set the interval time between slides.

Clock:

Display the current time and record your reading time.












Music

The device supports MP3 and WAV files formats.












	Repeat all once
	Repeat one audio
	Shuffle mode
	Turn to previous song
	Turn to next song
	Minimize the music player, the playing song can be background music
	Exit from the music menu



Settings




Press the **Settings Button** to enter the **Settings** mode directly. In the **Settings** mode, the following settings can be performed.

	Language Press to select desired language from available ones.
	Date Set the current date(year, month, day) and time(hour, minute, second) of device.
	Default Font Press to select desired font family from available ones.
	Preferred Applications Pdf Reader and FB Reader are available options.
	Startup Setting
	Screen update Set the screen fresh time and preferred option(by speed/quality)
	Format flash Select it and format the internal flash. Note: after doing this operation all of the data in internal storage would be removed.
	Time zone Settings Select desired time zone.
	About FW info and Memory usage are displayed.



Applications

Press the Applications button to select desired option. There are three applications available: Calculator, Calendar and Clock.

	Calculator
	Calendar Press the Navigation Button and the PREV/NEXT PAGE Buttons to turn to desired date. Press the BACK Button to exit.
	Clock Display the current time in full screen.



11:48

Thu Sep 22 2011

Technical Specifications

Display	6"
Resolution	800 x 600, 16 Grey scale
Supported File Formats	Book: TXT, HTML, EPUB, CHM, PDB, MOBIPOCKET, FB2, DJVU, and PDF.
	Music: MP3
	Picture: JPG, BMP, GIF, PNG, TIFF
Adobe DRM	DRM for EPUB/PDF, built-in Adobe Reader Mobile
Expansion Slots	SDHC up to 32GB
Battery	Li-on Polymer Battery (1600mAh)
Other Interfaces	Mini USB2.0/3.5mm stereo audio jack
Dimensions	197 mm x 124 mm x 11.3 mm (L x W x H)
Weight	278 g

NOTE:

Under direct sunlight or in low temperatures, the characters displayed on the screen may fade. Please press "Refresh" button to refresh the entire screen.

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.