


## Packing List

- |   |                         |   |               |
|---|-------------------------|---|---------------|
| 1 | E-Book Reader Main Unit | 2 | Leather Case  |
| 3 | Earphone                | 4 | USB Cable     |
| 5 | Quick Start Guide       | 6 | Warranty Card |

## Unit View Description

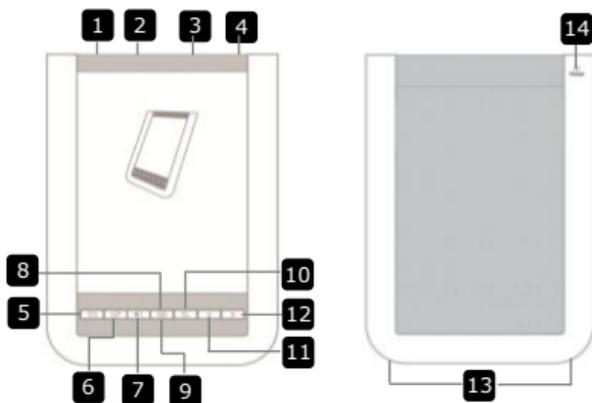

- |           |                             |                                     |
|-----------|-----------------------------|-------------------------------------|
| <b>1</b>  | <b>Power Switch</b>         | Turn on/off the device              |
| <b>2</b>  | <b>USB Jack</b>             | Connect the USB cable               |
| <b>3</b>  | <b>micro SD Card Slot</b>   | Insert micro SD card (not included) |
| <b>4</b>  | <b>Headphone Jack</b>       | Connect to headphone                |
| <b>5</b>  | <b>Return/Cancel Button</b> | Return to previous menu or cancel   |
| <b>6</b>  | <b>Refresh Button</b>       | Refresh screen display              |
| <b>7</b>  | <b>Volume Button</b>        | Display the volume control bar      |
| <b>8</b>  | <b>Submenu Button</b>       | Enter submenu                       |
| <b>9</b>  | <b>Indicator</b>            | Flashes when tap action is detected |
| <b>10</b> | <b>Search Button</b>        | Search for a desired keyword        |
| <b>11</b> | <b>Previous Page Button</b> | Return to previous page/Volume down |
| <b>12</b> | <b>Next Page Button</b>     | Skip to next page/Volume up         |
| <b>13</b> | <b>Speaker</b>              | Sound Output                        |
| <b>14</b> | <b>Reset Button</b>         | Reset device to default setting     |

## Getting Started

### Charging

1. Insert USB connector to PC/notebook.
2. Insert micro USB connector into the micro USB port on the device to start charging.
3.  will be displayed if properly connected.  will be displayed when the battery is fully charged.
4. Retract the USB cable and the power adapter after use.

#### NOTE:

- It is recommended to charge the device battery for 8 hours before the first use.
- Normally it takes approximately 4 hours to fully charge the device.
- Recharge the device as soon as possible when the battery is in low-power level shown as / .

### Power On / Power Off

- Slide and hold  for 5 seconds to turn on the device. The start-up screen will be displayed before entering the main menu on the **Home** screen.
- Slide the power switch  and tap on  to turn off the device.

#### NOTE:

Tap on  to enter **Sleep Mode**. Tap on  to cancel.

### Sleep Mode



1. Slide  and tap on  to enter **Sleep Mode**.
2. Slide  again to exit the mode.

#### NOTE:

The device will automatically enter **Sleep Mode** if it remains idle for 3 minutes after the **Screen Saver** mode.



Do not leave the device in **Sleep Mode** for more than 2 weeks to avoid any damage to the device.

### Restoring to Factory Default Settings

- Reset the device by pressing **Reset Button** when the device fails to start up or function properly.

### Using a micro SD Card (Not Included)



- Insert the micro SD card into the micro SD card slot.
- The device supports micro SD card and micro SDHC card only.



- Connect the device and notebook or PC with the included USB cable.
- Tap on  when prompted to use the device as a mass storage or tap on  to cancel.

 
#### **NOTE:**

Inserting micro SD card also activates the mass storage device.


### Using the Touch Screen



- Gently tap on the screen to select an option or to perform a function.



 - Tap and drag on the screen to scroll up/down.



- Tap and drag on the screen to turn pages.

### Using the On-Screen Keypad



- Tap on  to toggle between upper/lower cases.
- Tap on  to toggle among letter/number/symbol input methods.
- Tap on  to delete a letter.

## Basic Operations


Hold and slide  for 5 seconds to turn on the device. It will automatically enter the main menu on **Home** screen after the start-up screen. The main menu includes **Book list, Audio, Bookmark, Internet, Image, Settings** and **Shortcut**. Tap on the icon at the main menu to enter the desired mode. Press  to return to the previous option.

- Books viewed in the past will be displayed at the bottom of the screen. Tap on  to confirm selection.



### Book list

- Tap on  at main menu to enter **Book list** mode. Please refer to below diagram for detailed function description:

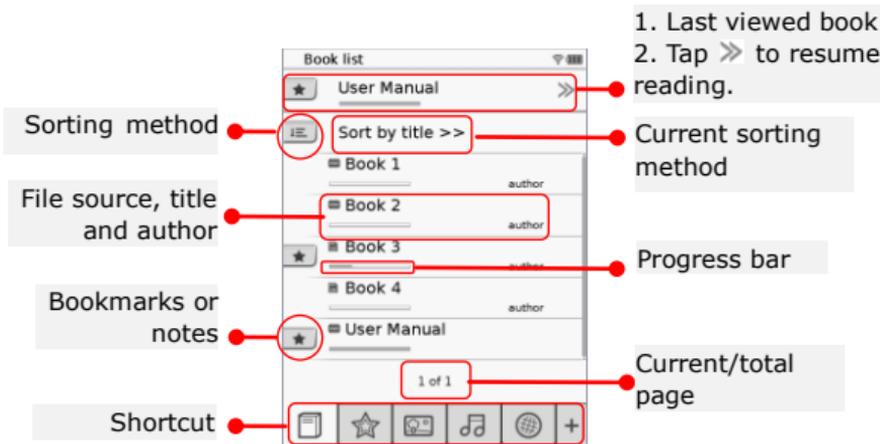

#### NOTE:

- Book saved on micro SD card will be displayed in the list. The device supports the following formats: .PDF, .HTML, .TXT, .FB2, and .EPUB.
- Tap on  to display/hide the shortcut. Tap on the desired option on the shortcut to enter the mode directly.

-  is only displayed when bookmark or note is added.
- Tap on  to select sorting method. The book list can be sorted by **download date/title/author/publication date**.
- Tap on the book title to open the file. Tap on  to enter full screen mode and press  to return to normal mode. Press / or tap and drag on the screen to turn pages.
- Tap on / to zoom in/out the contents on screen. Tap on //>/< to move to desired part. Tap on  to change to full screen mode. Tap on  to return to the original size.
- During text playback, press  to enter the submenu. Press  to exit submenu directly. Each icon functions as follows.



Tap on the icon to add notes. The page will be marked as  once notes are added. Tap on  /  to confirm/cancel the input.

**NOTE:**

Tap on  to open the note edit box on the page. Tap on  to modify the note and tap on  to confirm the option. Tap on  to delete the note and tap on  to confirm the selection.



Tap on the icon to add a bookmark on the page. The page will be marked as  if the bookmark is added. Tap on  to delete the bookmark.



Tap on the icon to browse bookmarks/notes. Tap on  to select sorting method.



Tap on  to activate the **Power Saving** mode.  will be displayed at the right top corner of the screen. Tap on  to exit the mode.

**NOTE:**

-  and  functions are unavailable in Power Saving mode.
- Auto-orientation is not available in **Power Saving** mode.
- The function is unavailable when the device is connected to computer /Wi-Fi network.



Tap on  to skip to content table. Press / to turn pages if available. Tap on the option to start reading the text.

**NOTE:**

- The function is available only when the content table is in the form of hyperlink.



Tap on the icon to display the book information.



Tap on  to select desired reading mode.  (book mode),  (continuous page mode) and  (outline mode) are available.



Tap on the icon to go to the desired page.

- Press  to search for a desired word. Tap on the keypad to input characters. Tap on / to confirm/cancel the option. Press / to turn pages if available.



## Bookmark

- Tap on the icon to enter **Bookmark** mode. All marks will be displayed on screen.

### NOTE:

The function is only available with book(s) containing bookmark(s) or note(s).



1. Numbers of bookmarks and notes added to the book are displayed in the list.

2. Tap on  to select sorting method. All marks can be sorted by **download date/title/author/publication date**.

3. Tap on the desired item to enter the list with bookmarks/notes.

4. Contents of notes/bookmarks added to the page will be displayed.



5. Tap on  to select sorting method. The booklist can be sorted as **Show bookmarks by page/Show note/Show all items**.

6. Tap on the desired item to enter the page.



## Image

- Tap on the icon to enter **Image** mode. Image list will be displayed on screen. Press / to turn pages if available.

### NOTE:

Photos saved on micro SD card will be displayed in the list. The device supports only the following picture formats: .JPEG, .PNG and .BMP. All other file formats will not be displayed on purpose.



- Tap on to select sorting method. The image list can be sorted by **Filename** and **Time**.
- Tap on to enter slide show settings detailed as follows.
  - Tap on to set up slide show interval time.
  - Tap on  to enable slide show repetition and background music.
  - Tap on to select an audio file as the background music.
  - Tap on to confirm the option and exit settings.
- During images playback in full screen, press to enter submenu. Tap on / to zoom the image in/out. Tap on /// to move to the desired part. Tap on to enter slide show.





## Audio

- Tap on the icon to enter **Audio** mode. The audio file list will be displayed. Press / to turn pages if available.

### NOTE:

Audio files saved on micro SD card will be displayed in the list. The device supports .MP3 audio formats only.



- Tap on the file to enter audio playback.  will be displayed during playback.
- Tap on  to select sorting method. The file list can be sorted by **Filename** and **Time**.
- Tap on / to disable/resume the sound. Tap on / to adjust the volume.
- Tap on / to select desired audio file. Tap on  to start playback. Tap on / to stop/pause the playback.
- Tap on / to select playback mode. Tap on / to disable/enable playback in random order. Tap on / to select cycle mode.

- **Power Saving** function is unavailable during audio playback.



## Internet

1. Tap on the icon to enter **Internet** mode. Tap on  to enable Wi-Fi if the Wi-Fi function is off. It will automatically enter Wi-Fi settings interface as following.



- The available Wi-Fi connection will be displayed in the list.
- Tap on  to refresh. Tap on  to enter network settings.  and  represent encryption and signal strength respectively. Tap on  to disable the Wi-Fi function.
- Tap on the desired network to connect to Internet. Tap on  if the desired network is not in the list.



- Tap on the on-screen keypad to enter **Name** and **Password**. Tap on  to confirm option or  to cancel.
- Tap on  to select the encryption type of the Wi-Fi function.
- Tap on  at right bottom corner of the screen to confirm the Wi-Fi settings.
- The desired network will be displayed in the list after a successful search. Tap on the desired network to connect to Internet.

2. **DHCP** and **Static** network settings are available with the device. Tap on  to set up the desired network as follows.



1. Select  to search for an IP address from the DHCP server.
- Tap on  to connect to Internet automatically.
- Tap on  to save settings. Tap on  to confirm connection. Tap on  to refresh. Tap on  to exit settings.



2. Select **Static** to search for Static IP address. Tap on the keypad to enter required parameters. Tap on  to confirm the input.
  - Tap on  **Auto Connect** to connect to Internet automatically.
  - Tap on  to save settings. Tap on  to confirm connection. Tap on  to refresh. Tap on  to exit settings.

3. Tap on keypad to enter the password if the network is encrypted. Tap on  to confirm the option.
4. After successful connection,  will be displayed in the list and  will be displayed in the right top corner of screen.
5. Tap on  to enter **Internet** mode. The default web site list will be displayed. Visit a web site directly or enter a URL for a web site. Tap on the keypad to enter web site and tap on  to confirm the option. It will automatically connect to the web site.
6. To browse a web page perform the following actions:



- Tap and drag on the bar to scroll up/down/right/left.
  - Tap on **Back / Forward** to skip to previous/next web page. Tap on **Stop / Reload** to stop/reload the web page. Tap on **Zoom in/Zoom out** to zoom in/out the content of screen.
  - Tap on the address bar to display the keypad and tap on the keypad to input web address.
  - Tap on the hyperlinks directly on web page.
7. The downloaded files will be stored and rearranged accordingly under **Book list/Image/Audio** modes.



## Settings

Tap on  to enter the mode. Tap on the option to enter the settings.

- **Orientation**

The orientation of the device can be set up as **Auto**, **Portrait** and **Landscape**.

- **Wi-Fi Settings**

Please refer to **Internet** mode for more detail.

- **Language**

Tap on the option to select desired language.

- **Current date and time**

Tap on // to set up **Time zone/Date/Time**. Tap on / to adjust the values. Tap on / to save/cancel the settings.

- **Screen Saver**

The device will automatically enter **Screen Saver Mode** if it remains idle for a certain period of time. Tap on the screen to exit the mode. **5 minutes**, **10 minutes** and **30 minutes** options are available. Tap on  to enable/disable the mode.

- **Power Saving**

Tap on  to enable/disable power saving function.

- **Advanced Settings**

**FW upgrade**, **Restore Defaults** and **Restore Defaults and Clear User Data** are available.

- **Device info**

Tap on the option to display the technical information of the device.

## Technical Support and Warranty Information

Please refer to [www.prestigio.com](http://www.prestigio.com) for technical support and included warranty card for warranty information.

## Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.

## Specification

<b>Display</b>	6" inch E-Ink Capacitive Touch Display
<b>Screen Size</b>	SVGA 800 X 600 Pixels
<b>File Formats</b>	<b>Book:</b> HTML, TXT, EPUB, PDF(with Adobe DRM Mobile 9), FB2
<b>Storage memory</b>	<b>Audio:</b> MP3
<b>Sensor</b>	<b>Photo:</b> JPEG, BMP, PNG
<b>Grey Level</b>	<b>RAM:</b> Mobile DDR 128MB
<b>Power Supply</b>	<b>Internal Memory:</b> Nand Flash 2GB supports Micro SD/Micro SDHC
<b>Battery</b>	3 Direction Tilt Sensor
<b>Dimensions</b>	16 Grey Level
<b>Weight</b>	USB power
	Built-in Lithium Battery, 1530 mAh
	170 mm x 124 mm x 8.8 mm (approx)
	240 g (approx)