


Getting Started

1. Packing List

- | | |
|----------------------------|------------------|
| 1. E-Book Reader Main Unit | 2. USB Cable |
| 3. Earphone | 4. Carry Case |
| 5. Quick Start Guide | 6. Warranty Card |

2. Device Overview

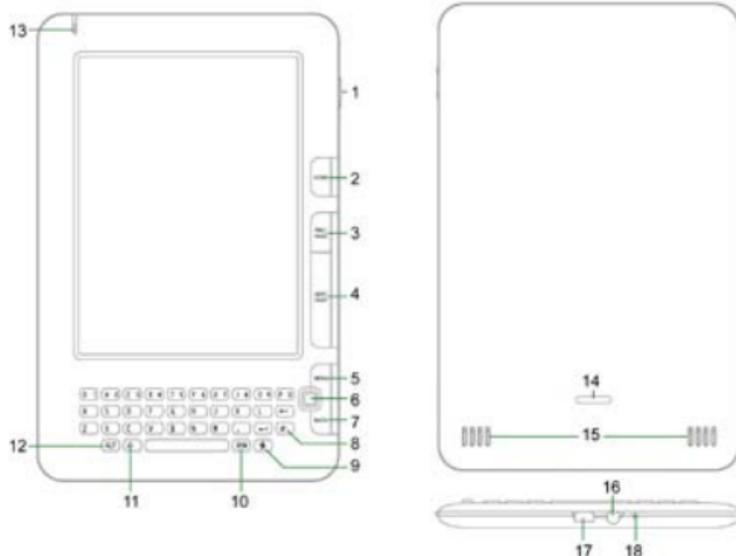

- | | | |
|----------|--------------------------|---|
| 1 | Power Button | Turn on/off the device; Suspend/Activate the device |
| 2 | Home | Return to main menu |
| 3 | PREV PAGE | Turn to the previous page |
| 4 | NEXT PAGE | Skip to next page |
| 5 | MENU | Enter option menu |
| 6 | Navigation Button | Navigate through all options |

7	BACK Button	Return to the previous option
8	Refresh Button	Refresh
9	Settings Button	Turn to Settings mode directly
10	Symbol Button	Enter the keypad of special symbols
11	Shift Button	Toggle between uppercase and lowercase letters input methods
12	ALT Button	Toggle between letter and number input methods
13	LED Indicator	Touch sensor indicator
14	Lock Button	Press the button to remove micro SD card compartment cover.
15	Speakers	
16	Earphone Jack	Connect the earphones
17	USB Port	Connect the USB connector
18	Microphone	Records sound

How to Use Keypad


Lowercase letters input method is set as default.

- Press **ALT Button** to toggle between letter and number input methods, and then press the number buttons to input numbers. The icon **12** is displayed in top right corner. Press **ALT Button** again to turn to letter input method.
- Press  to toggle between uppercase/lowercase input methods, and then press the letter buttons to input uppercase letters. The icon **EN/en** is displayed in top right corner. Press  again to turn to lowercase letter input method.
- Press **Symbol Button** to pop up the on-screen keypad of special symbols. Press **Symbol Button** again to exit.
- Press  to delete a letter. Press  to begin a new line. Press  to refresh the screen display.

Shortcut Button:

Press the number button to confirm the corresponding option directly.

Reading BOOKs

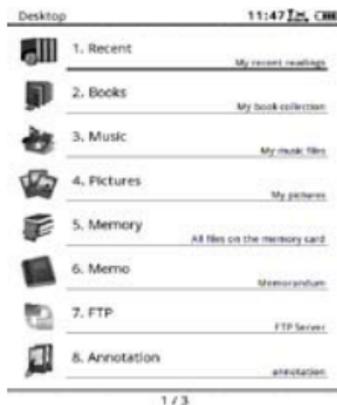

- From the **Home** page, press the function button to select **Books** mode.

- Select the desired book and press **Navigation Button** to enter reading.
- Press **PREV/NEXT PAGE Button** to turn pages. Press **Menu Button** to enter option menu.
- Press **Navigation Button** to navigate through all options. Press **BACK Button** to return to previous option.

Note:

Under direct sunlight or in low-temperatures, the characters displayed on the screen may fade. Please press **Refresh Button** to refresh the entire screen.

How to Get eBooks

1. Installing Adobe Digital Edition (ADE)

1. Please download Adobe Digital Edition (ADE) online at the website:
<http://www.adobe.com/products/digitaleditions>.
2. Install Adobe Digital Edition (ADE) on you PC/Notebook.
3. If you do not have an Adobe ID, create it by following the on-screen instructions.

2. Download eBooks from an online E-Book store to your PC/Notebook.

1. Authorize your PC/Notebook to download eBooks from an e-Book store.
2. Authorize the device to transfer and read downloaded eBooks on the device.
3. Download eBooks in Adobe PDF or EPUB formats to your PC/Notebook and transfer them to the device.

3. Transfer Content to the device connected with your PC/Notebook.

1. Connect the device to your PC/Notebook using the USB cable.
2. Select the content you want to transfer from your PC/Notebook.
3. Drag the content from the PC/Notebook to the device.
4. Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
5. Left click on  to disconnect the device and PC/Notebook safely.

NOTE:

Content can also be transferred to a micro SD card on the device.