

Contents

BASIC OPERATIONS	3
HOW TO USE KEYPAD	4
HISTORY	5
<i>HISTORY MENU.....</i>	<i>5</i>
<i>READING BOOKS.....</i>	<i>6</i>
BOOKS	8
<i>BOOKS MENU.....</i>	<i>9</i>
<i>READING A BOOK</i>	<i>9</i>
MUSIC	10
<i>MUSIC MENU.....</i>	<i>10</i>
<i>MUSIC SUBMENU.....</i>	<i>10</i>
<i>MUSIC PLAYBACK.....</i>	<i>11</i>
PICTURES	12
<i>PICTURES MENU.....</i>	<i>12</i>
<i>PICTURES SUBMENU</i>	<i>13</i>
MEMORY.....	14
NOTEPAD.....	15
<i>NOTEPAD MENU</i>	<i>15</i>
<i>NEW NOTEPAD.....</i>	<i>15</i>
ANNOTATION.....	16
<i>ANNOTATIONS MENU</i>	<i>16</i>
<i>ADD ANNOTATION.....</i>	<i>16</i>

DICTIONARY	17
<i>INSTALLING DICTIONARIES</i>	<i>17</i>
<i>CONSULT THE DICTIONARY</i>	<i>17</i>
RADIO	18
<i>BACKGROUND RADIO MODE</i>	<i>19</i>
WI-FI	20
BROWSER	21
<i>BROWSER MENU</i>	<i>22</i>
SETTINGS	23
CALENDAR	24
GAMES	24
USER MANUAL	24
SHUTDOWN	24
TECHNICAL SPECIFICATIONS	25
TECHNICAL SUPPORT AND WARRANTY INFORMATION	25
DISCLAIMER	25

 
Basic Operations

Press and hold the **Power Button** to turn on the device. It will automatically enter the main menu on **Home** screen after the start-up screen. The main menu includes **History, Books, Music, Pictures, Memory, Notepad, Annotations, Dictionary, Radio, Calendar, Wi-Fi, Browser, Games, Settings, Manual** and **Shutdown**. Press the **PREV/NEXT PAGE Buttons** to turn pages. Press the **Navigation Button** to navigate to the desired mode and to confirm the option. Press the **Refresh Button** to refresh the screen display. At **Home** page, press the **MENU Button** to pop up the **Desktop Menu**. Press the **Navigation Button** to select the desired arrangement (**Icon View/List View**) and to confirm.




 

Desktop	11:47  
 1. History	<u>My recent books</u>
 2. Books	<u>My book collection</u>
 3. Music	<u>My music files</u>
 4. Pictures	<u>My pictures</u>
 5. Memory	<u>All files on the memory card</u>
 6. Wi-Fi	<u>Connect to Wi-Fi</u>
 7. Browser	<u>Explore the Web</u>
 8. Notepad	<u>Memorandum</u>
1 / 2	

Desktop	11:47  
 1. Annotation	<u>annotation</u>
 2. Dictionary	<u>Look up a word</u>
 3. Radio	<u>Listen to radio stations</u>
 4. Calendar	<u>calendar</u>
 5. Games	<u>Games of all kind</u>
 6. Settings	<u>Change the system settings</u>
 7. Manual	<u>User manual</u>
 8. Shutdown	<u>Power off the device</u>
2 / 2	

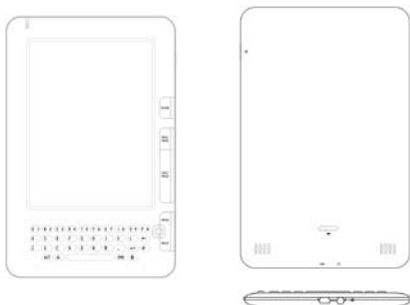How to Use Keypad



Lowercase letter input method is set as default.

- Press the **ALT Button** to toggle between letter and number input methods, and then press the number buttons to input numbers. The icon **12** is displayed in the top right corner. Press the **ALT Button** again to turn to letter input method.
- Press  to toggle between uppercase/lowercase letter input methods, and then press the letter buttons to input uppercase letters. The icon **EN/en** is displayed in the top right corner. Press  again to turn to lowercase letter input method.
- Press the **Symbol Button** to pop up the on-screen keypad of special symbols. Press the **Symbol Button** again to exit.
- Press  to delete a letter. Press  to begin a new line. Press  to refresh the screen display.

Shortcut Button:

Press the number button to confirm the corresponding option directly.



History

16 most recent files will be displayed on the screen.

History		02:27 PM, 24/05/99
	① HARRY POTTER PDF document	2.6 MB 24/05/99
	② dream electronic book document	379.4 KB 24/05/99
	③ Андрей Мрей - записки Са...	943.8 KB 24/05/99
	④ Russian ebook4	135.3 KB 24/05/99
	⑤ 1984 (English) unknown	806.0 KB 24/05/99
	⑥ Russian ebook5	968.3 KB 24/05/99
	⑦ English plain text document	18.5 KB 24/05/99
	⑧ T[1].The.Audacity.of.Hope	425.4 KB 24/05/99
1 / 2		

History Menu

In the files list, press the **MENU Button** to enter **History** menu. Press the **Navigation Button** to select the option and to confirm. Press the **BACK Button** to exit.

Back to Desktop

Return to **Home** page (**Desktop**).

Remove

Delete the file from the list.

Press the **Navigation Button** to highlight **YES** and to confirm.

Properties

View the file properties.

Reading Books

Press the **Navigation Button** to select the desired book and to enter reading. Press the **PREV/NEXT PAGE Buttons** to turn pages. Press the **BACK Button** to exit reading. Press the **MENU Button** to enter the submenu detailed as follows.

Table of Contents	Skip to the table of contents. Press the PREV/NEXT PAGE Buttons to turn pages if available. Press the Navigation Button to select the desired item and to confirm the option. NOTE: The function is available only when the table of contents is in the form of hyperlink.
Zoom In/Out	Zoom in/out the contents on screen. Press the Navigation Button to move to the desired part.
Go to Page	Press the keypad to input the page number. Press ← to backspace. Press the Navigation Button to go to the selected page.
Search Text	Search for a desired character/keyword. Input the word and press the Navigation Button to start the search.
Find Previous/Next	Turn to previous/next page to select the desired character/keyword if the Search results are represented on several pages.
Add bookmark	Save the address of the current page
View bookmark	Press the Navigation Button to select and browse a previously saved bookmark.
Rotate Screen	Set the screen orientation manually.

Flush Settings

This option allows to renew the image on the display screen. Use the **Navigation Button** to select the available options.

Annotation

Press the **Navigation Button** to select the desired word and then press the **Navigation Button** twice to save the current annotation. For more information on the **Annotations function**, please, refer to p.15 (**Annotation**).

Save Note

Press the **Navigation Button** to select the desired word and press the **Navigation Button** twice to save it as a note. It will be stored in **Notepad** by default. To review this note, press the **Function button** to enter the **Notepad**.

Set Gray

Set up the gray level.

Book Info

Display the technical information of the book.

Reflow/Unflow

Rearrange the PDF/DOC files in form of text to fit the screen size.

Fit Page

Page size setup. It's only available with files in PDF formats.











Link to Footnote

Display the footnote of the current text page. It's only available with files in FB2 formats.



Books

The device supports 16 types of file formats, including EPUB, PDF, FB2, MOBI, TXT, RTF, PDB, HTM, HTML, CHM, DJVU, DJV, XLS, PPT, and DOC. It also supports compressed files in ZIP and RAR formats.

Books		02:34  
	① Belarusian Folder	02/12/10
	② Bulgarian Folder	02/12/10
	③ Czech Folder	02/12/10
	④ Deutsch Folder	02/12/10
	⑤ English Folder	02/12/10
	⑥ Hungarian Folder	02/12/10
	⑦ Lithuanian Folder	02/12/10
	⑧ Polish Folder	02/12/10
1 / 2		

Books Menu

In the **Books** list, press the **Menu Button** to enter **Books Menu**. Press the **Navigation Button** to select the option and to confirm. Press the **BACK Button** to exit.

Back to Desktop	Return to Home page (Desktop).
Delete	Delete the file from the list. Press the Navigation Button to highlight YES and to confirm.
Search by name	Search for a desired keyword. Input the word and press the Navigation Button to start the search.
Sort	Sort the files by Name, Size, Type, Date, Ascending , and Descending .
Properties	View the file properties.

Reading a Book

Press the **Navigation Button** to select the desired book and to start reading. Press the **PREV/NEXT PAGE Buttons** to turn pages. Press the **BACK Button** to exit the reading. Press the **MENU Button** to enter the submenu.

Note:

Please refer to **History/Reading Books** for more detailed instructions.



Music

Music files saved on micro SD card are displayed in the list. The device supports MP3, WAV, WMA, and OGG files formats.

Music Menu

At the **Music** list, press the **Menu Button** to enter the **Music Menu**. Press the **Navigation Button** to select the option and to confirm. Press the **BACK Button** to exit.

Back to Desktop	Return to Home page (Desktop).
Delete	Delete the file from the list. Press the Navigation Button to highlight YES and to confirm.
Search by name	Search for a desired keyword. Input the word and press Navigation Button to start the search.
Sort	Sort the files by Name, Size, Type, Date, Ascending , and Descending .
Properties	View the file properties.
Music player	Turn to music playback screen.

Music Submenu


At music playback screen, press the **Menu Button** to enter the **Music** submenu detailed as follows.

Repeat one	Play an audio file once.
Repeat all once	Play all audio files once.
Repeat all	Repeat all audio files.

Music Playback

Press the function button to play the desired track. On the playback screen the following operations can be performed.



1. Press the **Navigation Button** upward / downward to adjust the volume level.
2. Press  to play/pause the track. Press the **PREV/NEXT Page Buttons** to skip to previous/next track.
3. Press and hold the **Navigation Button** leftward/rightward to rewind/go forward.
4. Press the **Back Button** to exit the playback screen. Select **Quit the application** to quit the music mode and highlight **OK** to confirm.

Background Music Mode

During music playback, press the **Back Button** to enter the **Background Music Mode**, in which you can use the device with playing music. Select **Play background** and highlight **OK** to confirm the option.

To exit the mode, press the function button to enter the music playback screen, and then press the **Back Button** to select **Quit the application**. Highlight **OK** and press the **Navigation Button** to confirm.

Pictures Submenu

Press the **Menu Button** to enter the **Pictures** submenu detailed as follows.











Recent	The recently viewed picture is displayed in the list.
Zoom In/Out	Press the function button to zoom in/out the contents on the screen. Press the Navigation Button to move to the desired part.
Go to page	Skip to the desired page. Press the keypad to input the page number. Press ← to backspace. Press the Navigation Button to go to the selected page.
Actual Size	View the picture in its actual size.
Fit Screen	Page fits the screen size.
Fit Height/Width	Page fits the height/width of the window.
Rotate Right/Left	Screen orientation can be set to Portrait/Landscape manually.
Screensaver	Select the desired picture to create a screensaver.
Play	Enter the slide show.



Memory

All the files on micro SD card are displayed in the list. The device supports expansion storage of micro SD card up to 32GB.

Files should be stored in corresponding file folders; otherwise they cannot be recognized by the device.

Memory		02:34  
	① .adobe-digital-editions folder	29/11/10
	② Dict folder	29/11/10
	③ Documents folder	13/10/99
	④ Downloads folder	29/11/10
	⑤ Fonts folder	29/11/10
	⑥ Memo folder	24/10/99
	⑦ Music folder	29/11/10
	⑧ Pictures folder	29/11/10
1 / 3		

Documents	The folder is for e-book files storage.
Music	The folder is for audio files storage.
Picture	The folder is for picture files storage.
Memo	This is the default folder for saved memos.
Downloads	The linked files are downloaded in this folder by default.



Notepad

All notes are displayed on the screen if available.

Notepad Menu

At the **Notepad** interface, press the **Menu Button** to enter the **Notepad Menu**. Press the **Navigation Button** to select the option and to confirm. Press the **BACK Button** to exit.

Back to Desktop	Return to Home page (Desktop).
New Notepad	Create a new notepad.
Delete	Delete the file from the list. Press the Navigation Button to highlight YES and to confirm.
Search by name	Search for a desired keyword. Input the word and press Navigation Button to start the search.
Sort	Sort the files by Name, Size, Type, Date, Ascending , and Descending .
Properties	View the file properties.

New Notepad

Highlight **New notepad** and press the **Navigation Button** to create a new notepad.

- Click on the keypad to input characters.
- Press the **BACK Button** to pop up the notepad dialog box. Highlight **Yes** and press the **Navigation Button** to save the new notepad. Highlight **NO/Cancel** and press the **Navigation Button** to exit/return to the new notepad interface.
- Input characters to create a file name. Highlight **OK** and press the **Navigation Button** to confirm.



Annotation

Annotations allow to highlight passages in a book and add notes to them. All annotations are displayed on the screen if available.



Annotations Menu

At the **Annotation** interface, press the **Menu Button** to enter the **Annotations Menu**. Press the **Navigation Button** to select the option and to confirm. Press the **BACK Button** to exit.

Back

Return to **Home** page (**Desktop**).

Sort by time/title

Sort the files by modification time/title.

Delete

Delete the item from the list.

Press the **Navigation Button** to highlight **YES** and to confirm.

Add Annotation

When reading a book, press the **Menu Button** to pop up the **Book Submenu**. Select the **Annotation** and press the **Navigation Button** to enter the **Annotation** function. Press the **Navigation Button** to select a character, and then press the **Navigation Button** again to confirm the option. Highlight **OK** and press the **Navigation Button** to save the current annotation.

NOTE:

It's unavailable with files in EPUB, PDF, DJVU, DJV, DOC, XLS, and PPT formats.



Dictionary

StarDict-compatible programs are available for the device. It supports dictionary format in StarDict.



Installing Dictionaries

Create a new folder named **dict** in root directory of the memory card. Download the desired dictionary files in **dict** folder and restart the device. The dictionary will be installed automatically.

NOTE:

There's no dictionary pre-installed on the device.

 
Consult the Dictionary

Input the keyword in the text box. Press the **Navigation Button** upward/downward to select the desired word in the list. Press the **Navigation Button** rightward/leftward to move the cursor. Press the **MENU Button** to select the desired dictionaries. Press the **Navigation Button** to confirm the option and press the **BACK Button** to exit.



Radio

The device will search for a FM frequency automatically. The first FM frequency will be played automatically when it is saved on the device. Press the **PREV/NEXT PAGE Buttons** to tune FM frequency down/up manually.

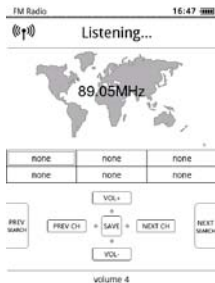

Manual Search

Press the **Menu Button** to enter the **Manual search** menu. Press the **Navigation Button** to tune FM frequency down/up manually.

Save FM Frequency

Press the **Navigation Button** to save the current FM frequency. 18 channels can be stored.

Switch Channel

Press the **Navigation Button** leftward/rightward to turn to previous/next channel.

Adjust Volume

Press the **Navigation Button** upward/downward to adjust the volume.

Background Radio Mode

During radio playback, press the **Back Button** to enter **Background Radio Mode**, in which you can use the device with playing radio. Select **Play background** and highlight **OK** to confirm the option.

To exit the mode, press the function button to enter radio playback screen, and then press the **Back Button** to select **Quit the application**. Highlight **OK** to confirm the option.

 
NOTE:


- Make sure the device is properly connected to the earphone before using radio function. The earphone cord functions as the FM antenna.




WI-FI

At the **WI-FI** interface, follow the steps below to enable the function.

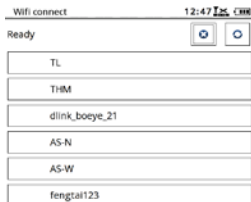

 - Select  and press the **Navigation Button** to disable/refresh the Wi-Fi function.
- The device will search for the available Wi-Fi automatically. The available Wi-Fi connection will be displayed in the list.

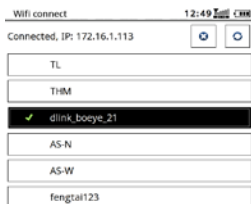

- Select a wireless network with the **Navigation Button** and press it to connect to Wi-Fi.
- Enter the password if the network is encrypted. Connection will be established automatically.
- The IP address is displayed after the successful connection.



Browser

Upon the successful Wi-Fi connection, select the icon and press the **Navigation Button** to enter **Browser** mode. It will automatically enter the preset homepage.

The cursor will be located at the first link of the page when a webpage is fully loaded. Press the **Navigation Button** to select desired links.



Browser Menu

Press the **Menu Button** to browse a web page detailed as follows:



Back	Return to the previous webpage.
Forward	Skip to the next webpage.
Reload	Reload the current webpage.
Download	Download the current linked file.
Copy Link Location	Copy the current link address.
Set Homepage	Set the current page as the homepage.
Bookmark	Add/view bookmarks.
Open URL	Enter a new URL for browsing.
Quit	Exit the menu.

NOTE:

- Please create a new folder named **downloads** in root directory of the memory card. The linked files are downloaded in **downloads** folder by default.
- When browsing a web page, press the **BACK Button** to return to home page.



Settings

Press the **Settings Button** to enter the **Settings** mode directly. In the **Settings** mode, the following settings can be performed.

Font

Press the **Navigation Button** to select the font and to confirm the option. Press the **BACK Button** to exit.



Installing Fonts

Create a new folder named **fonts** in root directory of the memory card. Download the desired font files in **fonts** folder and restart the device. The font will be installed automatically.

Date and Time



To adjust the value, press the **Navigation Button** to move the cursor. Highlight **OK** and press the **Navigation Button** to confirm.



Language

Select the desired language. 24 kinds of languages are available.

Sleep Time



The device will automatically enter **Sleep Mode** for a period of time. Highlight **Turn off auto sleep** to disable the function and press the **Navigation Button** to confirm the option.



System info

Display the technical information of the device.



Screensaver reset

Restore the screensaver picture to factory default settings.



Factory reset

Restore the device to factory default settings. Files will be deleted permanently once factory default settings are restored.



Rotation sensor

Select **ON** to enable auto rotation. It is only available when reading books and viewing pictures.



Activate Device

Activate the device as an authorized e-reader device for Adobe DRM.



Calendar

Press the **Navigation Button** and the **PREV/NEXT PAGE Buttons** to turn to desired date. Press the **BACK Button** to exit.



Games

Press the **Navigation Button** to select the desired game and to confirm. At the game interface, press the **MENU Button** to enter **Game MENU**.



User Manual

This PDF-format User Manual can be browsed on the device.

Press the **PREV/NEXT Page Buttons** to turn pages. Press **BACK** to return to main menu.

Press the **MENU Button** to enter **Books Menu**.

Note:

*Please refer to **History/Reading Books** for more detailed instructions.*



Shutdown

Highlight **OK** and press the **Navigation Button** to power off the device.

Note:

Press and hold the **Power Button** to pop up the **Power off** menu.

Highlight **OK** and press the **Navigation Button** to power off the device.

Technical Specifications

Display	6"
Resolution	800 x 600, 16 Grey scale
Supported File Formats	Book: EPUB, PDF, FB2, MOBI, TXT, RTF, HTML, HTM, CHM, RTF, PDB, DJVU, DJV, DOC, XLS, PPT, ZIP, RAR Music: MP3, WMA, WAV, OGG Picture: JPG, BMP, GIF, PNG, TIFF
Adobe DRM	DRM for EPUB/PDF, built-in Adobe Reader Mobile
Expansion Slots	micro SD card, up to 32GB
Battery	Lithium Battery, 1300 mAh
Other Interfaces	mini USB2.0/3.5mm stereo audio jack
Dimensions	192 mm x 125 mm x 10.3 mm (L x W x H)
Weight	300 g

NOTE:

Under direct sunlight or in low temperatures, the characters displayed on the screen may fade. Please press "Refresh" button to refresh the entire screen.

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.