

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN!





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION:

- To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is not used for a long period of time.
- The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer or authorized organization.

Table of Contents

<u>1.</u>	GETTING STARTED	3
1.1	SAFETY PRECAUTIONS	3
1.2	PACKAGE CONTENT	4
1.3	PRODUCT VIEWS	4
<u>2.</u>	CHARGING POWER BANK	5
<u>3.</u>	BASIC OPERATIONS	6
3.1	CHARGING NOTEBOOKS WITH NOTEBOOK BATTERY	6
3.2	CHARGING NOTEBOOK ONLY	8
3.3	CHARGING OTHER DEVICES	9
3.4	CHARGING DEVICES VIA USB PORT	9
3.5	CHECKING POWER CAPACITY	10
<u>4.</u>	CONNECTOR TIPS	12
<u>5.</u>	TROUBLESHOOTING	13
<u>6.</u>	DEVICE MAINTENANCE	13
<u>7.</u>	APPENDIX	14
7.1	PRODUCT SPECIFICATIONS	14
7.2	TECHNICAL SUPPORT AND WARRANTY INFORMATION	14
7.3	DISCLAIMER	14
7.4	TIP CONNECTIVITY LIST	15

1. Getting Started

Thank you for purchasing **Prestigio Power Bank 501**. You have made an excellent choice and we hope you will enjoy all of its capabilities. Please read through the user manual carefully before using the product, and follow all of the procedures in the manual to fully enjoy all features of the product.

1.1 Safety Precautions

Please observe all safety precautions before using **Prestigio Power Bank 501**. Please follow all procedures outlined in this manual to correctly operate the device. Failure to comply with the following potentially hazardous situations may result in injury or property damage.

- Do NOT attempt to disassemble or alter any part of the device that is not described in this guide.
- Do NOT block any ventilation openings.
- Do NOT place the device in contact with water or any other liquids. The device is NOT designed to be liquid proof of any sort.
- In the event of liquid entry into interior of device, immediately disconnect the
 device from the computer. Continuing use of the device may result in fire or
 electrical shock. Please consult your product distributor or the closest support
 center.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
 - Do **NOT** place the device near a heat source or directly expose it to flame.
- Do NOT place the device in vicinity of equipments generating strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or data corruption and loss.

1.2 Package Content

Item	Description	Quantity
Penatry	Prestigio Power Bank 501	1
Prestigio	User Manual	1
Prestição	Documentation CD	1
	AC Adaptor	1
\triangle	Power Output Cable	1
\$ CO	25cm USB Cable	1
	Connector Tips	8
	Leather Carrying Case	1

1.3 Product Views

The images in this document are for user reference only. The actual product may look slighly different from these images.

- 1. Power On/Off Swtich or
 - Voltage ♠/♠ Switch
- 2. Voltage/Capacity LED Indicator
- 3. Function Button
- 4. Charging LED Indicator
- 5. DC Input Jack
- 6. USB Output port
- 7. DC Output Jack
- 8. Battery Extension Port



2. Charging Power Bank

WARNING:

It is recommended to fully charge Prestigio Power Bank 501 before first time operation. Failure to comply may shorten battery life.



- Insert tip of the DC adapter into DC Input Jack of power bank.
- **2.** Insert DC adapter prong into wall socket to start charging.
- Charging LED indicator will glow in orange color when the power bank is being charged. The indicator turns steady green when fully charged.



- 4. Switch voltage → switch to position and press on the function button to check current charging or power status.
- **5.** Unplug the adapter after power bank is fully charged.

Note:

The device will stop charging when fully charged. Although not advised, it is safe to leave adapter plugged in when the device is fully charged.

3. Basic Operations

3.1 Charging Notebooks with Notebook Battery


Prestigio Power Bank 501 is not only able to provide power to notebook but also capable to charge notebook internal battery at the same time. Refer to the following diagram and procedures for detailed operation instructions.


WARNING:

It is recommended to fully charge Prestigio Power Bank 501 before first time operation. Failure to comply may shorten battery life.

WARNING:

Please verify the input current of notebook in use is equal or less than 3.5A (3500mA). Please remove batteries of such notebook before connecting to Prestigio Power Bank 501. Failure to comply may result both notebook and battery damage.

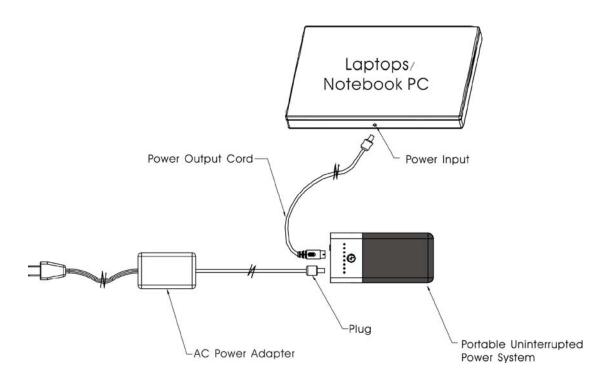

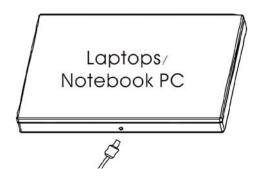


 Select the connector tip that securely fits the DC In jack on the notebook.

Note:

Do **NOT** use force to plug/unplug connector tips into DC In jack on the notebook. The tips only support a center positive DC In jack. Failure to comply may damage both notebook and the power bank.

 
- Connect the appropriate connector tip to the power output cable only.Do NOT connect to the notebook until instructed.
- 3. Insert the other end of power output cable into the main unit.
 Set switch to the position and select the applicable voltage.



Note:

The default output voltage is set on 5V. Look up information regarding input voltage labeled on the notebook. Failure to do so may damage both notebook and the power bank.

- 4. Double check on the voltage previously selected, and set the switch to position to lock on the voltage.
- 5. Connect the connector tip to the power jack of the notebook. The power bank now should be providing power to both notebook and its battery. Connect AC power adapter to power bank and wall plug to charge power bank, notebook, and notebook battery at the same time.

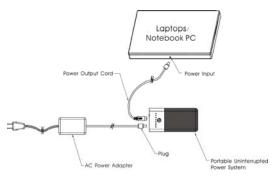


WARNING:

Please remove the connection between portable device and power bank before changing voltage on power bank. Failure to comply may damage both the portable device and power bank.

3.2 Charging Notebook Only

It is the primary purpose of **Prestigio Power Bank 501** to maintain portable devices fully functional for a long period of time without other power sources. Please remove the battery of portable device before connecting to power bank for **Prestigio Power Bank 501** will automatically charge both the device and its battery when the battery is at presence. Refer to the following diagram and procedures for detailed operation instructions.

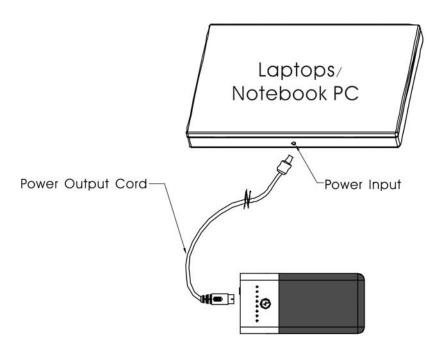

The connection scheme in this case is similar that of charging notebook with battery except there is no connected AC power adapter. Please refer to the previous section for detailed connection procedures.

Note:

To further optimize the working time of **Prestigio Power Bank 501** while charging notebooks without AC power adapter, it is recommended to select one voltage level lower than the required voltage level indicated on the notebooks. The voltage reduction method avoids charging notebook battery thur extends Prestigio Power Bank 501 working time.

3.3 Charging Other Devices

Please refer to the below chart for common digital electronic device voltages and suggested voltage setting on **Prestigio Power Bank 501**.

WARNING:

The chart below is only a quick voltage reference guide for common digital electronic devices. Please refer to the labels on the actual devices for more accurate voltage setting.

Portable Devices	AC Power Adapter Output Voltage	Suggested Voltage Setting on Prestigio Power Bank 501
	14V	12V
Lantons	16V	12V
Laptops	19V	14V
	24V	16V
Portable DVD	9V	7.5V
player	12V	9V
Digital camera	5V	5V
CD player	4.5V	5V
PDA	5V	5V
Mobile phone	3.7V~5V	5V
Digital video	9V	7.5V~9V
camera	12V	9V~12V
MP4	5V	5V

3.4 Charging Devices Via USB Port



3.5 Checking Power Capacity



- It is recommended to recharge
 Prestigio Power Bank 501 when indicator reaches to the last light.
 The unit will be completely out of power when red light diminishes.

WARNING:

Immediately turn off the unit and disconnect the power adapter if the unit is not working properly. Never try to repair the unit without authorized professionals for it may damage the unit.

4. Connector Tips

As listed below, **Prestigio Power Bank 501** includes a package of 8 connector tips that match a variety of common brand name notebooks and portable digital devices. Please refer to the tip connectivity list in Appendix section to match connector tips and devices.



5. Troubleshooting

Please refer to the following procedures if **Prestigio Power Bank 501** does not function as it should be. Be advised that the following instructions are only intended for simply troubleshooting purpose. Please contact your local authorized shops for further troubleshooting and technical support.

- 1. **Prestigio Power Bank 501** is malfunctioning when all LED lights are off while charging.
- Please verify that the portable device power requirement does not exceed 65 watts (19V/3.5A). Prestigio Power Bank 501 is not designed to charge/provide power to such devices.
- 3. Please check on the remaining the battery capacity. Please recharge **Prestigio Power Bank 501** when the capacity is below 25%.
- Please make sure that the connection between power output cord and Prestigio Power Bank 501 is securely fixed.
- 5. Please verify if the connector tip is an adequate match to the portable device DC jack.
- Please make sure the voltage setting on Prestigio Power Bank 501
 matches or is one level lower than the portable device voltage
 requirement.
- 7. Please verify that the battery is installed in the portable device as some devices will not function without a battery installed.

6. Device Maintenance

All batteries have finite life cycles. Their power capacity and charging efficiency are constantly degrading due to chemical reactions that gradually causes the internal impedance of the cells to increase and in time, and reduces the ability of the battery to deliver its charge. Battery internal chemical reactions are catalyzed by extreme temperatures and excessive moisture. For these reasons, it is critical to keep them as cool, dry, clean as possible at all times.

Please review the brief list below to maximize **Prestigio Power Bank 501** performance.

Battery Do's:

- Fully charge/discharge battery up to 4 cycles before using Prestigio Power
 Bank 501 for the first time to maintain full capacity.
- Remove Prestigio Power Bank 501 from portable device and stored in a cool, dry, clean place if not in use.
- Recharge Prestigio Power Bank 501 fully after being stored away for more than one month or longer period of time.
- Must be recycled or properly disposed of after batteries life cycle ends.

Battery Don'ts:

- Never attempt to disassemble, reassemble **Prestigio Power Bank 501**.
- Do not short-circuit for it may cause severe damage to the batteries in the Prestigio Power Bank 501.
- Do not drop, hit or otherwise abuse the batteries as it may result in the exposure of the potentially hazardous cell contents.
- Keep Prestigio Power Bank 501 away from fire or other sources of extreme heat. Do not incinerate. Failure to comply may result in an explosion.

7. Appendix

7.1 Product Specifications

Battery Type Lithium Ion Battery Cells X 6

Battery Capacity 10000mAh Maximum

Output Power 45~50W

Output Current 3.5A Maximum

Via Charging Tip: 5V, 6V, 7.5V, 9V, 12V, 14V,

Output Voltage 16V, 19V

Via USB Port: 5V/1A fixed output

Charging Tips 8 Tips

Charging Time Approximately 4 hours

Charging Adapter Input 100~240V, 50/60Hz, 1.7A

Charging Adapter Output 19.0V, 3.16A

Dimensions 174mm X 84mm X 23mm (L*W*D)

Weight Approximately 420g

7.2 Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and warranty information.

7.3 Disclaimer

We made every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any erros or omissions. **Prestigio** reserves the right to make any changes without further notice to any products herein.

7.4 Tip Connectivity List

Connector tip models

DC# **03**: Moblile phone, digital cameras, camcoders.

DC# \mathbf{V} : Digital cameras, camcoders.

DC# **Z** : Digital cameras, camcoders, portable DVD players, CD/MPs players.

DC# A: Digital cameras, camcorders, notebook computers.

DC# B: Notebook computers.DC# C: Notebook computers.

 $\label{eq:decomposition} \mathsf{DC\#}\ \boldsymbol{D}: \quad \mathsf{Notebook}\ \mathsf{computers}.$

DC# **E**: Notebook computers.