







## Contents of Package

- \* Slim Multimedia Keyboard
- \* USB/PS2 adapter
- \* User's Manual

## Introduction of Hot Keys

7 useful multimedia hot keys provide a timesaving way to access Web/E-mail and multimedia control.

Media	Media Player	Play CD and media content.
	Pre Track	Switch to the previous media track. Press once for each preceding track
	Play/Pause	Play or Pause media. Once paused, press this key again to resume playing.
	Stop	Stop playing media
	Next Track	Switch to the next media track. Press once for each subsequent track.
	Email	Start the default e-mail program. If you are not sure what the default e-mail program is, press this key to find out. You can reassign the Email key to start another e-mail program or another application.
	Explorer	Open explorer