

Sadržaj pakiranja

* Tipkovnica

* USB/PS2 adapter

* Upute

Tipke Hot Keys

7 korisnih multimedijских tipki pruža uštedu vremena pri pokretanju Web, E-mail i multimedijских programa.

	Media Player	Reproduciranje CD-a i multimedije.
	Pre Track	Prebacivanje na prethodnu traku. Pritisnuti jedanput za svaku traku.
	Play/Pause	Reprodukcija ili pauziranje. U pauzi, pritisnuti tipku ponovno za reprodukciju.
	Stop	Stop reprodukcije.
	Next Track	Prebacivanje na slijedeću traku. Pritisnuti jedanput za svaku traku.
	Email	Pokretanje e-mail programa. Možete reprogramirati ovu tipku da pokreće i neki drugi program.
	Explorer	Pokretanje Internet Explorer programa