 
Package Contents

- 1. Prestigio Webcam Main Unit
- 2. Utility CD

- Quick Guide
- Warranty Card

Getting Started





- 1. Turn on PC or notebook.
- Insert USB connector to any of the USB slot on PC or notebook.
- The device driver will be autoinstalled by PC or notebook.
- 4. The device now is ready for use.
- Click on My Computer → USB Video Device to start video streaming session.
- Click on Take a new picture to take a snapshot.
- Click on Delete all pictures on camera to delete all snapshots.

NOTE:

To utilize all device functions, please follow instructions in next section to install included utility software.

Installing Utility Software

- After connecting device to PC or notebook and inserting Utility CD, the installation window should pop up automatically.
- Click on Next button to initiate installation process or Cancel button to exit.

NOTE:

Please click on **Ok** when prompted to install **Unsigned Driver**. This is a Windows system warning that indicates the specific driver program is not certified by Windows.

Utility software will be automatically installed. Click on Finish button to complete installation.

Using Utility Software









Click on Start → All Programs → Prestigio Webcam → AMcap to start using utility software.

- File menu:
 Click on Set Capture File to create file name and designate maximum video streaming size.
- Devices menu: Click on device name to select video/audio input source.
 - Options menu: Click on Preview to display live streaming capture. Click on Audio Format to adjust sound quality.

Click on Audio Capture Filter to master audio input properties and individual audio input properties.

Click on Video Capture Filter to adjust various advanced video features (3 tabs) including Special Effect on images/photo frame, Face Tracking, Face Effect, Power Line Frequency Setting, Video Proc Amp and Camera Control.





Click on Video Capture Pin to adjust video streaming parameters. Adjust Output Size to best resolution desired.

NOTE:

Best image resolution may not be the largest resolution.

Capture menu:
Click on Start Capture/Stop
Capture to create a video clip.
Click on Capture Photo or
Capture Audio to take a snap
shot or record sound
individually. Click on Set Frame
Rate to set number of image
frames per second. Click on Set
Time Limit to designate video
clip time limit.

Cautions

- Do not attempt to disassemble or alter any part of the device that is not described in this guide.
- Do not place the device in contact with water or any other liquids. The device is NOT designed to be liquid proof of any sort.
- In the event of liquid entry into interior of device, immediately disconnect the device from the computer. Continuing use of the device may result in fire or electrical shock. Please consult your product distributor or the closest support center.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
- Do not place the device near a heat source or directly expose it to flame or heat.

Technical Specifications

woder warne	PWC113
Lens	5 Lens
Interface	USB 2.0 Interface
Input Voltage	5V
Focus Range	3.0cm ~ Infinity
Frame Rate	640 X 480: Up to 30 fps
	1600 X 1200: Up to 15 fps
Color	RGB24 (True Color 24bit)
Image Sensor	1/6" CMOS Sensor

Image Resolution 1280 X 1024, 1600 X 1200

OS Supported Windows 2000/ME/XP(32bit)/Vista

Weight 50g Dimensions (mm) 80m

80mm(H) X 40mm(W) X 12mm(T)

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any erros or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.