


Package Contents

- | | |
|---------------------------|------------------|
| 1 Prestigio iPod™ Speaker | 2 Remote Control |
| 3 Power Adapter | 4 AUX Cable |
| 5 Quick Guide | 6 Warranty Card |


Device Overview

Remote Control


1. Power Button
2. Mode Button
3. Menu Button
4. Enter Button
5. Scroll Up
6. Next Track/Fast Forward
7. Play/Pause
8. Previous Track/Rewind
9. Scroll Down
10. Tune Down Volume
11. Tune Up Volume
12. Alarm Set
13. Alarm On/Off
14. Alarm Mode
15. Snooze/Nap/Sleep

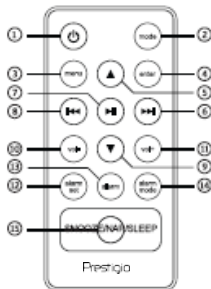

Front View

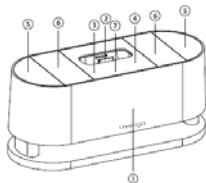

Rear View

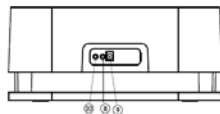

- | | |
|------------------------|-------------------------|
| 1 Clock Display | 6 Tuning / select ↑ & ↓ |
| 2 iPod™ Dock | 7 Power Touch Pad |
| 3 M – Mode Touch Pad | 8 Auxiliary Input |
| 4 E – Clock Touch Pad | 9 DC Power Jack |
| 5 Volume +/- Touch Pad | 10 FM Antenna Socket |

Getting Started

1. Pull off the tab at the end of **remote control** to enable the unit.
2. Insert appropriate plug of DC Power Adapter into the wall electrical outlet.
3. Insert power connector of DC Power Adapter into the device.
4. Press and hold button to turn on the device/enter stand-by mode.

Music Function

Music Playback Modes

Press **mode** button to cycle through **AUX**, **iPod™**, **FM** and **AM** modes:

- **iPod™**: Insert iPod™ into designated port on top. Press button to start playing, **menu** button to return to previous page, and to select items.
- **AUX**: Connect external audio device with AUX cable provided. Turn on external audio device to start playback.
- **Radio**: Press to search for FM stations manually. Press and hold for 2 seconds to search for FM stations automatically.

Playback Pause

Press button to pause playback. Press the button again to resume.

Selecting Track

Press button to return/skip to previous/next track.

Adjusting Volume

Press **vol-/vol+** button to turn down/up volume.

Extra Functions

Adjusting Clock Time

Simultaneously press and hold **M** button and **E** button to start adjusting clock time. Press \uparrow/\downarrow button on the device to adjust hour/minute digits and press **E** button to confirm.

Enabling/Disabling Alarm Clock

1. Press **alarm** button to cycle through **Alame1**, **Alarm2**, and **Alarm off** modes.
2. When alarm 1/2 is activated, press **alarm mode** button to cycle through alarm signal format including **iPod**, **FM**, **AM**, and **BEEP** sound.

Adjusting Alarm Clock Time

1. Press and hold **alarm set** button to start adjusting alarm clock time 1. Press $\blacktriangle/\blacktriangledown$ button to adjust hour/minute digits and press **alarm set** button to confirm.
2. Press $\blacktriangle/\blacktriangledown$ button to adjust alarm volume and press **alarm set** button to confirm and continue to start adjusting alarm clock time 2.
3. Repeat above steps to complete alarm clock time settings.

Snooze Function

Press \odot button to extend the alarm for 9 minutes when alarm sounds.

Sleep Timer Function

When the device is **ON**, press **snooze/nap/sleep** button cycle through elapsed time before the device powers down automatically.

Nap Function

When the device is **OFF**, press **snooze/nap/sleep** button cycle through elapsed time before the automatically powers on.

Dimmer Function

During standby mode, press \odot button to cycle through 3 levels of LED brightness.

iPod™ Charging/Docking

Simply connect iPod™ to appropriate port on top of device to charge iPod™.

Backup Batteries

2 X AA batteries can be stored at the button of device to ensure proper functioning of device clock only.