

 
Package Contents

- | | |
|---------------------------|------------------|
| 1 Prestigio iPod™ Speaker | 2 Remote Control |
| 3 Power Adapter | 4 AUX Cable |
| 5 Quick Guide | 6 Warranty Card |


Device Overview

Remote Control


- | | |
|---|-----------------------------|
|  | Power ON/OFF Button |
| menu | Menu Return Function Button |
| enter | Confirm Function Button |
| ▲ | Menu Up Button |
| ▼ | Menu Down Button |
| ◀◀ | Previous Track |
| ▶▶ | Next Track |
| ▶ | Play/Pause |
| ◀ | Turn Up Volume |
| ◀ | Turn Down Volume |
| audio | Switching Audio Mode |

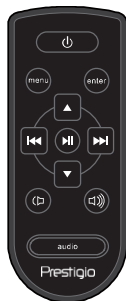


Front View

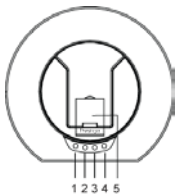 


Rear View

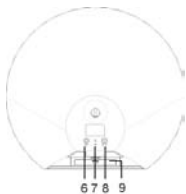 

- | | | |
|---|----------------------|------------------------------|
| 1  | Power/Standby Button | 5 Docking Port |
| 2 Time Setting Button | | 6 Auxiliary Input Port |
| 3 ◀ Volume Down/Previous Track/Previous Station Button | | 7 FM Antenna |
| 4 ▶ Volume Up/Next Track/Next Station Button | | 8 DC IN Jack |
| | | 9 Backup Battery Compartment |

 Basic Functions

1. Pull off the tab at the end of **remote control** to enable the unit.
2. Insert appropriate plug of DC Power Adapter into the wall electrical outlet.
3. Insert power connector of DC Power Adapter into the device.
4. Press  button to turn on the device or press and hold the button to enter stand-by mode.

Music Function

Selecting Mode

Press **audio** button to cycle through **AUX**, **iPod™**, and **FM** modes:

- **iPod™**: Insert iPod™ into designated port on top. Press ▶|| button to start playing, **menu** button to return to previous page, and ▲/▼ to select items.
- **AUX**: Connect external audio device with AUX cable provided. Turn on external audio device to start playback.
- **Radio**: Press ▲/▼ to search for FM stations manually. Press and hold ▲/▼ for 2 seconds to search for FM stations automatically.

Playback Pause

Press ▶|| button to pause playback. Press the button again to resume.

Selecting Track

Press ◀◀/▶▶ button to return/skip to previous/next track.

Adjusting Volume

Press ◀/▶ button to turn down/up volume.

Extra Functions

Horizontal Display

Turn inner iPod™ tray 90° counterclockwise to display image horizontally.

Adjusting Clock Time

1. Press **TIME** button on the device to start adjusting clock time.
2. Press ◀▶ button on the device to adjust hour/minute digits and press **TIME** button to confirm.

iPod™ Charging/Docking

Simply connect iPod™ to appropriate port on top of device to charge iPod™.

Backup Batteries

2 X AA batteries can be stored at the button of device to ensure proper functioning of device clock only.