 


Package Contents

- | | |
|---------------------------|------------------|
| 1 Prestigio iPod™ Speaker | 2 Remote Control |
| 3 DC Power Adapter | 4 AUX Cable |
| 5 Quick Guide | 6 Warranty Card |

Device Overview

Control Panel

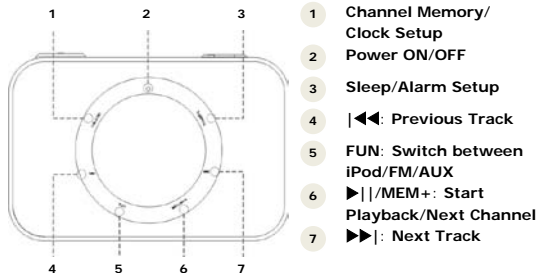 


Top View



- 1 Volume Knob
- 2 SNOOZE/
Brightness Control


Rear View

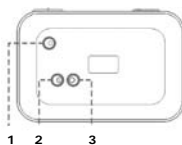

- 1 FM Antenna
- 2 Power Input Port
- 3 Auxiliary Input Port

Remote Control

- | | |
|--|-----------------------------|
| | Power ON/OFF Button |
| | Menu Return Function Button |
| | Menu Up Button |
| | Menu Down Button |
| | Play/Pause/Next FM Station |
| | Confirm Function Button |
| | Previous Track/Rewind |
| | Next Track/Fast Forward |

 

Basic Functions

1. Pull off the tab at the end of **Remote Control** to enable the unit.
2. Insert appropriate plug of DC Power Adapter into the wall electrical outlet.
3. Insert power connector of DC Power Adapter into the device.
4. Press on device to toggle between **Standby Mode** and **Music Mode**.

Music Function

Selecting Mode

Press /FUN to cycle through **AUX**, **iPod™**, and **FM** modes.

iPod™ Mode

Insert iPod™ into designated port on top. Music will start playback automatically.

- Press **MENU** to return to previous page
- Press / to select items and **ENTER** to confirm.

AUX Mode

Connect external audio device with AUX cable provided. Turn on external audio device to start playback.

Radio Mode

- Press |◀◀/▶▶| to search for FM stations manually.
- Press and hold ▲/▼ for 2 seconds to search for FM stations automatically.
- Press **MEM/SET** on device to store current FM station in memory. Press ▶||/MEM+ to designate memory channel and **SET/MEM** to confirm.
- Press ▶|| to skip to next FM station stored in memory.

Playback Pause

Press ▶|| to pause playback. Press the button again to resume.

Selecting Track

Press |◀◀/▶▶| to return/skip to previous/next track.

Adjusting Volume

Press **Volume Knob** to turn down/up volume.

Extra Functions**Adjusting Clock Time**

- Press and hold **MEM/SET** to start time setup.
- Press |◀◀/▶▶| to select time format (12/24 hour), time hour, time minute, and day of the week.
- Press **MEM/SET** to confirm each setting and to complete setup.

Adjusting Alarm Time

- During **Standby Mode**, press and hold **SLEEP/AL** on device to start adjusting alarm time.
- Press |◀◀/▶▶| to select time hour, time minute, day of the week, and alarm method (FM/iPod™/Beep).
- Press **SLEEP/AL** to confirm each setting and to complete setup.

Sleep Function

- During **Music Mode**, press **SLEEP/AL** on device to cycle through sleep counter from **90, 60, 30, 15, 10, 5, and off**.

Charging Dock

Simply connect iPod™ to appropriate port on top of device to charge iPod™.

Backup Batteries

2 X AA batteries can be stored at the button of device to ensure proper functioning of device clock only.

NOTE:

Alkaline batteries will not be functional when DC Power Adapter is connected to device. The design is to avoid damages to Alkaline batteries as a result of difference in electricity voltage.