

 
Introduction

Thank you for purchasing **Prestigio Portable DVD Player 110**, a mobile digital media center. You have made an excellent choice and we hope you will enjoy all of its exciting features. Please read through the user manual carefully before using the product, and follow all of the procedures in this quick guide to fully enjoy all features of the product.

Package Content

- | | |
|---|---------------------------|
| 1. Prestigio Portable DVD Player 110 X 1 | 5. Car Adapter X 1 |
| 2. Remote Control (battery included) X 1 | 6. Earphone X 1 |
| 3. Audio/Video Cable X 1 | 7. Car Bag X 1 |
| 4. AC/DC Power Adapter X 1 | 8. Quick Guide X 1 |

Product & Remote Control Overviews

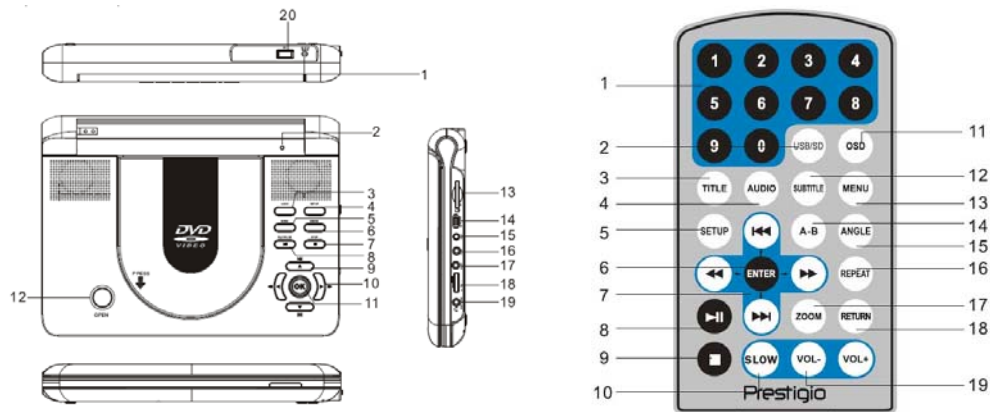

Main Unit

1	DC IN 9V	Connects to AC and car adapter.
2	LCD Switch	Turns ON/OFF LCD Screen.
3	AUDIO Button	Press to select audio language.
4	SETUP Button	Press to enter or to exit from system setup menu.
5	MENU Button	Press to enter or to exit from root menu.
6	USB/SD Button	Press to select media source.
7	STOP/■ Button	Press to stop playback. Press again to stop playback completely.
8	PLAY/PAUSE/▶▶ Button	Press once to pause playback and press it again to resume playback.
9	◀◀/▶▶	Skips to previous track(UP direction) / Skips to next track(DOWN direction)
10	◀◀/▶▶	Rewind(LEFT direction) / Fast Forward(RIGHT direction)



11	OK Button	Press to confirm selection.
12	OPEN Button	Press to open tray cover.
13	SD Card Slot	Receives SD memory card.
14	ON/OFF Switch	Slide to turn power ON/OFF .
15	COAX Jack	Connects to external amplifier/stereo set.
16	AV IN Jack	Connects to external display for audio/video input.
17	AV OUT Jack	Connects to external display for audio/video output.
18	Volume Wheel	Scroll to adjust volume of the headphone or speaker.
19	Earphone Jack	Connects to headphone sets.
20	USB Port	Connects to USB device.

Remote Control


1	0-9 Number Button	Press to select numbers.
2	USB/SD Button	Press to select media source.
3	TITLE Button	Press to display title information.
4	AUDIO Button	Press to select audio language.
5	SETUP Button	Press to enter or to exit from system setup menu.
6	ENTER Button	Press to start playback or to confirm selection.
7	⏮/⏭/⏪/⏩	Press to return/skip to the previous/next list, track, chapter, or scene. Press to rewind/fast forward during playback at a speed of 2X, 4X, 8X, 16X, or 32X. Press to point/scroll UP/DOWN /LEFT/RIGHT.
8	▶ Button	Press once to pause the playback and press it again to resume playback.
9	■ Button	Press to stop playback. Press ▶ button to resume playback at the same point. Press ■ button twice to stop playback completely.
10	SLOW Button	Press to activate the slow playback function.
11	OSD Button	Press to toggle between elapsed and remaining time during playback.
12	SUBTITLE Button	Press to select a subtitle language (multi languages subtitle required). Press again to cancel.
13	MENU Button	Press to return to or exit from root menu during playback.
14	A-B Button	Press to play a selected segment repeatedly. Press again to cancel.
15	ANGLE Button	Press to select camera angles (camera angle adjusting function required).
16	REPEAT Button	Press to select different repeat and shuffle patterns.
17	ZOOM Button	Press to cycle through zooming functions.
18	RETURN Button	Press to return to the main menu.
19	VOL-/VOL+ Button	Press to turn volume down/up.

NOTE:

  Please follow below diagrams to replace battery:

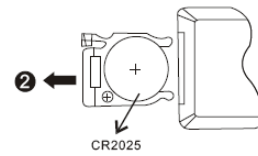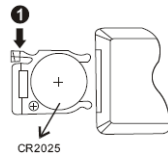

 When using remote control, please make sure the infrared window on remote control is aligned with infrared receiving window of the device. The distance must be within 3 meters. Please refer to the diagram on the right for illustration.

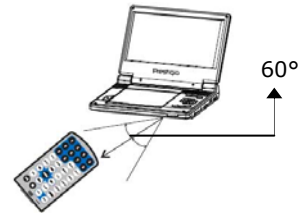

Getting Started

Please read through the instructions below before operating **Prestigio Portable DVD Player 110** for the first time.

To start disc/USB device/SD card media (DVD, MPEG4, SVCD, VCD, CD, MP3) playback:

1. Connect **Prestigio Portable DVD Player 110** to power supply or wall plug via power adapter provided.
2. Adjust the device to the best viewing position desired.
3. Turn on the device by sliding power switch at the left side of unit to **ON** position. The source menu will be displayed on screen:

**DVD
MEDIA**

NOTE:

When selecting media mode, please make USB device or SD/MMC card is properly inserted.

4. Press **⏮/⏭** button to enter DVD Mode or Media Mode and press **ENTER** button to confirm selection.
5. Press **OPEN** button to open disc tray cover. Place the disc with appropriate file formats in the disc tray with printing side facing up. Close the disc tray cover.
6. The device will automatically begin media playback process upon closing of disc tray cover.
7. Adjust playback volume by scrolling **VOLUME** wheel at the left side of device to an appropriate level before playback.
8. Turn off the device by sliding power switch at the left side of unit to **OFF** position.

General Video Playback Operations

Press **■** once to stop playback; then press **▶||** to resume playback from the point where you stopped; press **■** twice to stop playback completely.

- **To pause playback**



DVD **MPEG4** **SVCD** **VCD** **CD** **MP3**

1. During playback, press **▶||** to pause. Press it again to resume playback.

NOTE:

When the device is at idle mode (paused, stopped, no disc), the device will automatically enter screen protection mode after 3 minutes. Press any button to exit.

- **To start title/chapter playback**



DVD **MPEG4** **SVCD** **VCD** **CD** **MP3**

1. Press **MENU** button to enter disc main menu.
2. Press directional buttons to select user desired title/chapter.
3. Press **ENTER** button to confirm.

NOTE:

 
This function is only available if the media disc supports such feature.

- **To fast forward/rewind**




DVD **MPEG4** **SVCD** **VCD** **CD** **MP3**

1. Press **▶▶** to fast forward at speed of 2X, 4X, 8X, 16X, and 32X in cycle.



 
2. Press **◀◀** to rewind at speed of 2X, 4X, 8X, 16X, and 32X in cycle.



- **To repeat**

DVD **MPEG4** **SVCD** **VCD** **CD** **MP3**

 
1. During DVD disc playback, Press **REPEAT** button to cycle through repeating patterns including **Chapter Repeat**, **Title Repeat**, **Disc Repeat**, and **Repeat Off**.

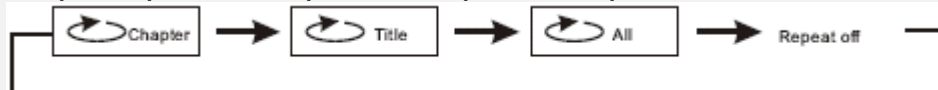


- During CD/VCD disc playback, Press **REPEAT** button to cycle through repeating patterns including **Track Repeat**, **Disc Repeat**, and **Repeat Off**.



 - During MP3 disc playback, Press **REPEAT** button to cycle through repeating patterns including **File Repeat**, **Folder Repeat**, and **Repeat Off**.



- To repeat a specific segment

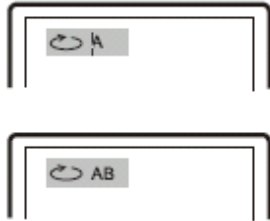 

DVD **MPEG4** **SVCD** **VCD** **CD** **MP3**

 
- Press **A-B** button once to set the starting point **A**.
- Press it again to designate end point **B**.
- The segment from A to B will be played repeatedly.
- Press the button again to stop A-B repeat function.

- To adjust display angle



DVD **MPEG4** **SVCD** **VCD** **CD** **MP3**

- Press **ANGLE** button to adjust display angle.
- Press number buttons to select a display angle desired.



- Press **ANGLE** button again to resume default angle playback.

NOTE:

 
This function is only available if the media disc supports multi-angle feature.

- To zoom in/out



DVD **MPEG4** **SVCD** **VCD** **CD** **MP3**

- Press **ZOOM** button to zoom in/out at factors of 2X, 3X, 4X, 1/2X, 1/3X, 1/4X in cycle.




- Press **⏮/⏭** buttons to select a display angle desired.

General Image Playback Operations

1. Press **MENU** button to browse *.jpg files. Press **■** to display image files in thumbnail mode. Press **◀/▶** to move up/down the directory and **◀◀/▶▶** to select image files. To view desired image files for full screen display, press **ENTER** to confirm selection.
2. Press **▶▶/◀◀** to rotate the image file clockwise/counter-clockwise.
3. Press **◀◀/▶▶** to reverse the image files vertically/horizontally.
4. Press **OSD** button to cycle through various image transition modes:


A	From top to bottom	I	From horizontal center to both sides
B	From bottom to top	J	From vertical center to both sides
C	From left side to right side	K	From top and bottom to center
D	From right side to left side	L	From right and left to center
E	From left top to right bottom	M	From four window top side to bottom side
F	From right top to left bottom	N	From four window left side to right side
G	From left bottom to right top	O	From four edges to center
H	From right bottom to left top		
5. \emptyset icon will be displayed when the options are not available at this mode.

 General Music Playback Operations





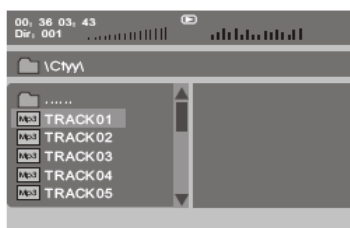


1. Press **◀◀/▶▶** button to select desired MP3 file. Press **ENTER** button to start playback.
2. Please refer to **General Video Playback Operations** section for more detailed function description.

 System Setup

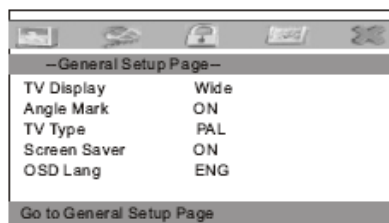

     1. Press **SETUP** button to enter setup menu.
2. Press **◀/▶** button to highlight various categories. Press **◀◀/▶▶** button to select options.
3. Press **ENTER** button to confirm selection. Press **◀** button to exit.

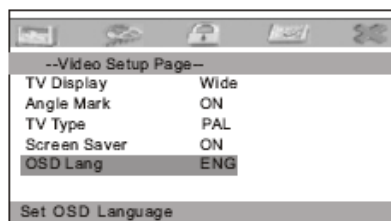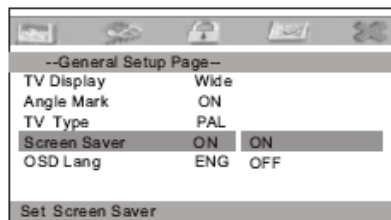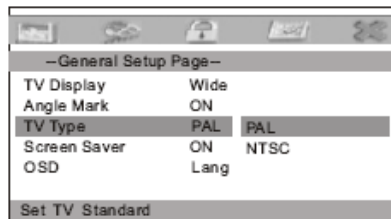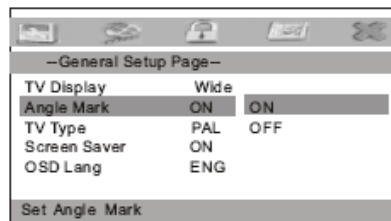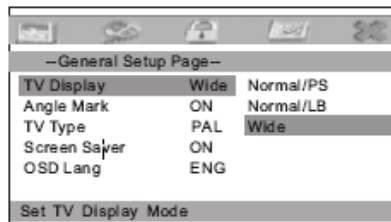**TV Display:**

Adjusts screen display format between **Normal/PS**, **Normal/LB**, and **Wide**.

Note:

- This option is determined by the screen ratio from which DVD disc is recorded.
- Please select **Wide** when using a 16:9 TV display.

Angle Mark:

- Enables/Disables the multi-angle function.
- A camera icon will be displayed on the screen when such function is supported by the media file.

TV Type:

- Adjusts TV type from **PAL** or **NTSC**.
- The default value is set on **PAL** TV type.

 
Screen Saver:

- Enables/Disables the screen saver function.
- The screen saver function will be activated when the device is idle for more than 3 minutes.
- The default value is set to **ON**.

OSD Lang:


- Adjusts the OSD language.
- The default value is set on **ENG**.

Video Setup Page

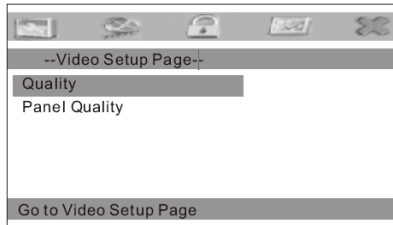

Quality:

 
- Adjusts video output screen options including **Brightness, Contrast, Hue, and Saturation**.
- The default values are **00**.

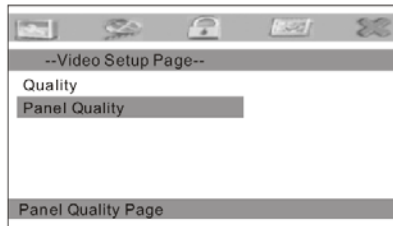

Panel Quality:

- Adjusts device screen options including **Brightness, Contrast, Hue, and Saturation**.
- The default values are **00**.

 
Password Setup Page

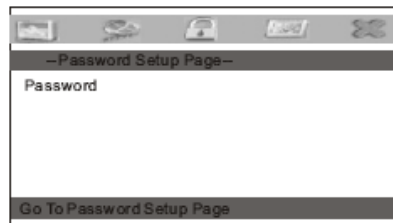

Password:

- Defines/Modifies password.
- All parental control features are password protected.
- The default values are **8888**.

 Preference Page

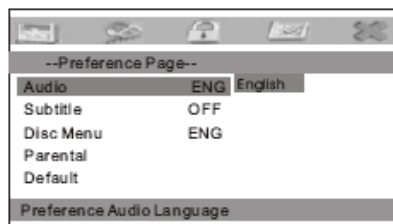


Audio:

- Adjusts to desired audio language of DVD disc.
- The default language is **ENG**.

NOTE:

 - The audio languages are provided by DVD disc.



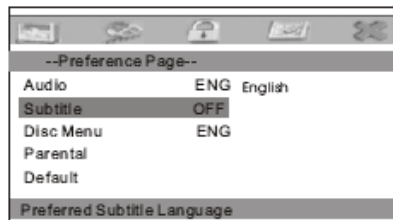


Subtitle:

- Enables/Disables/Adjusts to desired subtitle language of DVD disc.
- The default value is **OFF**.

NOTE:

   - The subtitle languages are provided by DVD disc.

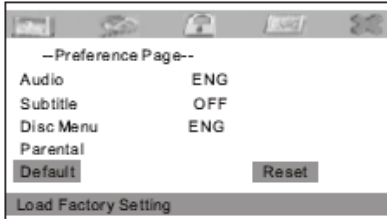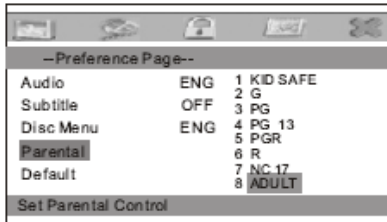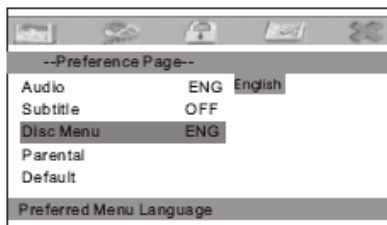

Disc Menu:

- Adjusts to desired menu language of DVD disc.
- The default language is **ENG**.

NOTE:

- This function is only available for DVD disc.

Parental:

- Locks up specific segments of DVD contents.
- Sets to various parental control levels of DVD disc.
- The default value is set to **ADULT**.

Default:

- Select the option and press **ENTER** button to restore all settings to factory values.

Charging Device

- The device battery is made of Lithium Polymer rechargeable batteries. Please fully charge the battery pack before using for the first time.
- Charging time under normal conditions is approximately 6 hours. A fully charged battery pack delivers approximately 2 hours of main unit operation. However, operation time varies in accordance with the files being played.
- A **Low Battery** sign will be displayed when battery is running low. The battery will be depleted completely after 10 minutes.
- The battery can only be recharged when the device is in power off mode. Please turn off the device before recharging battery. The battery status LED indicator will glow in red while charging. It turns yellow when the device battery is fully charged.

Using Car Bag

Follow the steps below to attach the Prestigio Portable DVD Player 110 onto the car seat headrests.

1. Open up the car bag included and detach hook-and-loop fasteners.
2. Place the device into the car bags with the base at the deeper side.
3. Put attached bands on left and right sides of the base and screen to fix its positions.
4. Re-attach hook-and-loop fasteners to desired positions.
5. Unbuckle and loosen up the strap on the back of car bag.
6. Insert the strap through the gap on the car seat headrest.
7. Adjust the length of the straps to fit the car seat headrest and buckle up.

Product Specifications

Compatible Disc Format	DVD±RW/RW, VCD, CD-R/RW, CD-DA,MP3, MPEG4, JPEG
Signal System	PAL/NTSC
TFT LCD screen size	10.2 inch
Frequency Response	20Hz~20kHz ±2.5dB
Video Output	Output Level: 1.0V _{p-p} , Load: 75Ω, unbalanced
Audio Output	Output level: 1.4V _{rms} , Load: 10KΩ
Audio Signal-to-Noise Rate	≥80dB
Dynamic Range	≥85dB
USB Data Transfer Speed	USB1.1
Power Source	DC 9~12V
Power Consumption	10W
Operating Temperature	5~40°C
Weight	0.78Kg
Dimensions (L * W * H)	270mm X 200mm X 41mm
Battery Type	Lithium Polymer Rechargeable Battery

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. **Prestigio** reserves the right to make any changes without further notice to any products herein.