

# Table of Contents

## **1 GETTING STARTED**

---

- 1.1 SAFETY PRECAUTIONS
- 1.2 COPYRIGHT PROTECTION
- 1.3 PACKAGE CONTENT

## **2 MAIN UNIT VIEWS**

---

- 2.1 FRONT VIEW
- 2.2 RIGHT SIDE VIEW
- 2.3 LEFT SIDE VIEW
- 2.4 BOTTOM VIEW

## **3 2ND MONITER VIEWS**

---

- 3.1 FRONT VIEW
- 3.2 RIGHT SIDE VIEW
- 3.3 BUTTOM VIEW

## **4 REMOTE CONTROL OVERVIEW**

---

- 4.1 BUTTON DEFINITION
- 4.2 REMOTE CONTROL BATTERY INSTALLATION

## **5 SYSTEM CONNECTIONS**

---

- 5.1 CONNECTING TO TV
- 5.2 CONNECTING TO AMPLIFIER
- 5.3 CONNECTING TO HEADPHONES
- 5.4 CONNECTING TO AC ADAPTER
- 5.5 CONNECTING TO CAR ADAPTER
- 5.6 CONNECTING TO MAIN UNIT

## **6 BATTERY PACK OPERATIONS**

---

### **6.1 ATTACHING/DETACHING BATTERY PACK**

### **6.2 CHARGING BATTERY PACK**

## **7 SOFTWARE COMPATIBILITY**

---

### **7.1 COMPATIBLE DISC FORMAT**

### **7.2 DISC MAINTENANCE**

## **8 GENERAL OPERATION**

---

### **8.1 BEFORE PLAYING**

### **8.2 ADJUSTING SCREEN ASPECT RATIO**

## **9 DVD DISC PLAYBACK OPERATIONS**

---

## **10 CD DISC PLAYBACK OPERATIONS**

---

## **11 JPEG FILE VIEWING OPERATIONS**

---

## **12 SYSTEM SETUP**

---

## **13 USING STRAPS**

---

## **14 TROUBLESHOOTING**

---


## **15 APPENDIX**

---

### **15.1 PRODUCT SPECIFICATION**

### **15.2 TECHNICAL SUPPORT AND WARRANTY INFORMATION**

### **15.3 DISCLAIMER**

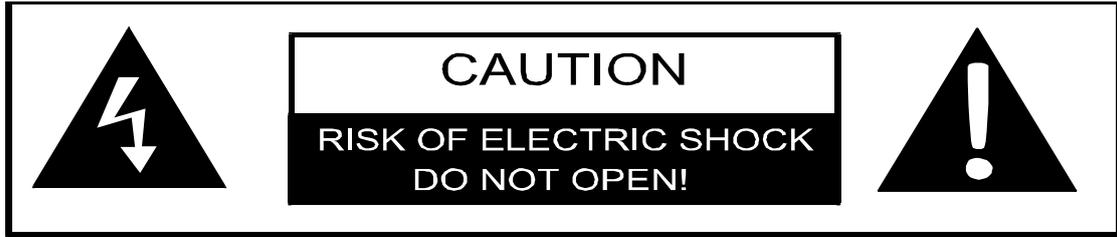

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**WARNING:**

The device emits laser radiation when opened. Do NOT stare into laser beam directly.



**CAUTION:**

- The product is equipped with a low power laser device. To ensure the quality of the laser device, do NOT open up the case or attempt to repair the unit. Please contact authorized service center for any service required.
- To reduce the risk of electric shock, do NOT remove the cover. No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is not used for a long period of time.
- The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer or authorized organization.

# 1 Getting Started

Thank you for purchasing **Prestigio PPDP 370 Twin**, a mobile digital media center. You have made an excellent choice and we hope you will enjoy all of its exciting features. Please read through the user manual carefully before using the product, and follow all of the procedures in the manual to fully enjoy all features of the product.

## 1.1 Safety Precautions

Please observe all safety precautions before using **Prestigio PPDP 370 Twin**. Please follow all procedures outlined in this manual to correctly operate the device.



**Warning:** This mark indicates actions that could lead to serious injury to personnel operating the device or damage to the device if ignored or handled incorrectly.

- Do not attempt to disassemble or alter any part of the device that is not described in this guide.
- Do not place the device in contact with water or any other liquids. The device is NOT designed to be liquid proof of any sort.
- In the event of liquid entry into interior of device, immediately disconnect the device from the computer. Continuing use of the device may result in fire or electrical shock. Please consult your product distributor or the closest support center.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
- Do not place the device near a heat source or directly expose it to flame or heat.
- Never place the device in vicinity of equipments generating strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or data corruption and loss.

## 1.2 Copyright Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright

protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, the DVD disc can not be played by the unit. **Prestigio PPDP 370 Twin** is coded with region number 2 and is intended for European standard DVD disc use only.

### 1.3 Package Content

Item	Description	Quantity
	Prestigio PPDP 370 Twin DVD Player	1
	2 <sup>nd</sup> Monitor	1
	Battery Pack	1
	User Manual	1
	Warranty Card	1
	Documentation CD	1
	Remote control (battery included)	1
	Car Adapter	1
	Power Supply Cable with AC Adapter	1
	Audio/Video Cable	2
	Power Supply Cable	1



## 2 Main Unit Views

### 2.1 Front View



Number	Button Name	Function
1	-/+ Button	Press to adjust the screen brightness and color.
2	<b>AUDIO</b> Button	Press to cycle through different language when playing a DVD disc (multiple languages subtitle required).
3	<b>FUNC</b> Button	Press to change the brightness and color level. Press and hold for 1-2 seconds to change the aspect ratio between 16:9 and 4:3.
4	<b>SLOW</b> Button	Press to activate the slow playback function.
5	<b>A-B</b> repeat Button	Press to play a certain selected segment repeatedly.
6	■ (Stop) Button	Press to stop playback. Then press the ►  button to resume playback from the

		stopped spot. Press twice to stop playback completely.
7	▶  (PLAY/PAUSE) Button	Press once to pause the playback and press it again to resume playback.
8	▲/▶▶ Button	Press to scroll up or to fast forward during playback.
9	▶/▶▶ Button	Press to scroll right or to skip to the next list, track or chapter.
10	ENT Button	Press to start playback or to confirm selection.
11	▼/◀◀ Button	Press to scroll down or to rewind during playback.
12	◀/◀◀ Button	Press to scroll left or to return to the previous list, track or chapter.
13	MENU Button	Press to enter menu or to exit from the menu.
14	SETUP Button	Press to enter or to exit from system setup.
15	TITLE Button	Press to enter the title menu if available.
16	Remote Control Sensor	
17	Speaker	
18	LCD Screen	

## 2.2 Right Side View



Number	Button Name	Function
1	<b>VOLUME</b> Control	Scroll left and right to adjust volume of the headphone or speaker.
2	Headphone Jack	Connects to headphone sets. Speakers automatically mute when headphone sets inserted.
3	<b>AUDIO OUTPUT</b> Jack	Connects to external amplifier.
4	<b>VIDEO OUTPUT</b> Jack	Connects to external monitor.
5	<b>DC 12V INPUT</b> Jack	Connects to AC and car adapter.


6	OPEN Switch	Press to open disc tray cover.
7	Disc Tray Cover	Press to close cover after disc is loaded.

### 2.3 Left Side View



Number	Button Name	Function
1	Headphone Jack	Connects to headphone sets. Speakers automatically mute when headphone sets inserted.
2	Power Switch	Slide to turn power <b>ON/OFF</b> .

### 2.4 Bottom View

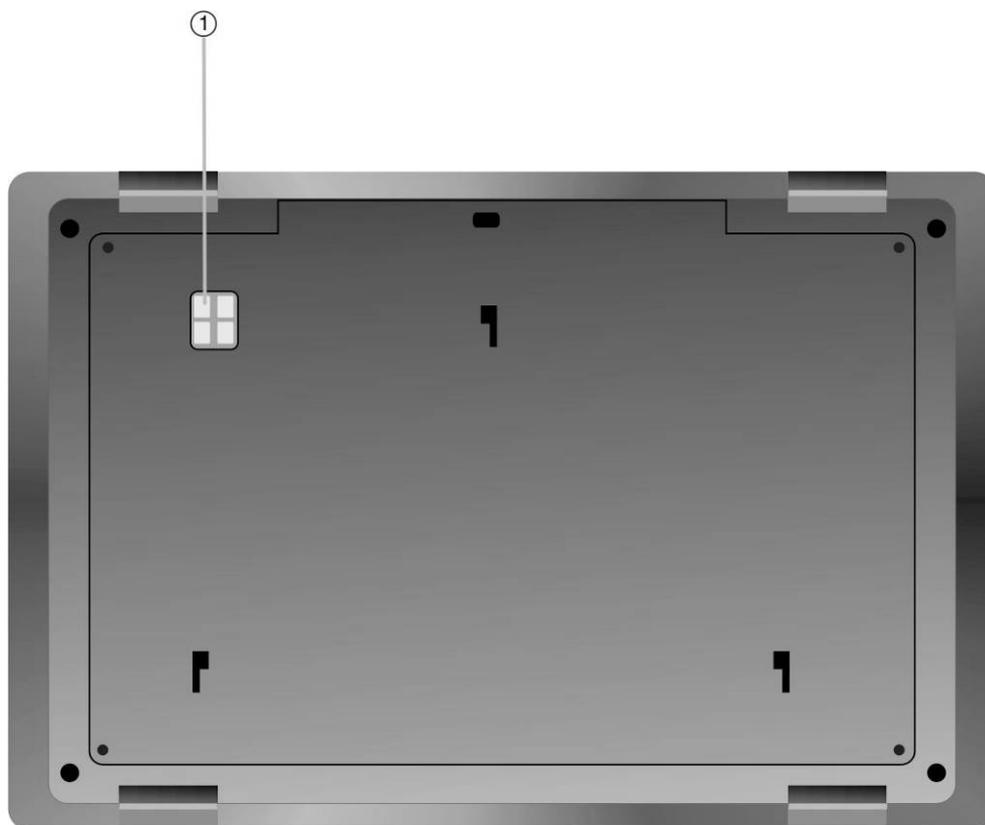


Number	Button Name	Function
--------	-------------	----------

1	Rechargeable Battery Interface	Connects to rechargeable battery pack.
---	--------------------------------	--

### 3 2nd Monitor Views

#### 3.1 Front View

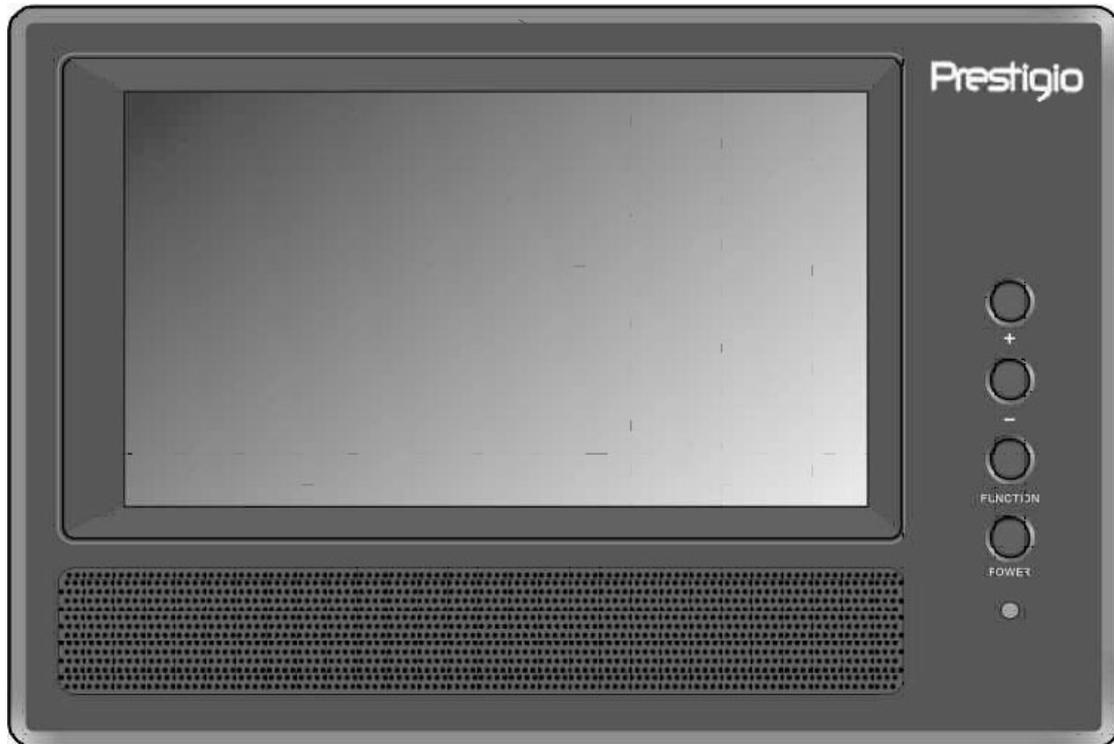


Number	Button Name	Function
1	-/+ Button	Press to adjust the screen brightness and color.
2	<b>FUNC</b> Button	Press to change the brightness and color level. Press and hold for 1-2 seconds to change the aspect ratio between 16:9 and 4:3.
3	<b>Power</b> Button	Press to exit from or enter standby mode.
4	Power Indicator	The light shines red during standby mode.
5	Speaker	
6	LCD Screen	

#### 3.2 Right Side View



Number	Button Name	Function
1	<b>VOLUME</b> Control	Scroll left and right to adjust volume of the headphone or speaker.
2	Headphone Jack	Connects to headphone sets. Speakers automatically mute when headphone sets inserted.
3	<b>AUDIO INPUT</b> Jack	Connects to main unit for audio input.
4	<b>VIDEO INPUT</b> Jack	Connects to main unit for video input.
5	<b>DC 12V INPUT</b> Jack	Connects to AC and car adapter.
7	<b>DC 12V OUTPUT</b> Jack	Connects to main unit for power output.


### 3.3 Bottom View

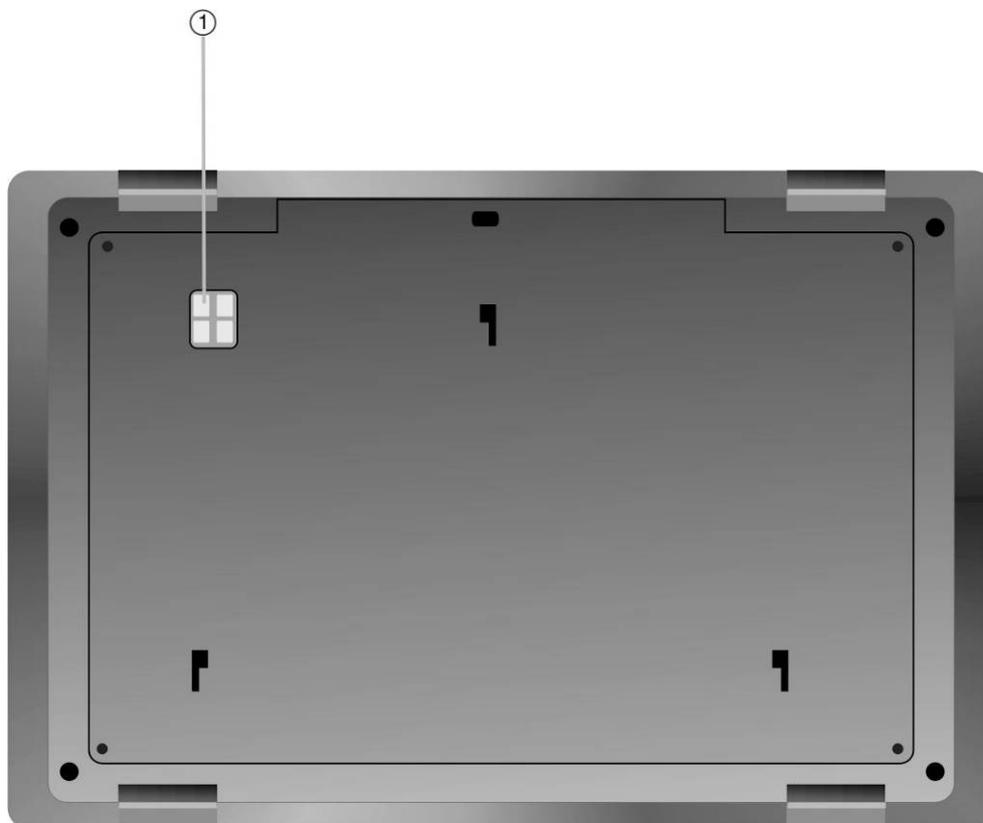

Number	Button Name	Function
1	Rechargeable Battery Interface	Connects to rechargeable battery pack.

## 4 Remote Control Overview

### 4.1 Button Definition



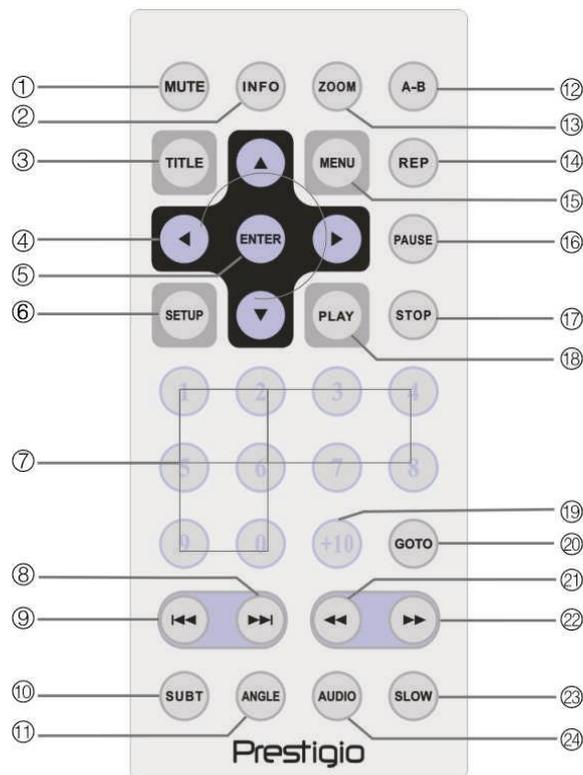


Number	Button Name	Function
1	<b>MUTE</b> Button	Press to turn speaker On/Off.
2	<b>INFO</b> Button	Press to display detailed file information. Press again to cancel.
3	<b>TITLE</b> Button	Press to enter the title menu if available.
4	▲ ▼ ► ◀ Directional Button	Press to navigate between different options.
5	<b>ENTER</b> Button	Press to start playback or to confirm selection.

<b>6</b>	<b>SETUP</b> Button	Press to enter or to exit system setup.
<b>7</b>	<b>0-9</b> Number Button	Press to select numbers.
<b>8</b>	<b>▶▶</b> Next Button	Press to skip to the next list, track, or chapter.
<b>9</b>	<b>◀◀</b> Previous Button	Press to return to the previous list, track or chapter
<b>10</b>	<b>SUBT</b> Button	Press to select a subtitle language (multi languages subtitle required). Press again to cancel.
<b>11</b>	<b>ANGLE</b> Button	Press to select camera angles (camera angle adjusting function required).
<b>12</b>	<b>A-B</b> Button	Press to play a certain selected segment repeatedly.
<b>13</b>	<b>ZOOM</b> Button	Press to cycle through zooming functions.
<b>14</b>	<b>REP</b> Button	Press to select different repeat and shuffle patterns.
<b>15</b>	<b>MENU</b> Button	Press to return to or exit from the menu during playback.
<b>16</b>	<b>PAUSE</b> Button	Press to pause playback and press <b>PLAY</b> button to resume playback.
<b>17</b>	<b>STOP</b> Button	Press to stop playback. Press <b>PLAY</b> button to resume playback at the same point. Press <b>STOP</b> button twice to stop playback completely.
<b>18</b>	<b>PLAY</b> Button	Press to start playback.
<b>19</b>	<b>+10</b> Button	Press to select numbers greater than 9.
<b>20</b>	<b>GOTO</b> Button	Press to skip to a user defined title, chapter number or time.
<b>21</b>	<b>◀◀</b> Rewind Scan Button	Press to rewind during playback.
<b>22</b>	<b>▶▶</b> Forward Scan Button	Press to fast forward during playback.
<b>23</b>	<b>SLOW</b> Button	Press to activate the slow playback function.
<b>24</b>	<b>AUDIO</b> Button	Press to cycle through different language when playing a DVD disc (multiple languages subtitle required).

## 4.2 Remote Control Battery Installation

The remote control battery is included in the package. Please follow below steps to change battery when power runs out.
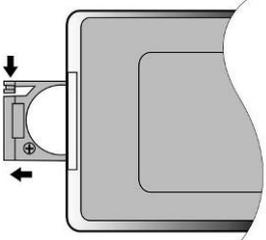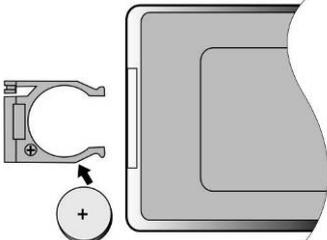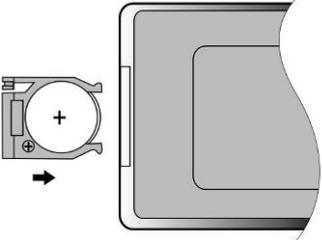
<p>1. Push and hold on the side of battery holder, then pull it out from the remote control unit as shown in the diagram.</p>	
<p>2. Place a battery with type of CR2025 3V on the holder with (+) facing the back of remote control.</p>	
<p>3. Push the battery holder back into the remote control unit. Please make sure that the holder is firmly inserted.</p>	



### CAUTION:

- Do NOT expose the remote control unit under direct sunlight.
- Do NOT recharge, dismantle, or heat up the battery.
- Replace the exhausted battery immediately to ensure proper remote control unit functioning.

## 5 System Connections




### **WARNING:**

- Please switch off all devices such as TV, DVD player, etc. before connecting to the unit.
- Please match color coding on the unit and devices before connection.


### 5.1 Connecting to TV

Follow the diagram below to connect **Prestigio PPDP 370 Twin** with TV via Audio/Video cable.

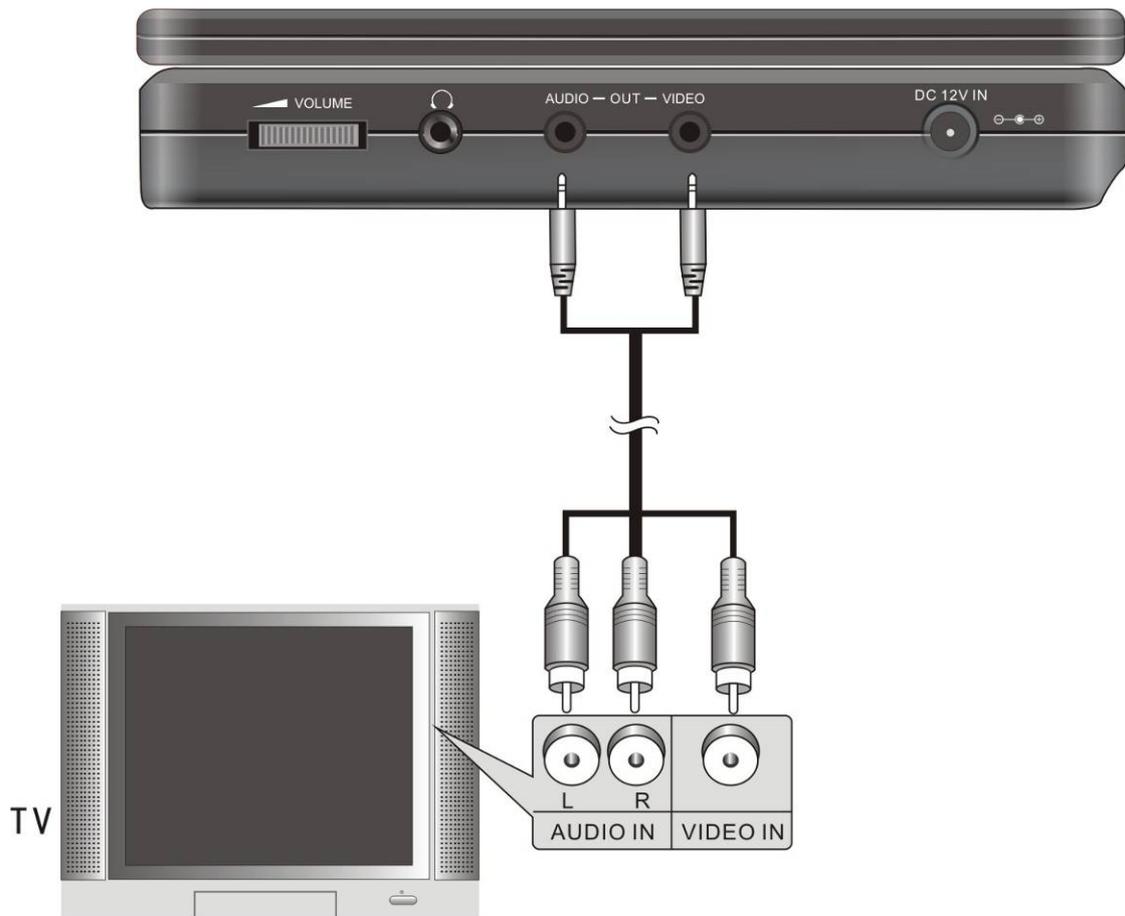


## 5.2 Connecting to Amplifier

Follow the diagram below to connect **Prestigio PPDP 370 Twin** with amplifier via Audio/Video cable.

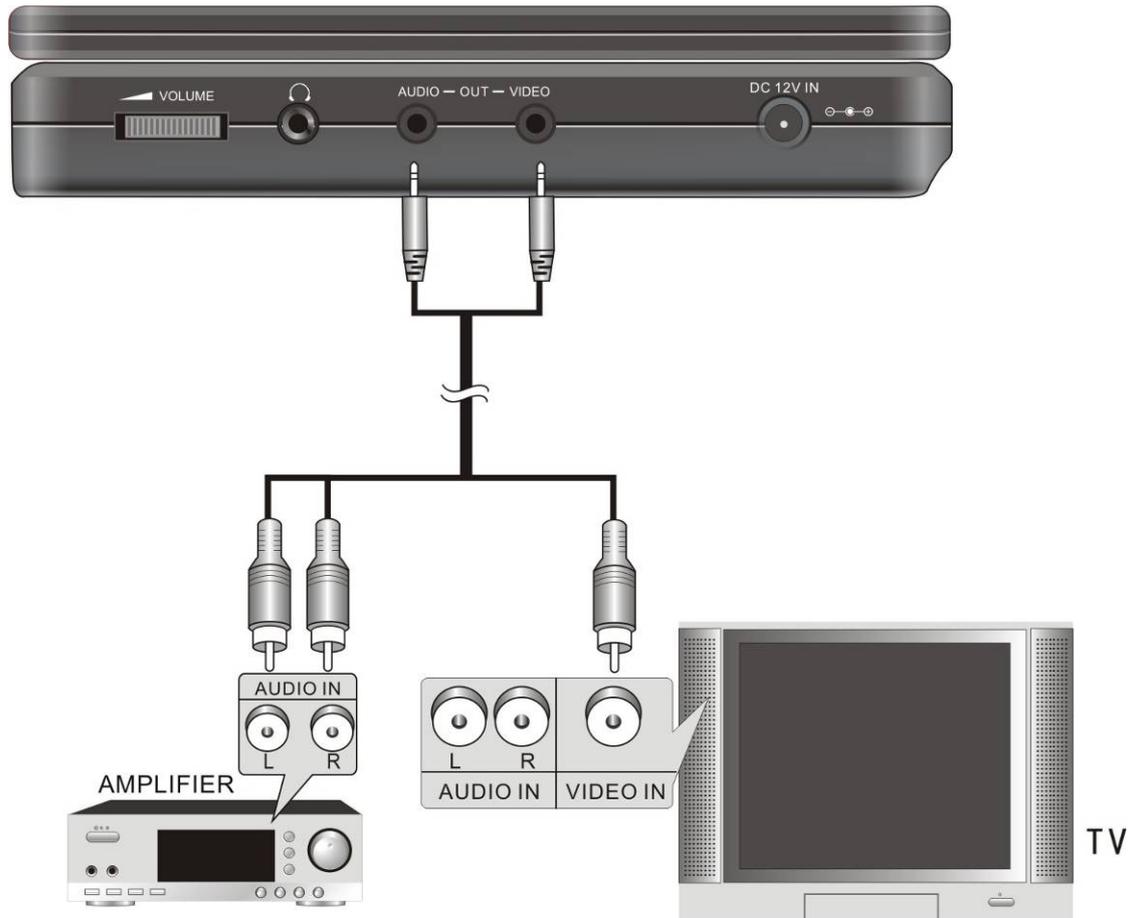

### 5.3 Connecting to Headphones

Follow the diagram below to connect **Prestigio PPDP 370 Twin** with headphone.

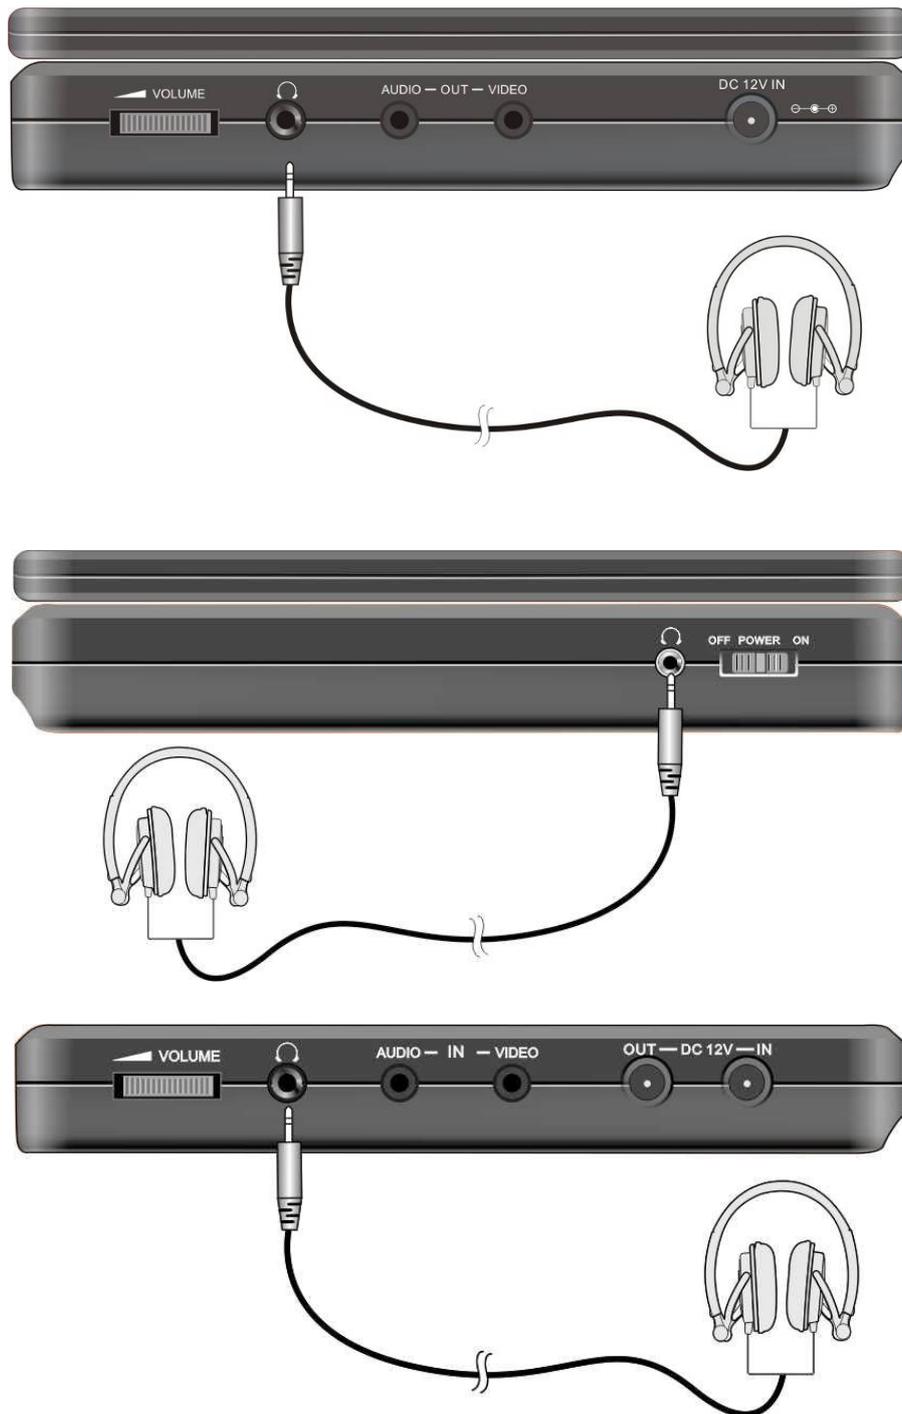


**WARNING:**

Excessively loud volume may detriment hearing. Turn down the volume before connecting to the earphone and then raise the volume to appropriate level.

**5.4 Connecting to AC Adapter**


Follow the diagram below to connect **Prestigio PPDP 370 Twin** to AC adapter

for powering unit.

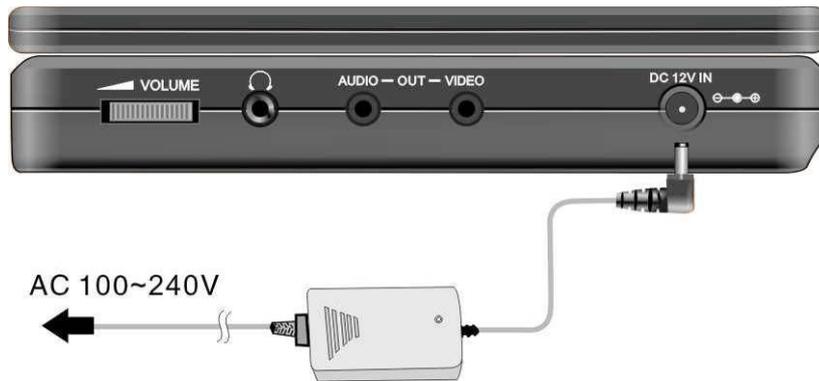

## 5.5 Connecting to Car Adapter

Follow the diagram below to connect **Prestigio PPDP 370 Twin** to car adapter for powering up the unit in car.

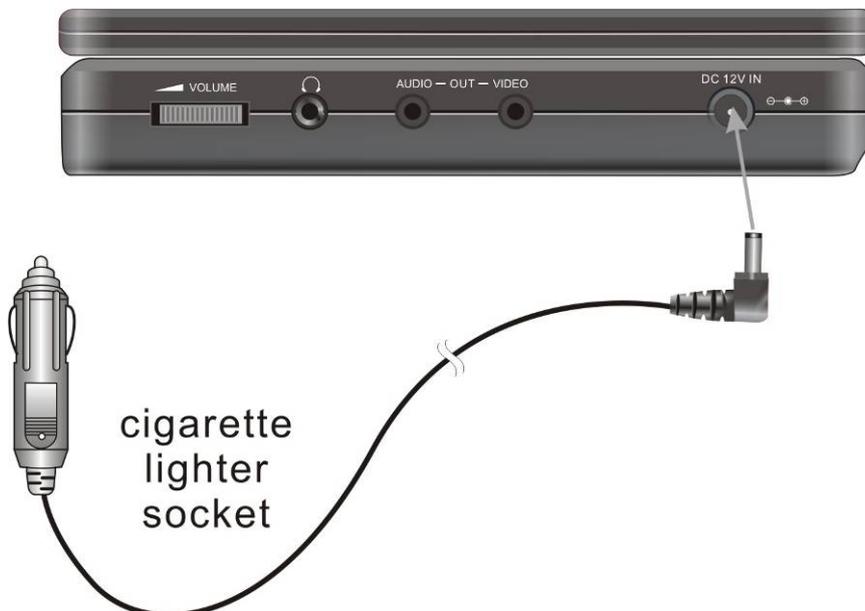

### WARNING:

- Please disconnect Prestigio PPDP 370 Twin from the car adapter before starting up the vehicle.
- Do NOT operate the unit or use the device for viewing purpose while operating a vehicle.
- Please place the unit in proper viewing angle for better performance.

## 5.6 Connecting to Main Unit



Follow the diagram below to connect **Prestigio PPDP 370 Twin** to 2nd

monitor unit. Connect the power adapter to 2nd monitor unit only and connect 2nd monitor unit to main unit using the power supply cord provided. Connect both units using the audio and video cable provided.



## 6 Battery Pack Operations

### 6.1 Attaching/Detaching Battery Pack
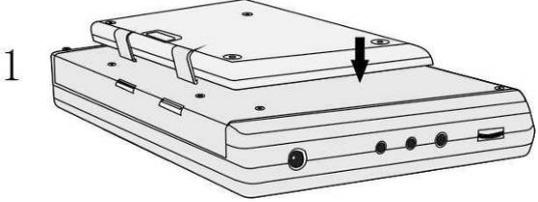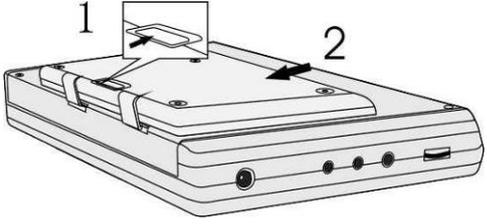
<p>1. Hold down the main unit with one hand to prevent it from moving. Align plastic latches on the battery pack with corresponding receptacles and push it in towards the unit.</p>	
<p>2. Slide the battery pack until it clicks onto the unit.</p>	
<p>3. To remove the battery pack, press and hold the release tab as shown in illustration 1. 4. Gently slide the battery pack towards the top of the unit as shown in illustration 2.</p>	

## 6.2 Charging Battery Pack

The battery pack included is made of Lithium Polymer rechargeable batteries. Please fully charge the battery pack before using for the first time. Charging time under normal conditions is approximately 5 hours. A fully charged battery pack delivers approximately 2.5 hours of main unit operation, however, operation time varies in accordance with the files being played.



### **WARNING:**

- Please remove the battery pack if it is not being used.
- Please fully charge the battery pack before attaching it to unit.
- Battery pack should only be used and charged between temperatures of 32°F ~ 100°F.
- Do NOT expose the battery pack to sources that radiates heat.
- Maintain well-ventilated environments around the battery pack to avoid over-heating.

## 7 Software Compatibility

### 7.1 Compatible Disc Format

Disc Format	Disc Logo	Disc Size	Playback Time/ Playable Sides
DVD		12cm	133 min (SS-SL)
			242 min (SS-DL)
			266 min (DS-SL)
			484 min (DS-DL)
		8cm	41 min (SS-SL)
			75 min (SS-DL)
			82 min (DS-SL)
			150 min (DS-DL)
CD		12cm	74 min
		8cm	20 min
JPEG	N/A	12cm	N/A

## 7.2 Disc Maintenance

- **Holding Discs**

Avoid touching the playing surface of discs for it may damage the disc surface.



- **Cleaning Discs**

Fingerprints or stain on the disc may affect the quality of sound and picture. Gently wipe the surface of disc by clean soft cloth for cleaning purpose. Moisten a soft cloth with diluted neutral detergent to remove heavy dirt or fingerprints if necessary.



Do not wipe in a circular motion (concentric scratches on the disc surface tend to cause noise). Gently wipe from the center of the disc to the outer edge as the right figure.



## 8 General Operation

Please read through the instructions below before operating **Prestigio PPDP 370**

Twin for the first time.




**WARNING:**

Do NOT play poor quality discs for it will damage the lens.


### 8.1 Before Playing

1. Connect **Prestigio PPDP 370 Twin** to power supply or wall plug via power adapter provided.
2. Turn on unit by sliding power switch at the left side of unit to ON position.
3. Press OPEN button to open disc tray cover. Place the disc in the disc tray with printing side face up. Close the disc tray cover.

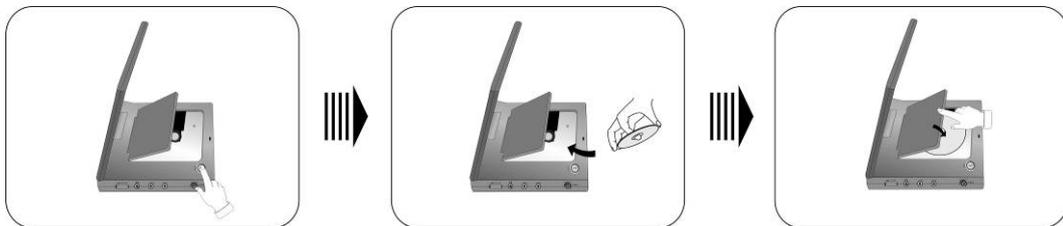



4. The device will automatically begin disc playback process.
5. Adjust the volume by scrolling volume control at the right side of unit to an appropriate level before playback.
6. Turn off unit by sliding power switch at the left side of unit to OFF position.

### 8.2 Adjusting Screen Aspect Ratio

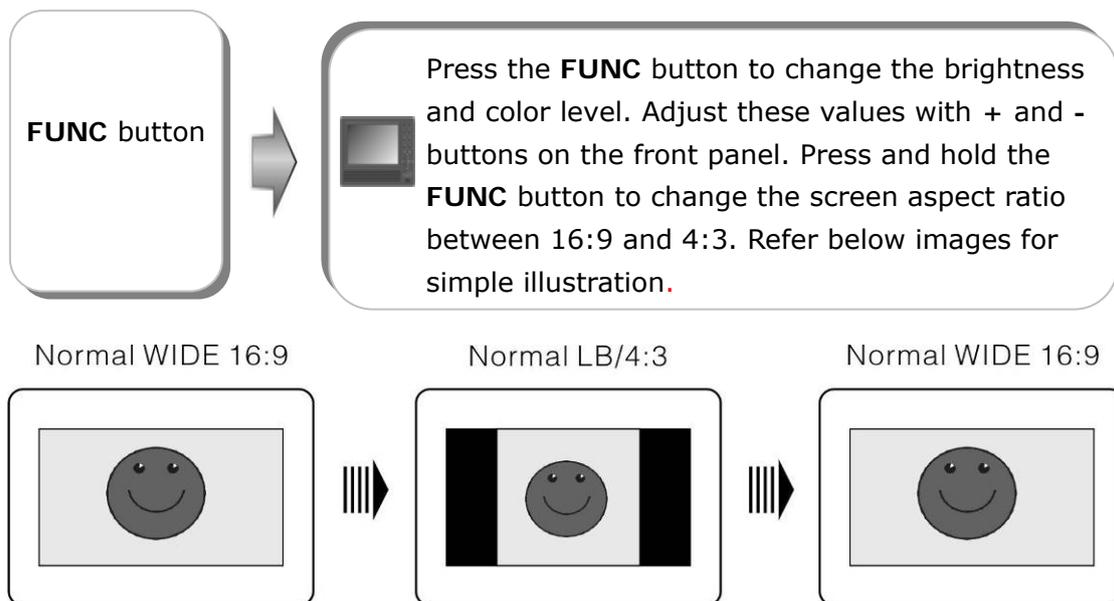

## 9 DVD Disc Playback Operations

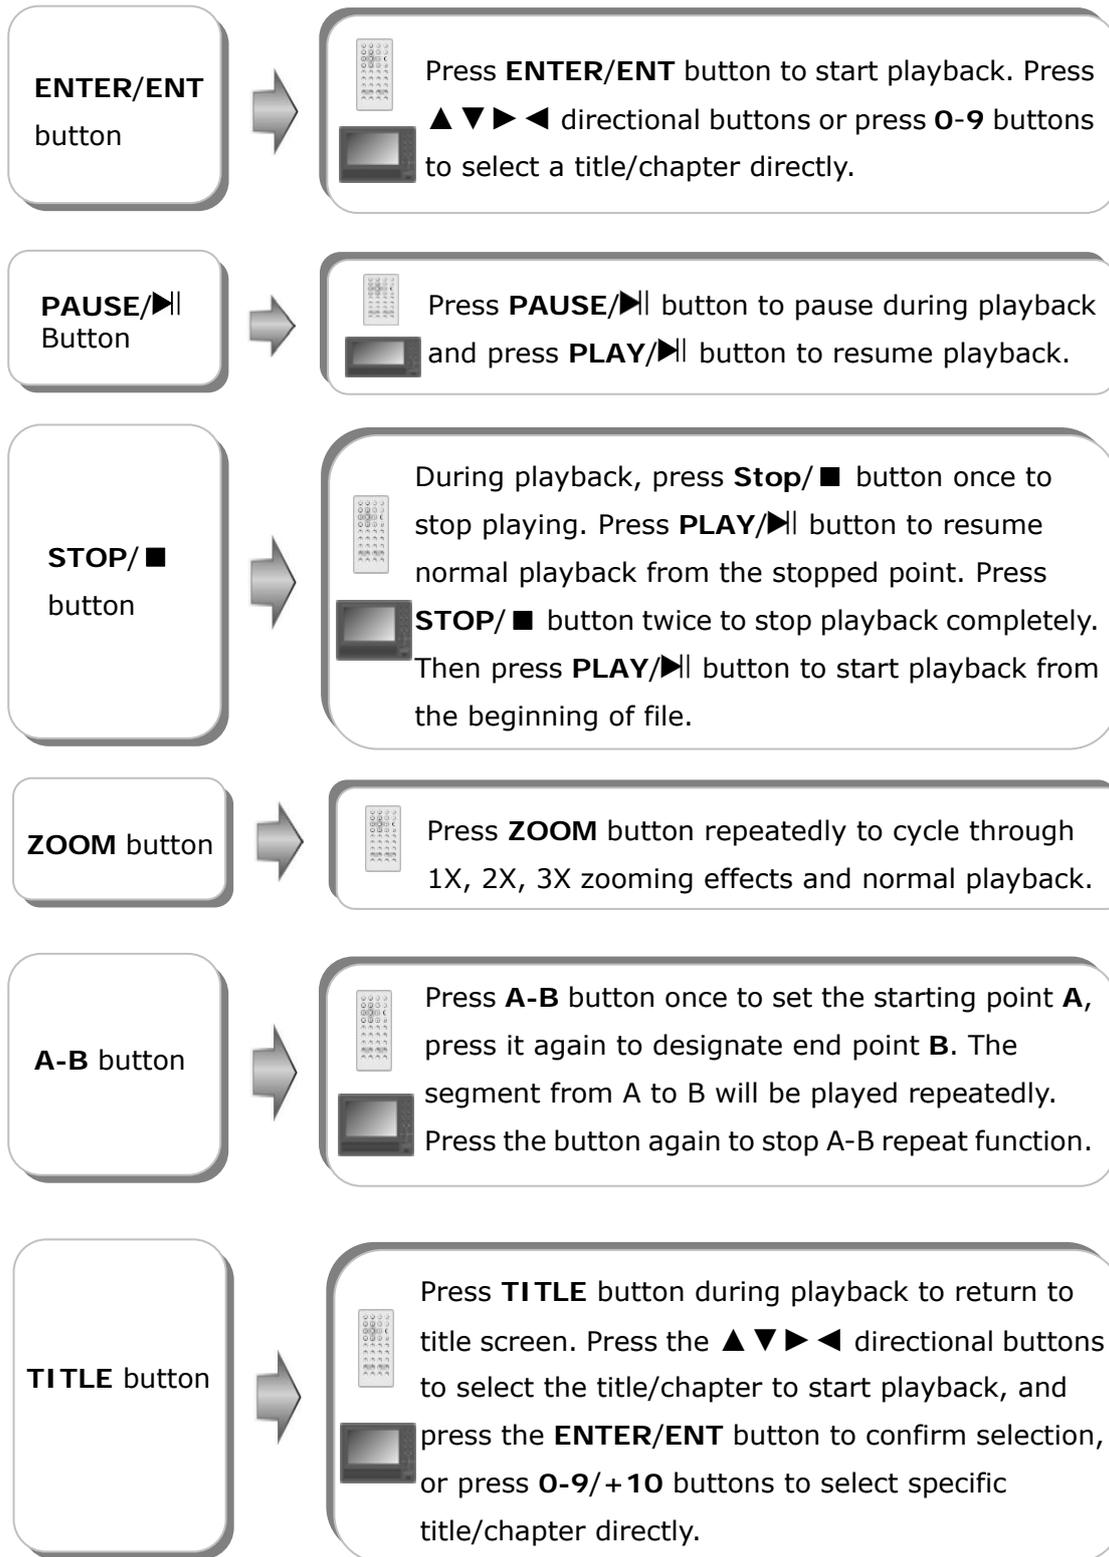

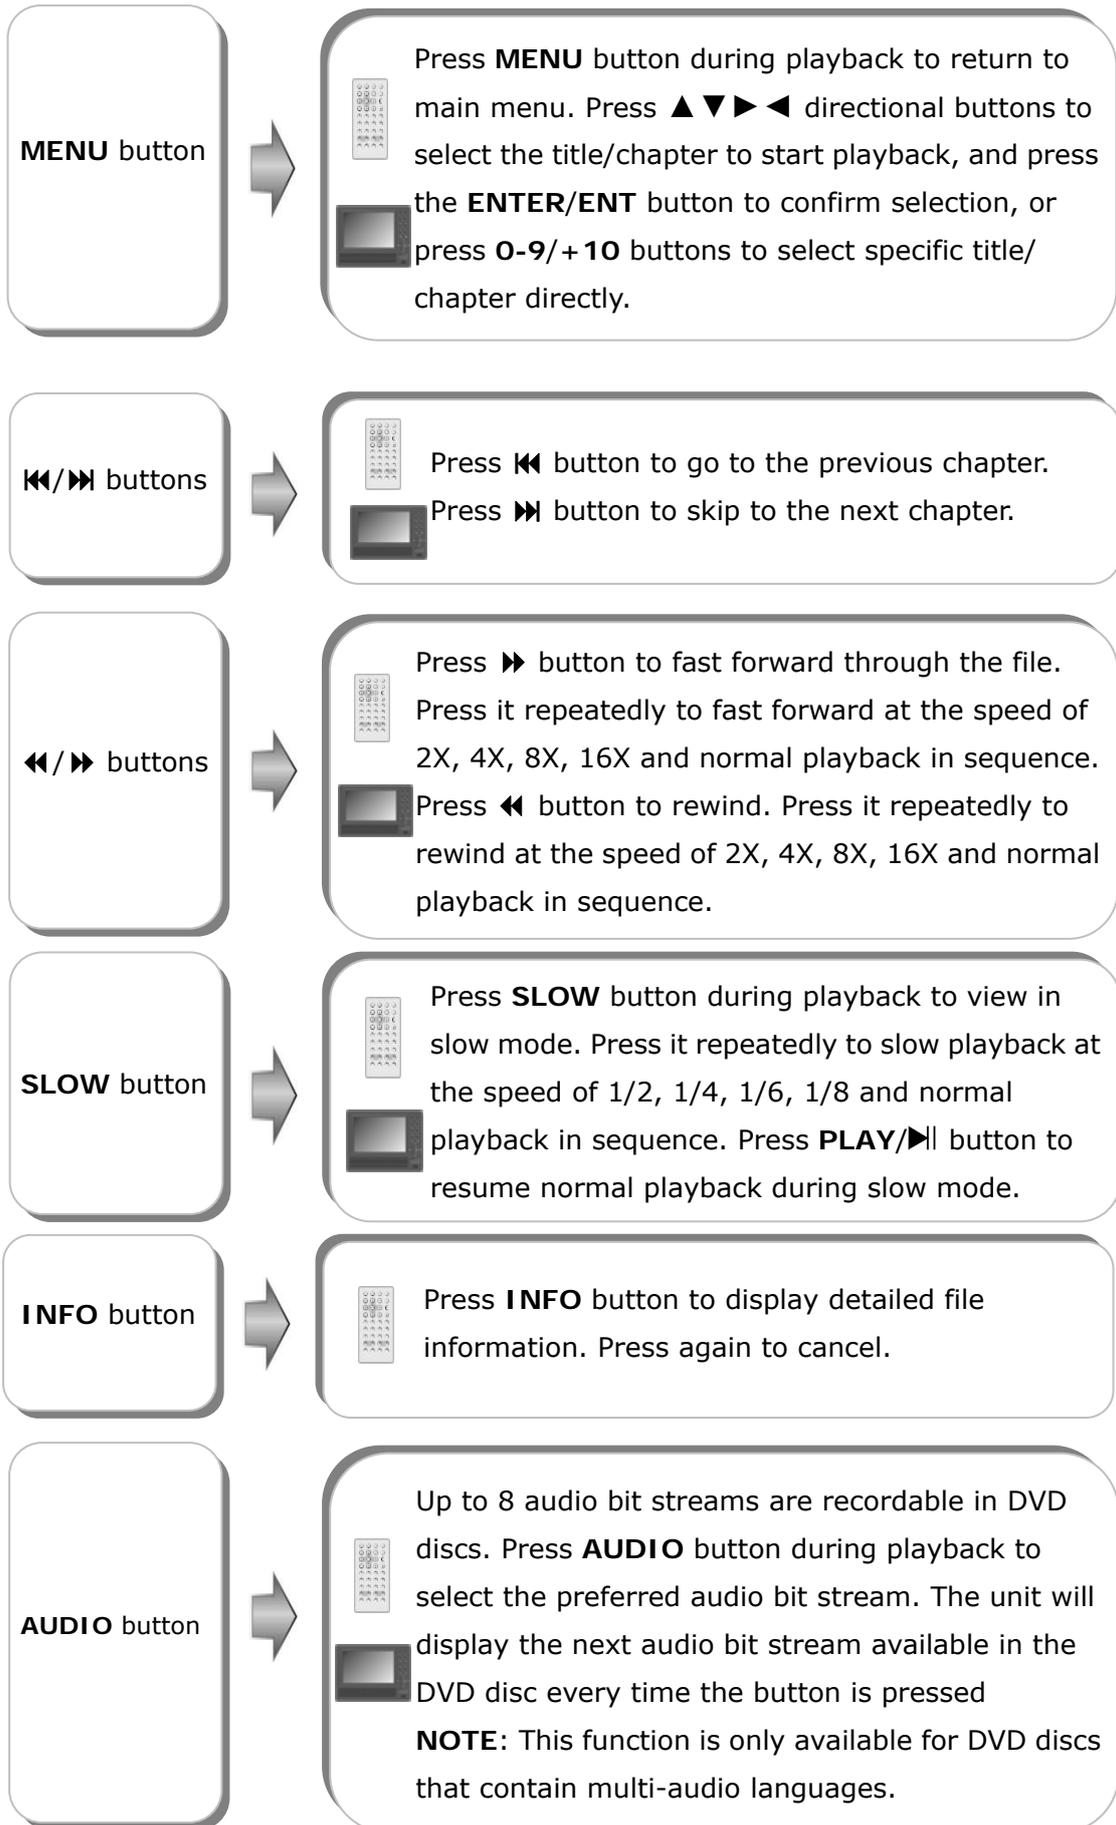

**SUBT** button



Press **SUBT** button to cycle through available subtitle languages or to turn off the subtitle during playback. A DVD disc can be recorded with up to 32 subtitles.

**NOTE:** This function is only available for DVD discs that support multi-subtitles

**REP** button



Press **REP** button to cycle through repeat patterns including chapter repeat, title repeat or cancel repeat.

**ANGLE** button



Press **ANGLE** button to play the disc in multi-angle mode. Multi-angle mode allows a scene to be viewed from different angles (files with multi-angle feature only). Refer to the example below:



Press **ANGLE** button to select the angle desired. Press the button repeatedly to cycle through different viewing angles if there are multiple angles in a scene.

**NOTE:** This function is only available for the DVD discs coded with multi-angles.

**GOTO** button




Press **GOTO** button to select desired disc title, chapter or time to start playback. Use the ▲▼ directional buttons to highlight Title, Chapter or Time. Use 0-9/+10 number buttons to input numbers of the desired title, chapter or time and press **ENTER/ENT** button to confirm.

Press the button again to cancel playback.

## 10 CD Disc Playback Operations

A CD disc will be automatically loaded when placed in the unit. A playback menu will be displayed on the screen and the files in the disc will be played automatically by the default sequence of the disc. Press **◀/▶** buttons to select the desired track or press the **0-9/+10** number buttons to input the number of the desired track and press **ENTER/ENT** button to confirm for playback.

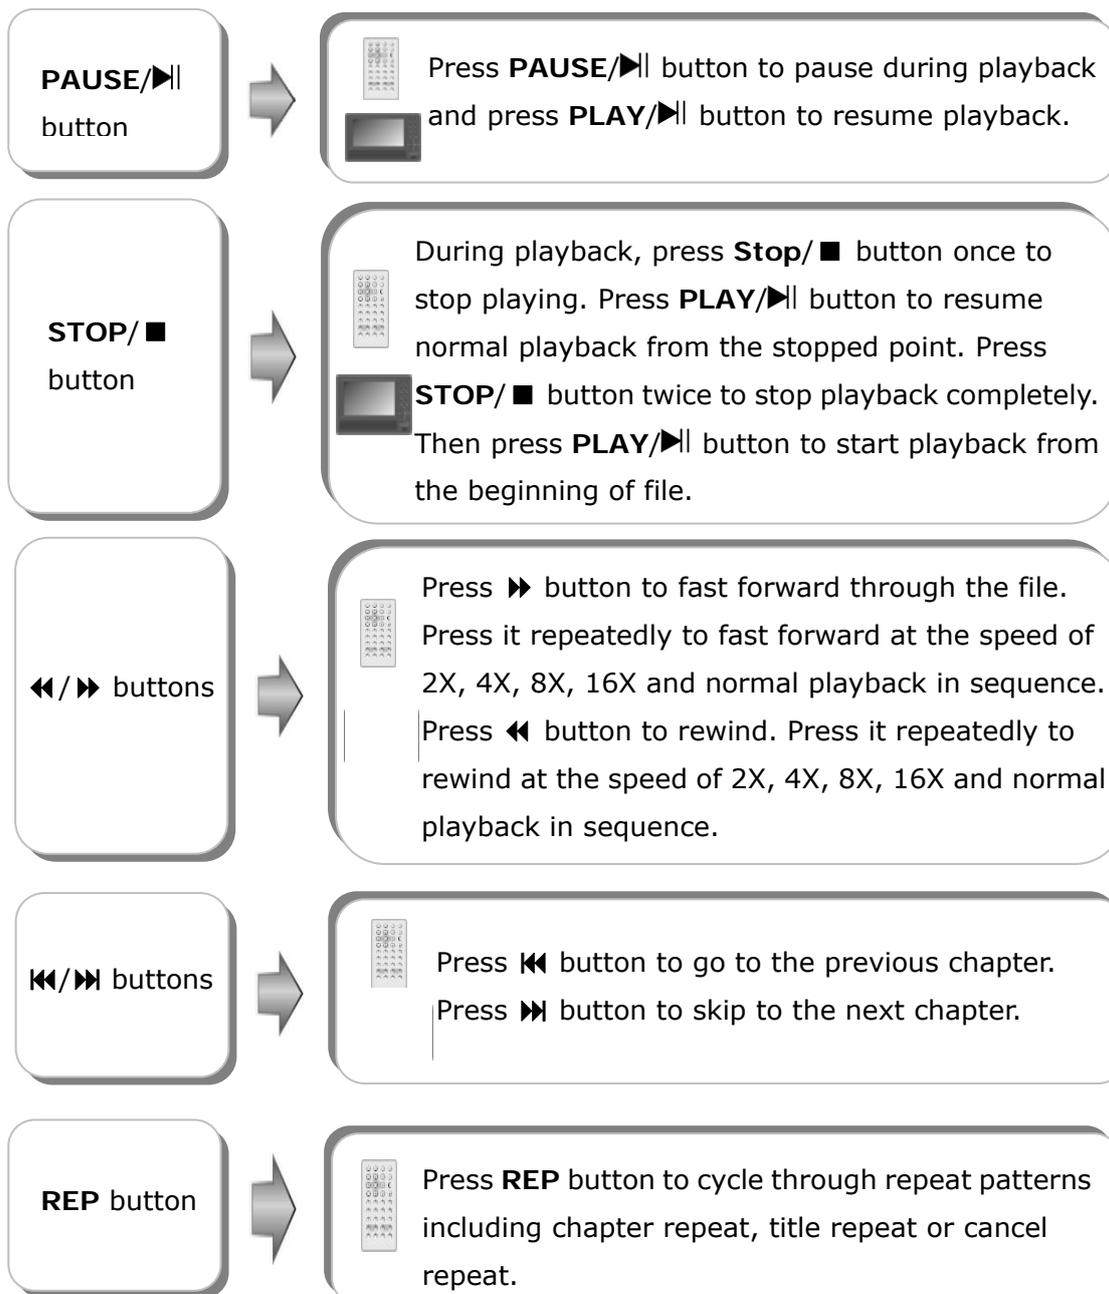

**A-B** button



Press **A-B** button once to set the starting point **A**, press it again to designate end point **B**. The segment from A to B will be played repeatedly.



Press the button again to stop A-B repeat function.

**GOTO** button



Press **GOTO** button to select desired disc title, chapter or time to start playback. Use the ▲▼ buttons to highlight Title, Chapter or Time. Use **0-9/+10** number buttons to input numbers of the desired title, chapter or time and press **ENTER/ENT** button to confirm.

Press the button again to cancel playback.

## 11 JPEG File Viewing Operations

### ● Before Viewing JPEG Files

1. A disc with JPEG files will be automatically loaded when placed in disc tray,
2. The root folder with several subdirectories/subfolders will be displayed.  
Press **ENTER/ENT** button to enter. Use **▲▼** buttons to select a desired folder and press **ENTER/ENT** button to confirm selection.
3. Upon entering the selected subfolder, pictures with JPEG format will be displayed. Press **▲▼** buttons to select the desired picture and press **ENTER/ENT** button to start playback.
4. Press **▲▼** buttons to highlight  \*\*, press **ENTER/ENT** button to return to the last folder or directory.


**NOTE:** Discs may contain files other than JPEG files.

### ● Filter and Repeat Setup

Under the folder mode, press the **▲▼▶◀** directional buttons to highlight **FILTER**. Please follow steps below to change its settings:

1. Press **ENTER/ENT** button to enter the setup menu.
2. Press **▲▼** buttons to select the options desired for setting.
3. Press **ENTER/ENT** button to select or cancel.
4. Press **◀** button to exit.

Under the folder mode, press **▲▼▶◀** directional buttons to highlight **REPEAT** and press **ENTER/ENT** button or **REP** button on the remote control to cycle through settings.

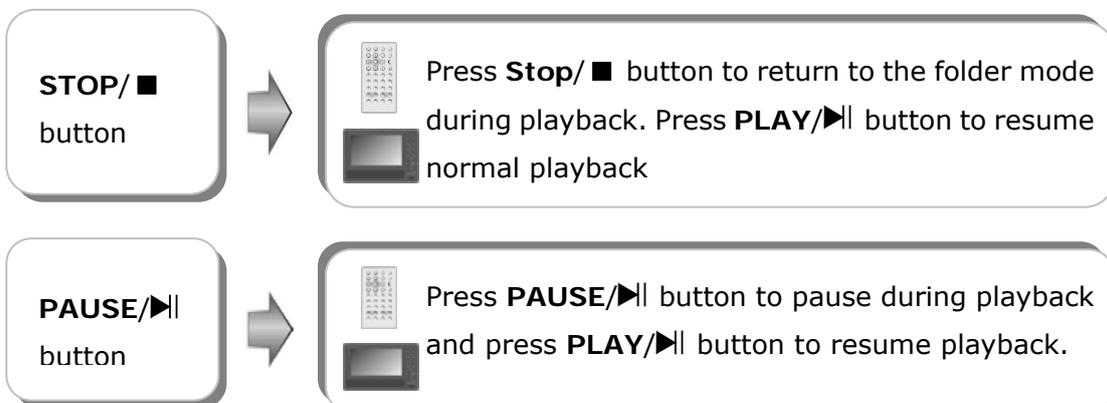

**◀/▶ buttons** →

Press **◀** button to go to the previous picture.  
Press **▶** button to skip to the next picture

**REP button** →

Press **REP** button to cycle through repeat patterns including single repeat, folder repeat or cancel repeat.

**Picture Rotate**



During browsing a picture, use ▲▼▶◀ directional buttons to rotate the current picture.

Press **▶** button to rotate the current picture 90° clockwise, as shown below:



Press **▼** button to rotate the current picture 180° clockwise, as shown below:



Press **◀** button to rotate the current picture 270° clockwise, as shown below:




## 12 System Setup

Please follow below procedures to change the default settings to customize its performance to user preference.


Follow the steps below to set up device:

1. Press **SETUP** button and the setup menu will be displayed on the screen.
2. Press **◀/▶** buttons to select between menu tabs desired for setup. Press **ENTER/ ENT** or **▼** button to enter the menu or confirm.
3. Press the **◀** button to return to the previous menu. Or press the **SETUP** button again at any time during the setting to exit from the setup menu.

### ● Language setup

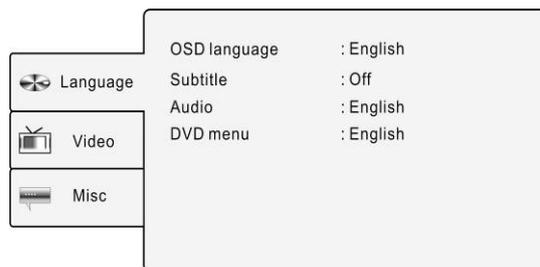


Press **SETUP** button and press **▲▼** buttons to select **Language** tab. The screen will be displayed as shown at left.

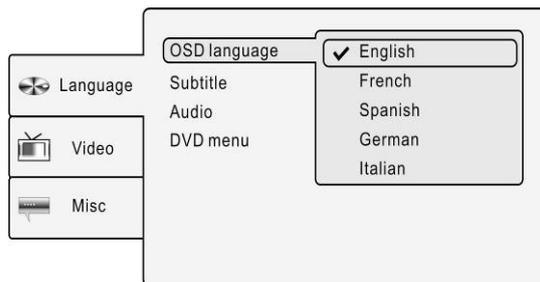


#### 1. OSD language

Select the option to setup OSD (On-Screen Display) language. Press **▲▼** buttons to highlight **OSD language** and press **ENTER/ ENT** or **▶** button to confirm. Press **▲▼** buttons to select preferred language and press **ENTER/ENT** button to confirm selection and return.

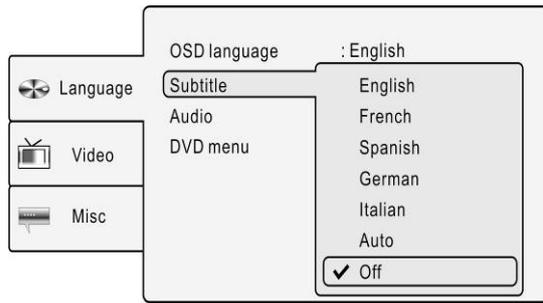


## 2. Subtitle

Select the option to adjust the subtitle language. Press ▲▼ buttons to highlight **Subtitle** and press **ENTER/ ENT** or ► button to confirm. Press ▲▼ buttons to select preferred subtitle language and press **ENTER/ ENT** button to confirm selection and return

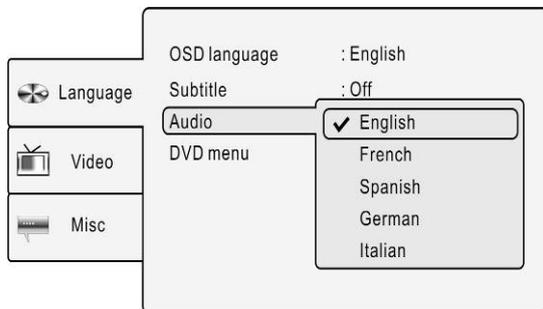

## 3. Audio


Select the option to adjust audio output language. Press ▲▼ buttons to highlight **Audio** and press **ENTER/ ENT** or ► button to confirm. Press ▲▼ buttons to select desired audio output language and press **ENTER/ ENT** button to confirm selection and return.

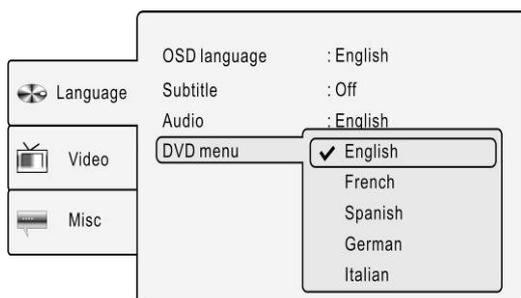


## 4. DVD menu

Select the option to setup disc menu language. Press ▲▼ buttons to highlight **DVD menu** and Press **ENTER/ ENT** or ► button to confirm. Press ▲▼ buttons to select desired DVD menu language and press **ENTER/ ENT** button to confirm selection and return.


- **Video setup**

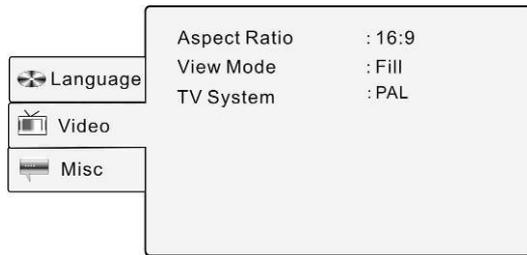


Press **SETUP** button and press **▲▼** buttons to select **Video** tab. The screen will be displayed as shown at left.

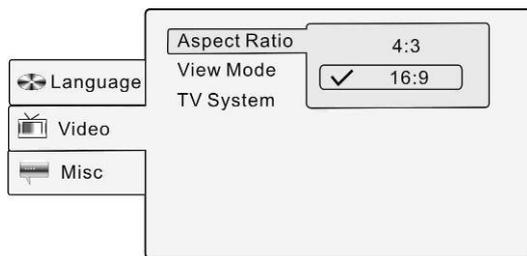

**1. Aspect Ratio**  
Select the option to setup aspect ratio. Press **▲▼** buttons to highlight **Aspect Ratio** and press **ENTER/ ENT** or **▶** button to confirm. Press **▲▼** buttons to select between 4:3 and 16:9 and press **ENTER/ENT** button to confirm selection and return.

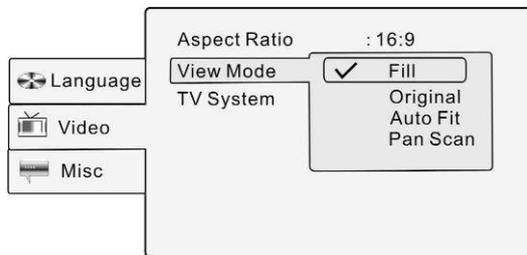


**2. View Mode**  
Select the option to adjust the viewing mode of screen display. Press **▲▼** buttons to highlight **View Mode** and press **ENTER/ ENT** or **▶** button to confirm. Press **▲▼** buttons to select appropriate viewing mode and press **ENTER/ ENT** button to confirm selection.

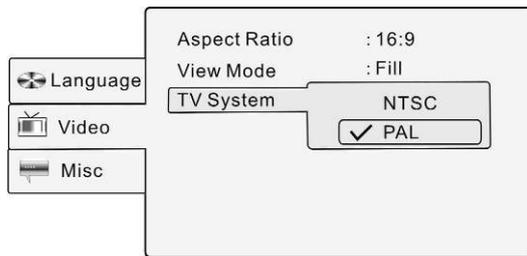


**3. TV System**  
Select the option to conform to TV standard. Press **▲▼** buttons to highlight **TV System** and press **ENTER/ ENT** or **▶** button to confirm. Press **▲▼** buttons to select appropriate TV system and press **ENTER/ ENT** button to confirm selection and return.

- **Misc setup**

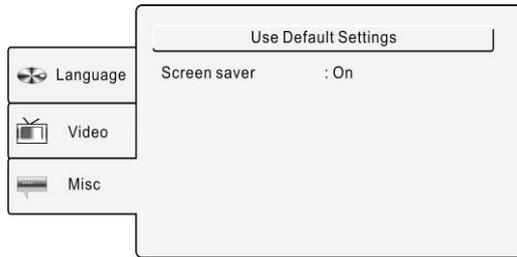


Press **SETUP** button and press **▲▼** buttons to select **Misc** tab. The screen will be displayed as shown at left.

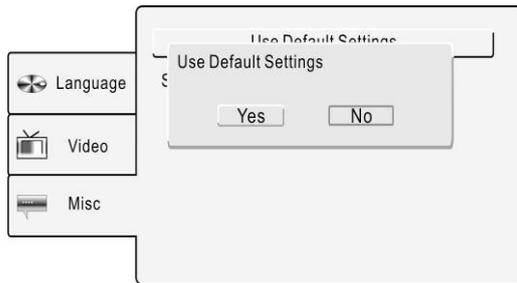

### 1. Use Default Setting

Select the option to restore default settings. Press **▲▼** buttons to highlight **Use Default Setting** and press **ENTER/ ENT** or **▶** button to confirm. Press **▲▼** buttons to select **Yes** and press **ENTER/ENT** button to confirm selection or Press **No** to cancel.

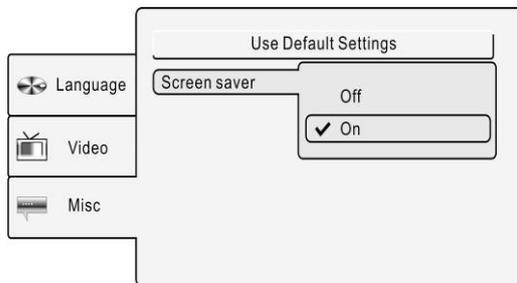


### 2. Screen Saver

Select the option to turn on/off screen saver. Press **▲▼** buttons to highlight **Screen saver** and press **ENTER/ ENT** or **▶** button to confirm. Press **▲▼** buttons to select **On** or **Off** and press **ENTER/ ENT** button to confirm selection and return

## 13 Using Straps


Follow the steps below to attach the **Prestigio PPDP 370 Twin** onto the car seat headrest.

1. Place the unit on a soft and smooth surface with the bottom facing up.
2. Loosen up the strap and remove the buckle from the strap.
3. Insert the strap through the hole as demonstrated in Fig.1. Make sure the inner side of the strap faces up.
4. Ease the strap into the buckle as demonstrated in Fig.2 and Fig.3. Before putting the unit onto car seat headrest, please make sure the outer side of the buckle faces up.

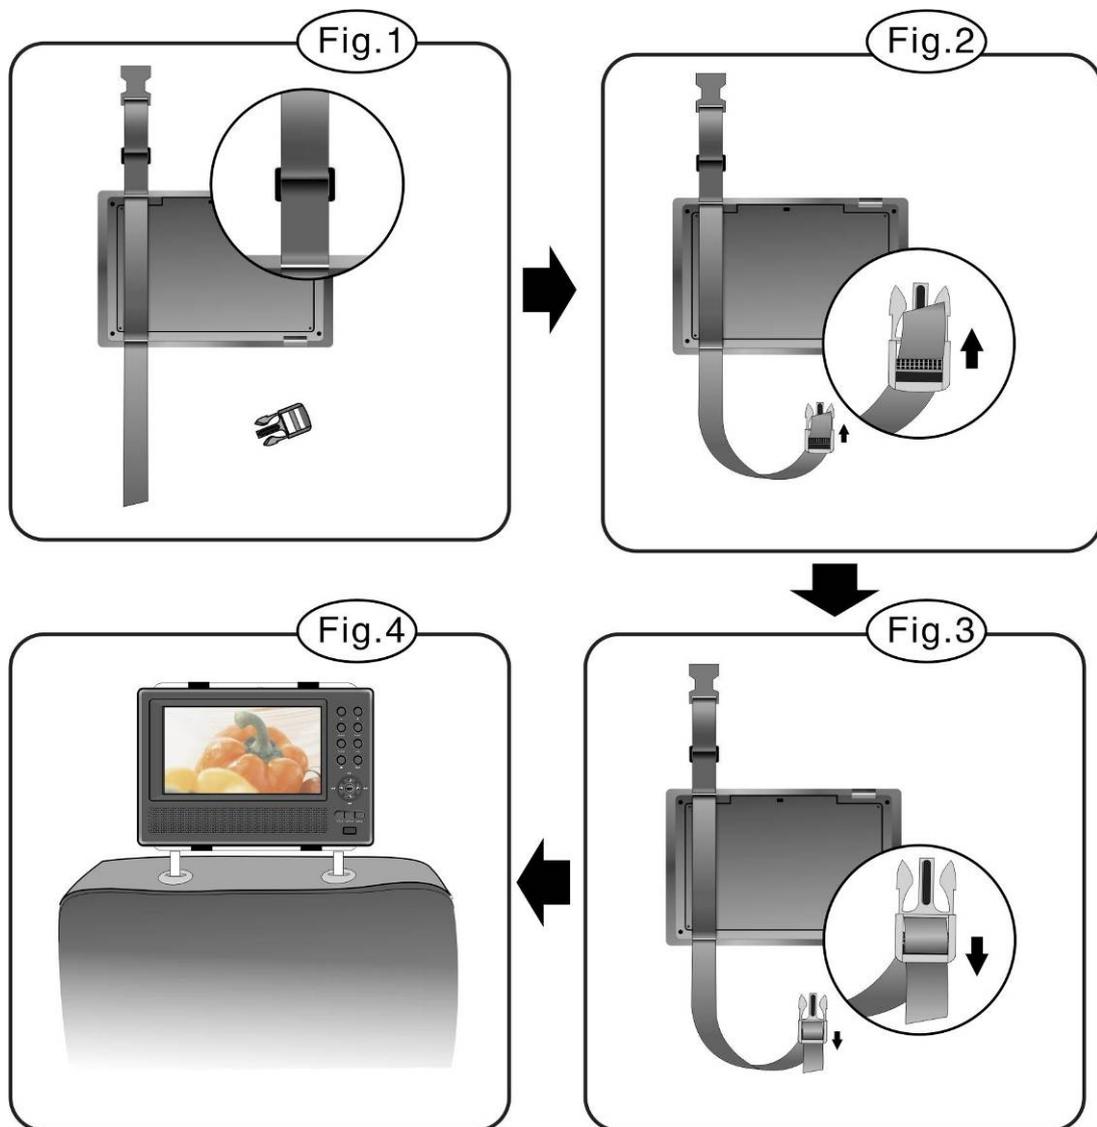


5. Repeat above steps for the other strap.
6. Adjust the length of the straps to fit the car seat headrest.
7. Fasten the straps on the headrest as in Fig.4. Make sure the two straps are between the headrest supporting metal rods.

**NOTE:** The drawings below illustrate the outside and the inside of the buckles and the straps.

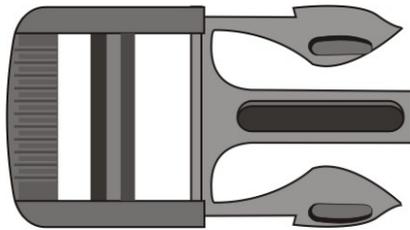


Outside

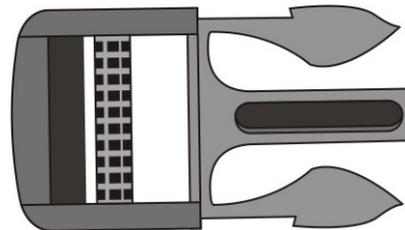

Inside



Outside

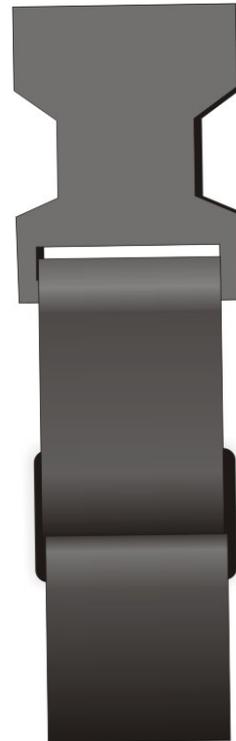

Inside

## 14 Troubleshooting

Take steps described in the tables below to solve simple problems before contacting customer service.



### WARNING:

**Immediately turn off the unit and disconnect the power adapter if the unit is not working properly. Never try to repair the unit without authorized professionals for it may damage the unit.**

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The unit does not interact with discs	The disc cover is not properly closed.	Close the disk cover and press firmly to ensure fully closure.
	There is not disc in the disc tray.	Place a disc with playable format files.
	The disc is not placed with label side facing up.	Place the disc with label side facing up.
	The disc may not be clean or scratched.	Clean the data side of disc to prevent mis-reading.
	The disc region code may not match that of the unit.	Make sure the both region code match.
	There is liquid on the lens.	Remove the disc and keep the unit powered off for at least 2 hours.
There is no sound.	The connection between the unit and audio system is bad.	Re-connect the audio system and the unit and make sure the connection is secured.
	The speaker may be off.	Turn on the speaker.
	The sound of the disc may not be setup correctly.	Try setup the disc sound again.
	The disc may not be clean or scratched.	Clean the data side of disc to prevent mis-reading.

	The LCD panel may be off or not in proper video mode.	Turn on the LCD panel or adjust to a proper video mode.
There is no picture.	The connection between the unit and video system is bad.	Re-connect the video system and the unit and make sure the connection is secured.
	The unit is not in AV OUT mode.	Switch AV Switch at the bottom of the unit to AV OUT.
Poor AV performance.	The disc may not be clean or scratched.	Clean the data side of disc to prevent mis-reading.
The remote control is not functioning properly or not working at all.	There may be obstacles between remote control and the receiving port on the unit.	Remove obstacles between remote control and the receiving port on the unit.
	The remote control is not aligned with the unit	Try pointing the remote control towards the receiving port on the unit.
	The battery on the remote control is not properly inserted.	Adjust the battery position in the remote control as instructed.
	The battery in the remote control is weak or depleted.	Replace the battery.



**WARNING:**

**Static or other external interference may cause Prestigio PPDP 370 Twin DVD Player to function abnormally. In order to remove abnormality, please unplug the power cord and then plug it into the outlet again to reset the device. If the problem persists, please unplug the power cord and consult local service center or the qualified technician.**

## 15 Appendix

### 15.1 Product Specification

TFT screen size		7.0 inches
Laser Wavelength		780/650 nm
Video System		PAL
Frequency Response		20Hz ~ 20kHz $\pm$ 2.5dB
Audio Signal-to-Noise Rate		$\geq$ 85dB
Audio distortion + noise		$\leq$ - 70dB (1kHz)
Channel Separation		$\geq$ 70dB (1kHz)
Dynamic Range		$\geq$ 80dB (1kHz)
Audio Out	Analog Audio Out	Output Level: $1.5V \pm_{-1.0}^{0.2}$ , Load: 10K $\Omega$
Video Out	Video Out	Output Level: $1V_{p-p} \pm 0.2$ , Load: 75 $\Omega$ Unbalanced Negative
Power		DC 12V
Power Consumption		< 25W
Dimensions (L*W*D)		230mmX154mmX40mm (Main Unit) 230mmX154mmX22mm (2 <sup>nd</sup> Monitor)
Weight		Approximately 0.85kg (Main Unit) 0.53kg (2 <sup>nd</sup> Monitor)

### 15.2 Technical Support and Warranty Information

Please refer to [www.prestigio.com](http://www.prestigio.com) for technical support and warranty information.

### 15.3 Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. **Prestigio** reserves the right to make any changes without further notice to any products herein.