

Table of Contents

1 GETTING STARTED

- 1.1 SAFETY PRECAUTIONS**
- 1.2 COPYRIGHT PROTECTION**
- 1.3 PACKAGE CONTENT**

2 MAIN UNIT VIEWS

- 2.1 FRONT VIEW**
- 2.2 RIGHT SIDE VIEW**
- 2.3 LEFT SIDE VIEW**
- 2.4 BOTTOM VIEW**

3 REVOLVING LCD PANEL

4 REMOTE CONTROL OVERVIEW

- 4.1 BUTTON DEFINITION**
- 4.2 REMOTE CONTROL BATTERY INSTALLATION**

5 SYSTEM CONNECTIONS

- 5.1 CONNECTING TO TV**
- 5.2 CONNECTING TO AMPLIFIER**
- 5.3 CONNECTING TO EXTERNAL AV SIGNAL SOURCE**
- 5.4 CONNECTING TO HEADPHONES**
- 5.5 CONNECTING TO AC ADAPTER**
- 5.6 CONNECTING TO CAR DC ADAPTER**
- 5.7 CONNECTING USB DEVICE OR SD MEMORY CARD**

6 DEVICE BATTERY OPERATIONS

- 6.1 CHARGING BATTERY PACK**
- 6.2 ATTACHING BATTERY PACK**
- 6.3 DETACHING BATTERY PACK**

7 SOFTWARE COMPATIBILITY

7.1 COMPATIBLE DISC FORMAT

7.2 DISC MAINTENANCE

8 GENERAL OPERATION

8.1 BEFORE PLAYING

8.2 ADJUSTING SCREEN ASPECT RATIO

8.3 SWITCHING BETWEEN MEDIA SOURCES

9 DVD DISC PLAYBACK OPERATIONS

10 CD DISC PLAYBACK OPERATIONS

11 JPEG FILE VIEWING OPERATIONS

12 MP3 DISC PLAYBACK OPERATIONS

13 SYSTEM SETUP

14 USING CARRYING CASE

 
15 TROUBLESHOOTING

16 APPENDIX

16.1 PRODUCT SPECIFICATION

16.2 TECHNICAL SUPPORT AND WARRANTY INFORMATION

16.3 DISCLAIMER

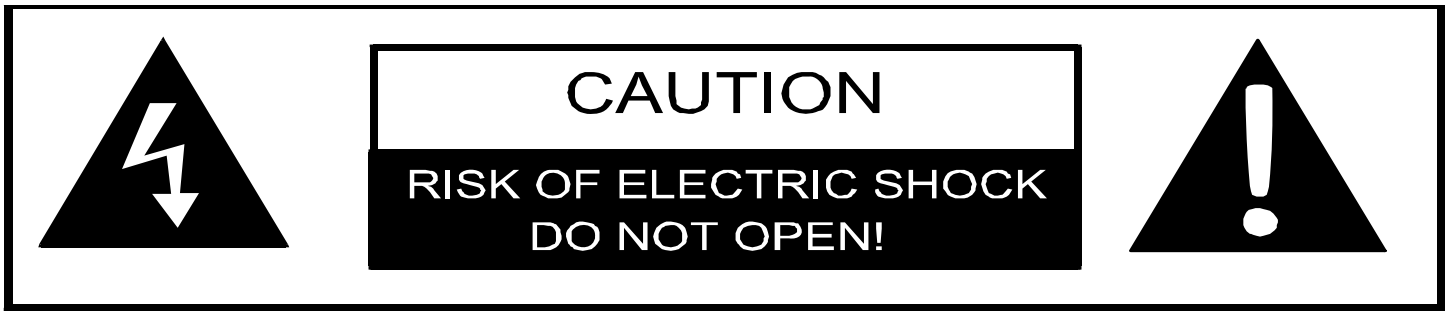

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING:

The device emits laser radiation when opened. Do NOT stare into laser beam directly.



CAUTIONS:

- The product is equipped with a low power laser device. To ensure the quality of the laser device, do NOT open up the case or attempt to repair the unit. Please contact authorized service center for any service required.
- To reduce the risk of electric shock, do NOT remove the cover. No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is not used for a long period of time.
- The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer or authorized organization.

1 Getting Started

Thank you for purchasing **Prestigio PPDP710**, a mobile digital media center. You have made an excellent choice and we hope you will enjoy all of its exciting features. Please read through the user manual carefully before using the product, and follow all of the procedures in the manual to fully enjoy all features of the product.

1.1 Safety Precautions

Please observe all safety precautions before using **Prestigio PPDP710**. Please follow all procedures outlined in this manual to correctly operate the device.



Warning: This mark indicates actions that could lead to serious injury to personnel operating the device or damage to the device if ignored or handled incorrectly.

- Do not attempt to disassemble or alter any part of the device that is not described in this guide.
- Do not place the device in contact with water or any other liquids. The device is NOT designed to be liquid proof of any sort.
- In the event of liquid entry into interior of device, immediately disconnect the device from the computer. Continuing use of the device may result in fire or electrical shock. Please consult your product distributor or the closest support center.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
- Do not place the device near a heat source or directly expose it to flame or heat.
- Never place the device in vicinity of equipments generating strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or data corruption and loss.

1.2 Copyright Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.


DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, the DVD disc can not be played by the unit. **Prestigio PPDP710** is coded with region number 5 and is intended for European standard DVD disc use only.

1.3 Package Content

Item	Description	Quantity
	Prestigio PPDP710	1
	User Manual	1
	Documentation CD	1
	Remote control (battery included)	1
	Car DC Adapter	1
	Power Supply Cable with AC Adapter	1
	Audio/Video Cable	2
	Rechargeable Battery Pack	1
	Car Headrest Bag/Carry Case	1

2 Main Unit Views

 
2.1 Front View

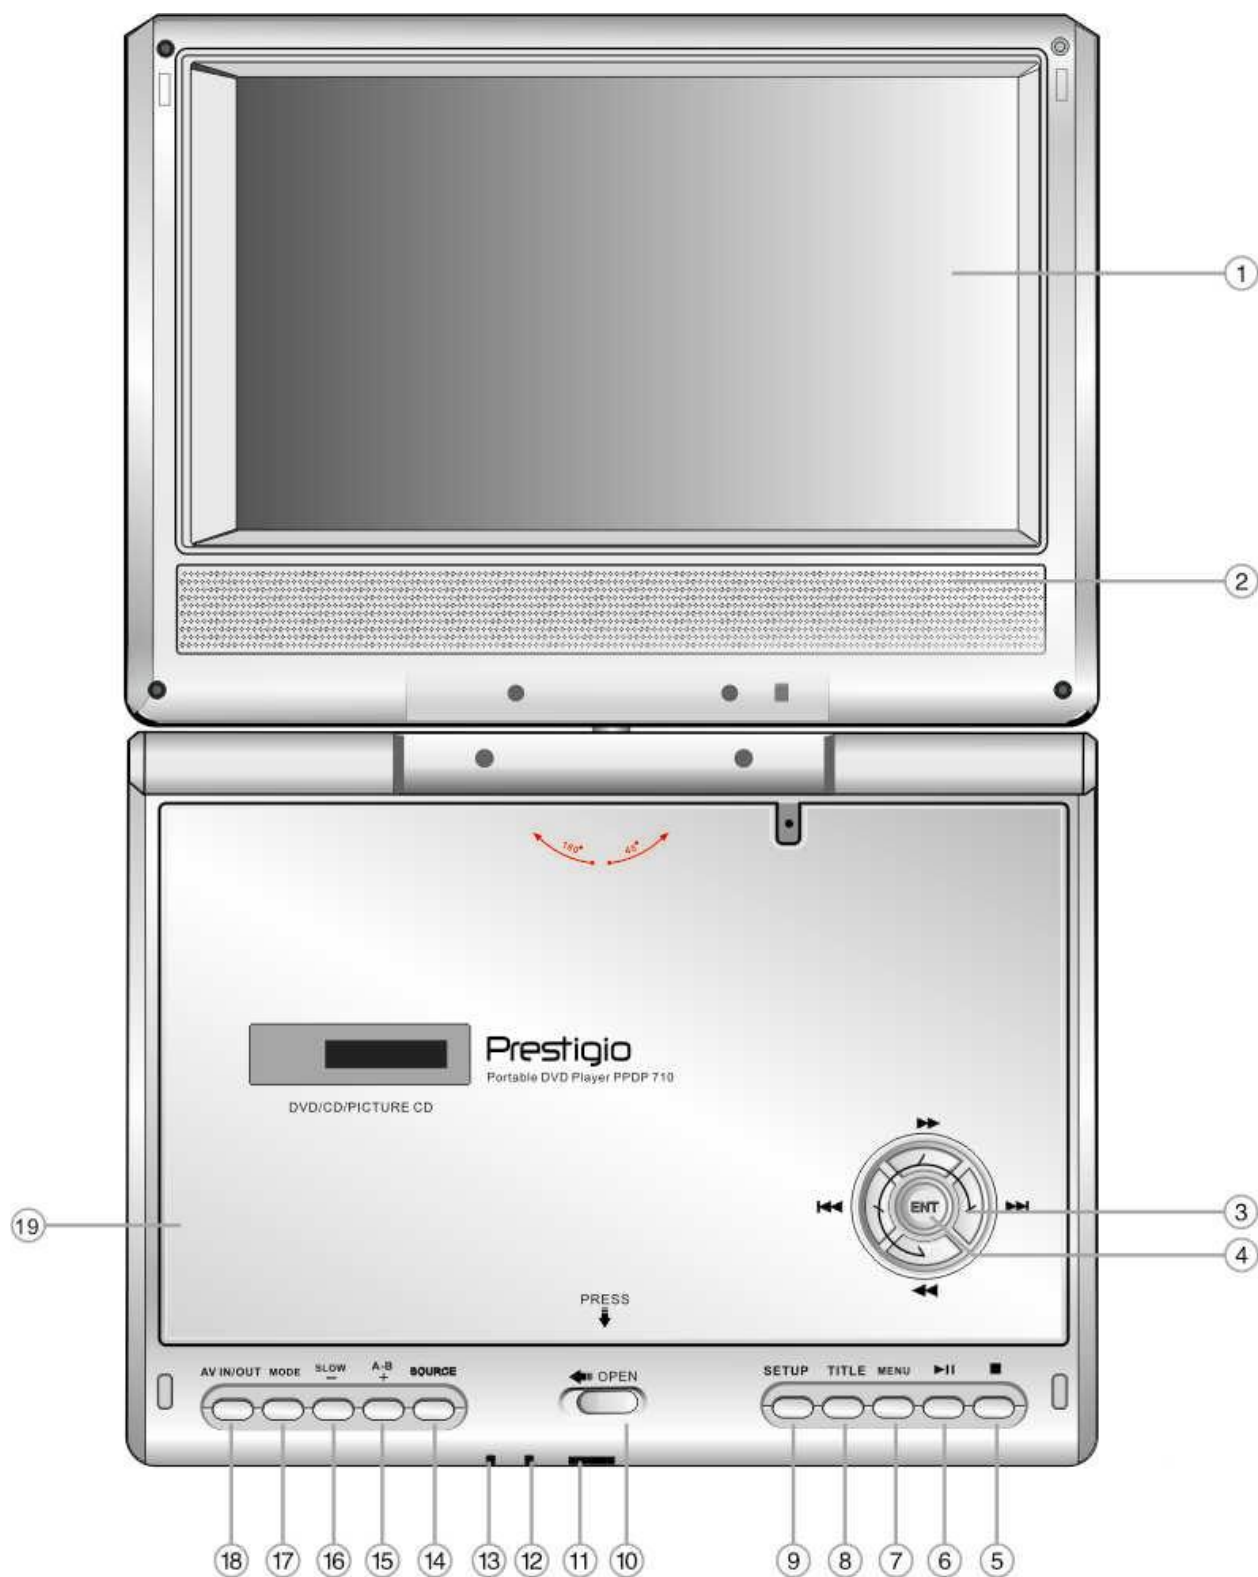

Number	Item Name	Function
1	LCD Screen	
2	Speaker	


3	▲▼▶◀/◀▶▶▶▶▶ Buttons	<p>▲▼▶◀ Directional Buttons: Press to navigate between different options.</p> <p>◀/▶▶ Tracking Buttons: Press to rewind/fast forward during playback.</p> <p>◀▶▶▶▶▶ Tracking Buttons: Press to return/skip to the previous/next list, track or chapter.</p>
4	ENT Button	Press to confirm selection
5	■ Button	Press to stop playback.
6	▶ Button	Press to play or pause playback
7	MENU Button	Press to enter menu to or exit from the menu.
8	TITLE Button	Press to enter to or exit from the title menu if available.
9	SETUP Button	Press to enter or exit system setup menu.
10	OPEN Switch	Push to open the disc tray cover.
11	Remote Control Sensor	
12	Power Indicator	<p>Light stays red during standby mode.</p> <p>Light stays green when the device is on.</p>
13	Charge Indicator	<p>Light stays red when the device battery is being charged.</p> <p>Light stays green when the device battery is fully charged.</p>
14	SOURCE Button	Press to cycle through Disk, USB, SD/MS/MMC modes if available.
15	A-B/+ Button	<p>A-B Function: Press to repeatedly play a user defined file segment.</p> <p>+ Function: Press button in combination of MODE button to increase screen brightness, contrast or color.</p>
16	SLOW/- Button	<p>SLOW Function: Press to activate slow playback function.</p> <p>- Function: Press button in combination of MODE button to decrease screen brightness, contrast or color.</p>
17	MODE Button	Press button in combination of A-B/+ button and SLOW/- Button to decrease screen brightness, contrast or color.
18	AV IN/OUT Button	Press to switch between AV IN mode and AV OUT mode.
19	Disc Tray Cover	Gently press the cover to close after disc is placed on the tray.

 2.2 Right Side View

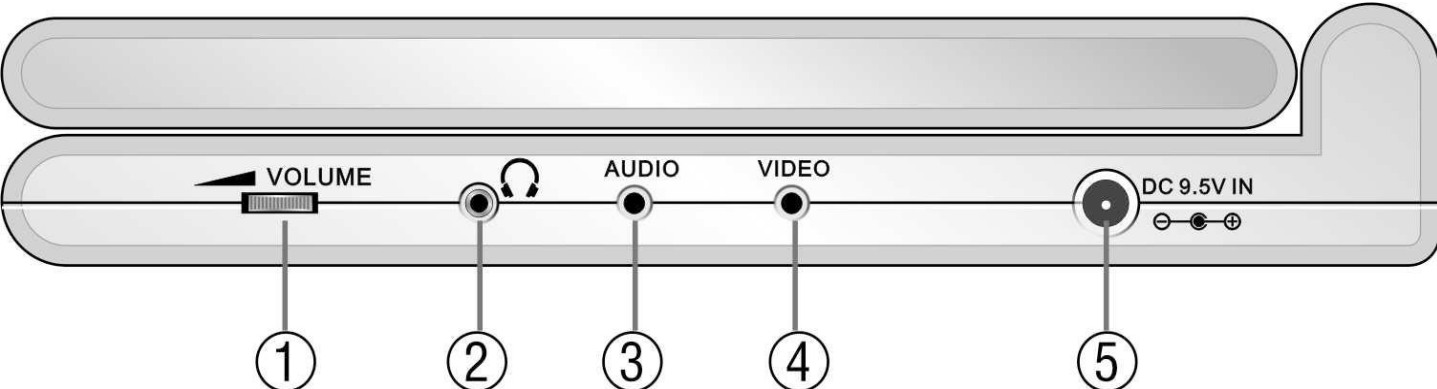


Number	Button Name	Function
1	VOLUME Control Knob	Scroll left and right to adjust volume of the headphone or speaker.
2	Headphone Jack	Connects to headphone sets. Speakers automatically mute when headphone sets are inserted.
3	AUDIO INPUT/OUTPUT Jack	Connects to external audio devices for both input and output functions.
4	VIDEO INPUT/OUTPUT Jack	Connects to external video devices for both input and output functions.
5	DC 9.5V IN Input Jack	Connects to power adapter provided.

 2.3 Left Side View

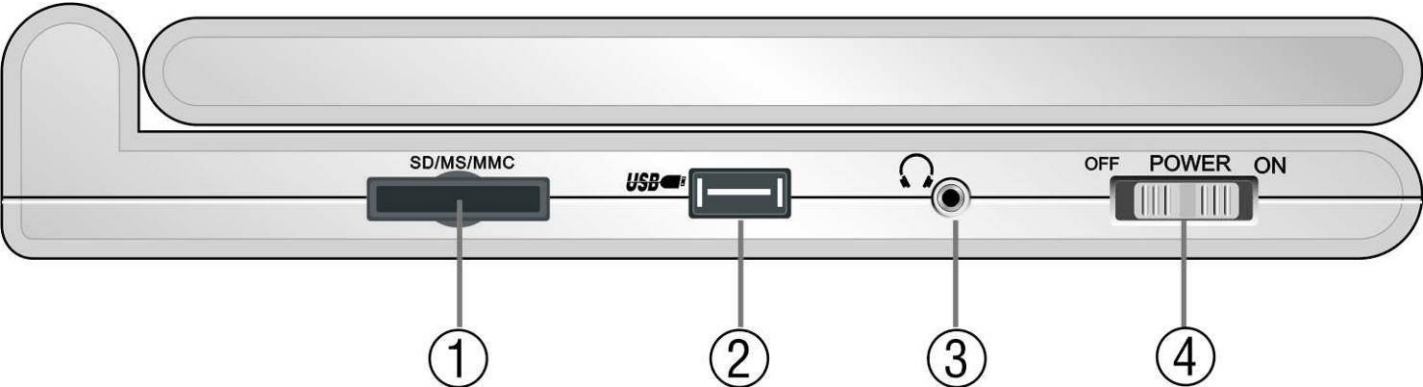

Number	Button Name	Function
1	SD/MS/MMC Card Slot	Connects to SD/MS/MMC memory card.
2	USB Device Port	Connects to USB devices.
3	Headphone Jack	Connects to headphone sets. Speakers automatically mute when headphone sets are inserted.
4	Power ON/OFF Switch	Slide to turn power ON/OFF .

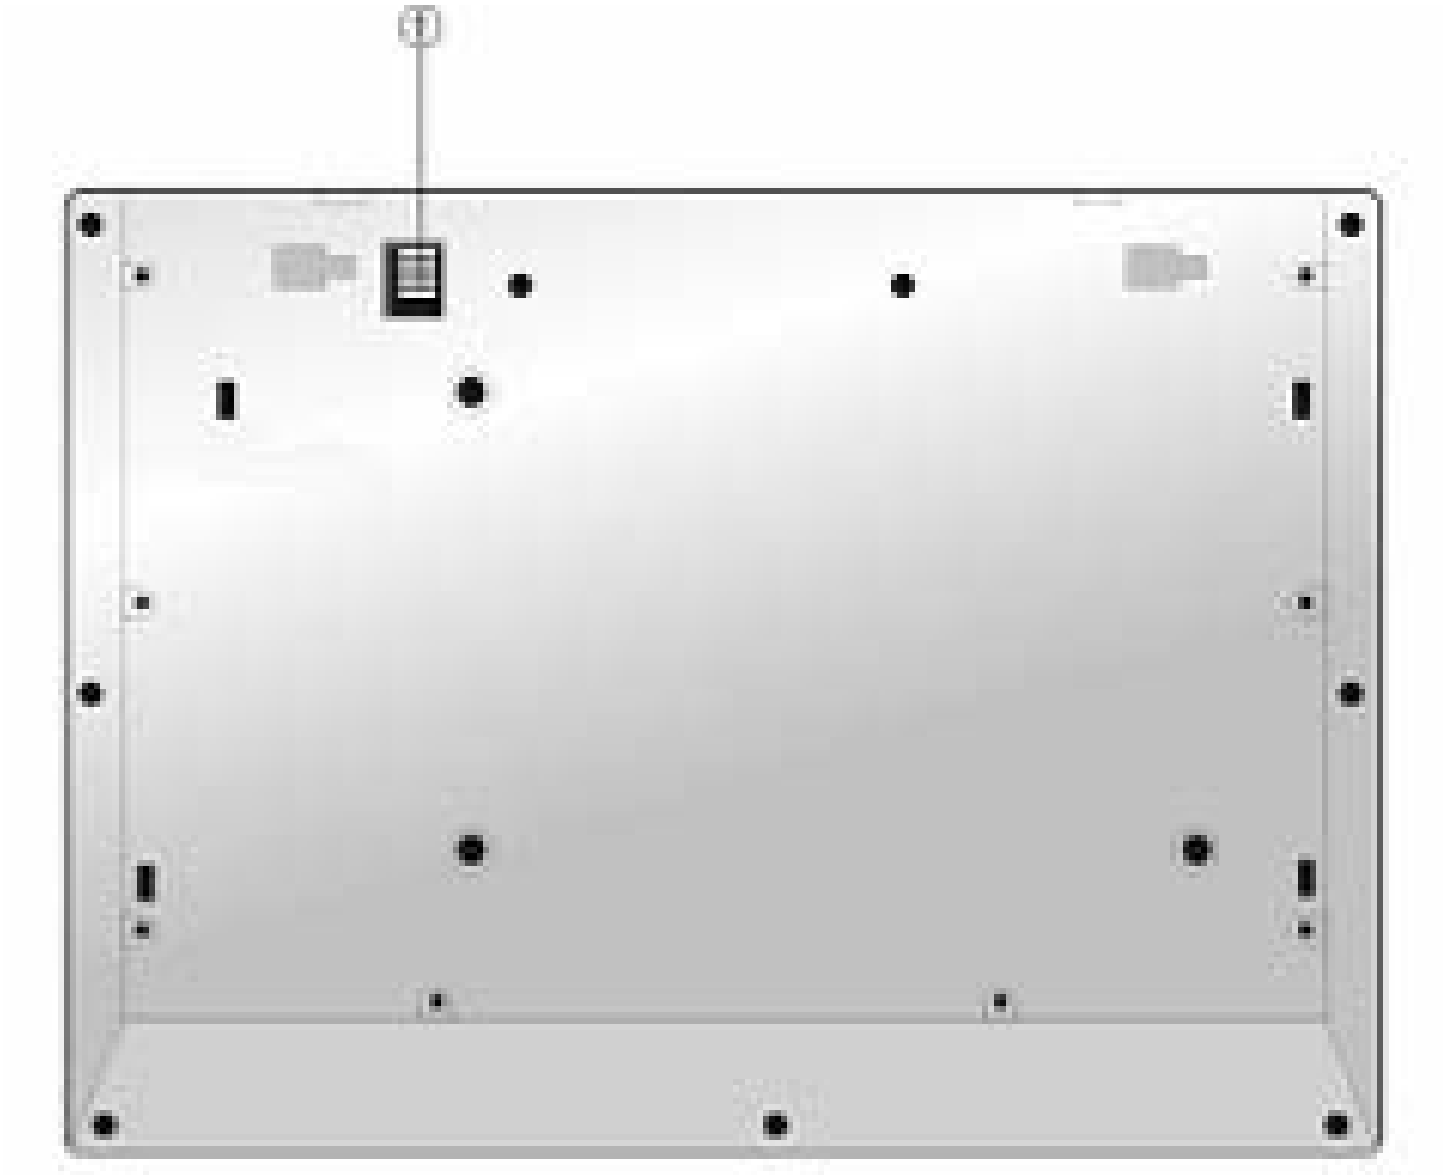 


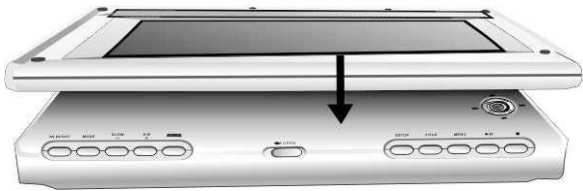 
2.4 Bottom View



Number	Button Name	Function
1	Rechargeable Battery Interface	Connects to rechargeable battery pack.


3 Revolving LCD Panel

The revolving LCD panel is one of the prominent features of **Prestigio PPDP710**. Please refer to the following instructions for proper LCD panel revolving operations

Position	Figure	Instruction
A		1. Open the LCD panel to position A as shown at the left figure. The LCD panel should be perpendicular to the operating panel.
B		2. Revolve the LCD panel clockwise around its axis to adjust to desired viewing angles.
C		3. The maximum revolving angle is. Revolve the panel counter clockwise until it clicks to return to up right position.
D		4. To place the unit in the car headrest bag provide, revolve LCD panel 180° clockwise and fold it down towards operating panel. The LCD panel should be aligned perfectly with operating panel to fit into the bag.

4 Remote Control Overview

 4.1 Button Definition

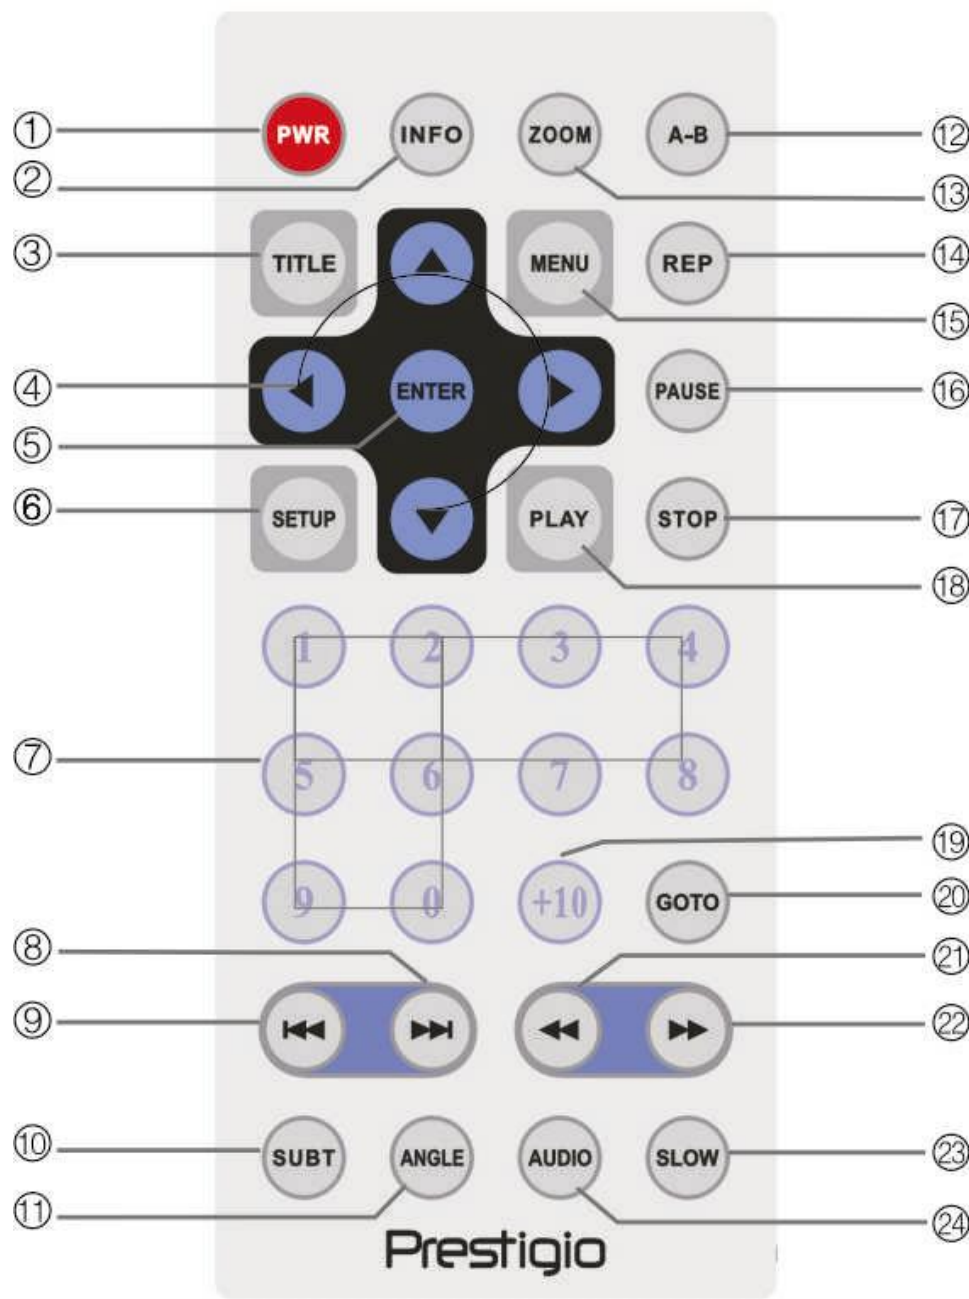

Number	Button Name	Function
1	PWR Button	Press to turn on/off the device.
2	INFO Button	Press to display detailed file information. Press again to cancel.
3	TITLE Button	Press to enter to or exit from the title menu if available.
4	▲▼▶◀ Directional Buttons	Press to navigate between different options.

5	ENTER Button	Press to start playback or to confirm selection.
6	SETUP Button	Press to enter system setup.
7	0-9 Number Button	Press to select numbers.
8	⏭ Next Button	Press to skip to the next list, track or chapter.
9	⏮ Previous Button	Press to return to the previous list, track, or chapter.
10	SUBT Button	Press to select a subtitle language (multi languages subtitle required). Press again to cancel.
11	ANGLE Button	Press to select camera angles (camera angle adjusting function required).
12	A-B Button	Press to play a certain selected segment repeatedly.
13	ZOOM Button	Press to cycle through zooming in/out functions.
14	REP Button	Press to select different repeat and shuffle patterns.
15	MENU Button	Press to return to or exit from the menu during playback.
16	PAUSE Button	Press to pause playback and press PLAY button to resume playback.
17	STOP Button	Press to stop playback. Press PLAY button to resume playback at the same point. Press STOP button twice to stop playback completely.
18	PLAY Button	Press to start playback.
19	+10 Button	Press to select numbers greater than 9.
20	GOTO Button	Press to skip to a user defined title, chapter number or time.
21	⏮ Rewind Scan Button	Press to rewind during playback.
22	⏭ Forward Scan Button	Press to fast forward during playback.
23	SLOW Button	Press to activate the slow playback function.
24	AUDIO Button	Press to cycle through different language when playing a DVD disc (multiple languages subtitle required). Press to select different audio track when playing CD disc.

 
4.2 Remote Control Battery Installation

To remotely control the **Prestigio PPDP710**, point the remote control unit towards the remote control sensor within a distance of 5 meters and 30° from the center line of remote control sensor.




The remote control battery is included in the package. Please follow below steps to change battery when power runs out.


1. Push and hold on the side of battery holder, then pull it out from the remote control unit as shown in the diagram.

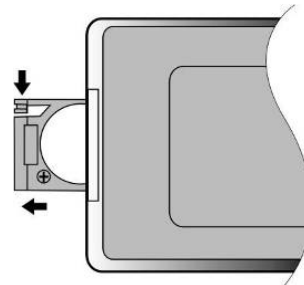

 2. Place a battery with type of CR2025 3V on the holder with (+) facing the back of remote control.

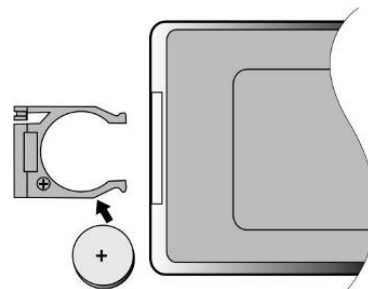

 3. Push the battery holder back into the remote control unit. Please make sure that the holder is firmly inserted.

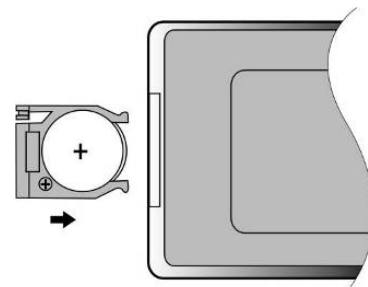

CAUTION:

- Do NOT expose the remote control unit under direct sunlight.
- Do NOT recharge, dismantle, or heat up the battery.
- Replace the exhausted battery immediately to ensure proper remote control unit functioning.

 
5 System Connections



WARNING:


- Please switch off all devices such as TV, DVD player, etc before connecting to the unit.
- Please match color coding on the unit and devices before connection.

5.1 Connecting to TV

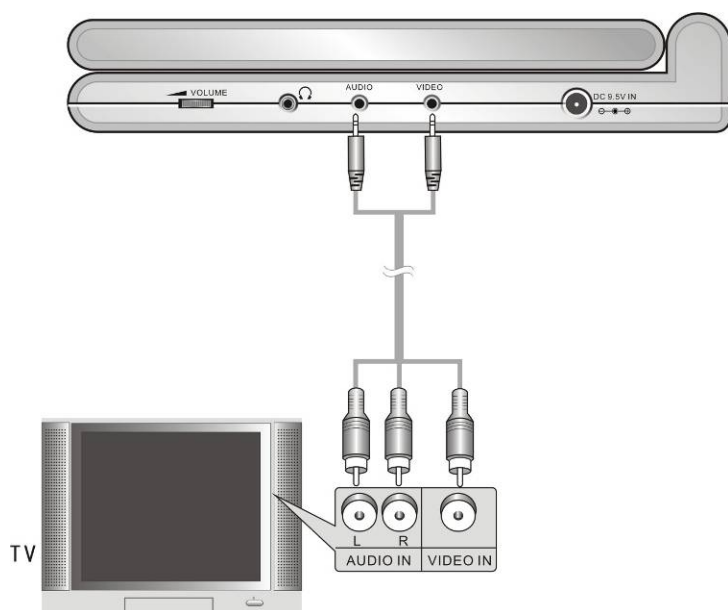


Follow the diagram to the left for connecting **Prestigio PPDP710** with TV via Audio/Video cable.

 5.2 Connecting to Amplifier

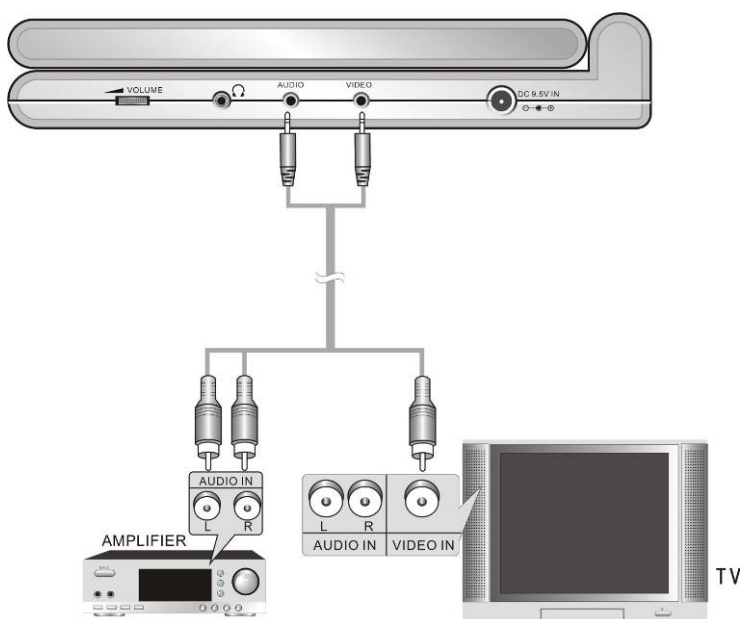

Follow the diagram to the left for connecting **Prestigio PPDP710** with amplifier via Audio/Video cable.

 
5.3 Connecting to External AV Signal Source

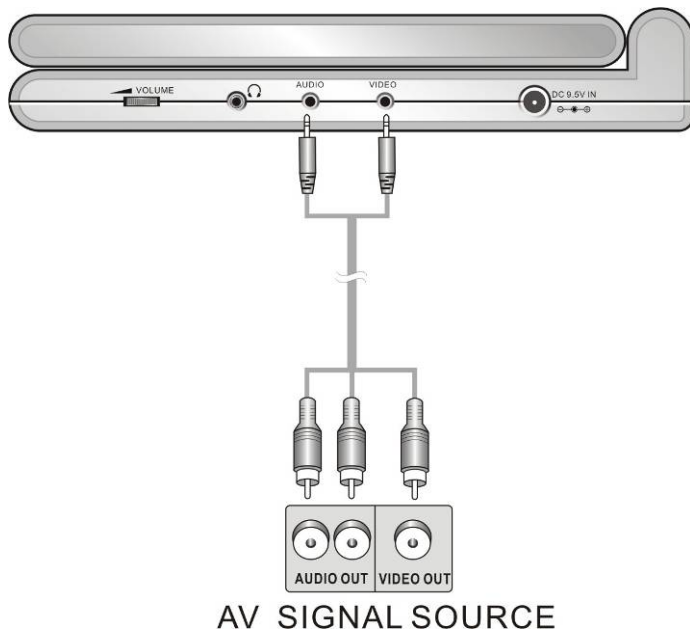

Follow the diagram to the left for connecting **Prestigio PPDP710** with other devices to receive external AV signal source. Press on AV IN/OUT button to switch between internal and external AV source.

NOTE: Noise may occur when there is an external audio signal input while playing from an internal AV source. Unplug the audio cord to clear the noise

 5.4 Connecting to Headphones

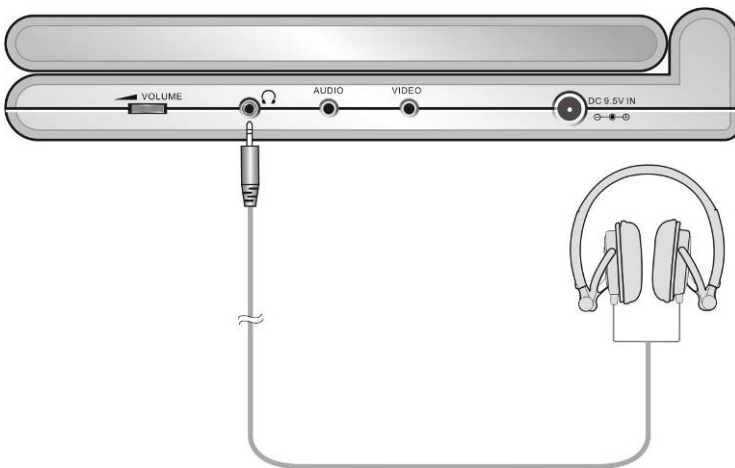


Follow the diagram to the left for connecting **Prestigio PPDP710** with headphone.



WARNING:

Excessively loud volume may detriment hearing. Turn down the volume before connecting to the earphone and then raise the volume to appropriate level.

 5.5 Connecting to AC Adapter

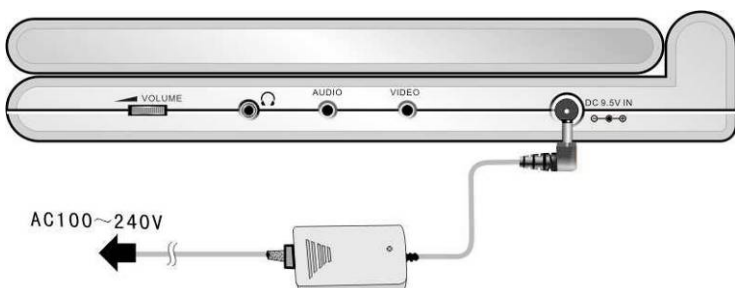


Follow the diagram to the left for connecting **Prestigio PPDP710** with AC adapter.

NOTE:

Turn off device power before connecting to AC adapter to prevent short circuit accidents.

 5.6 Connecting to Car DC Adapter

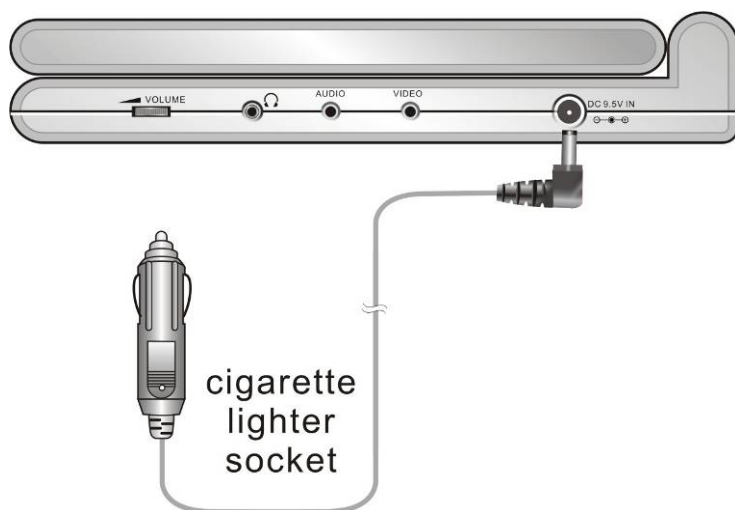

Follow the diagram to the left for connecting **Prestigio PPDP710** to car DC adapter while powering up the unit in car.

NOTE:

 
Turn off device power before connecting to car adapter to prevent short circuit accidents.



WARNING:

- Please disconnect Prestigio PPDP710 from the car DC adapter before starting up the vehicle.
- Do NOT operate the unit or use the device for viewing purpose while operating a vehicle.
- Please place the unit in proper viewing angle for better performance.

5.7 Connecting USB Device or SD Memory Card

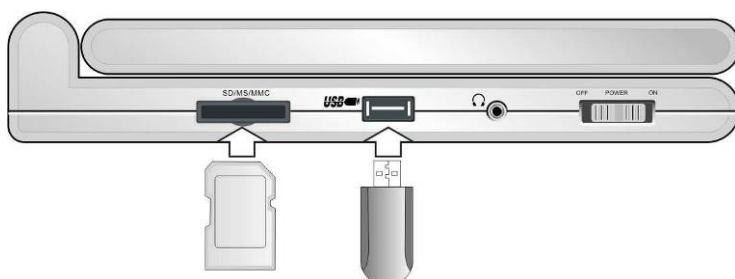

Follow the diagram to the left for connecting **Prestigio PPDP710** to USB device and SD memory card.

6 Device Battery Operations

 
Prestigio PPDP710 is equipped with a Lithium Polymer rechargeable battery attachable to the bottom of the device. Although it varies from disc contents, a fully charged battery pack delivers approximately 2.5 hours of functional playing times. The full charging time of the battery pack is approximately 4 hours. Please follow below instructions on how to charge battery pack and attach/detach it from the device.



Cautions:

- Please fully charge battery pack before using for the first time
- Battery pack should only be used and charged between temperature of 32°F and 100°F.
- Please observe all caution and warning sections listed at the beginning of user manual to ensure proper device and battery usage.

6.1 Charging Battery Pack

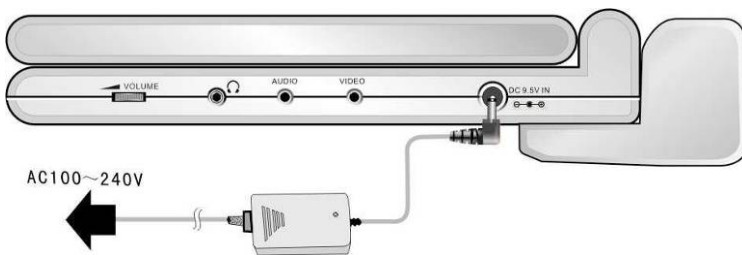


Follow the diagram to the left for connecting **Prestigio PPDP710** with battery pack for charging.

NOTE:


Turn off device power before connecting to AC adapter to prevent short circuit accidents.

 6.2 Attaching Battery Pack

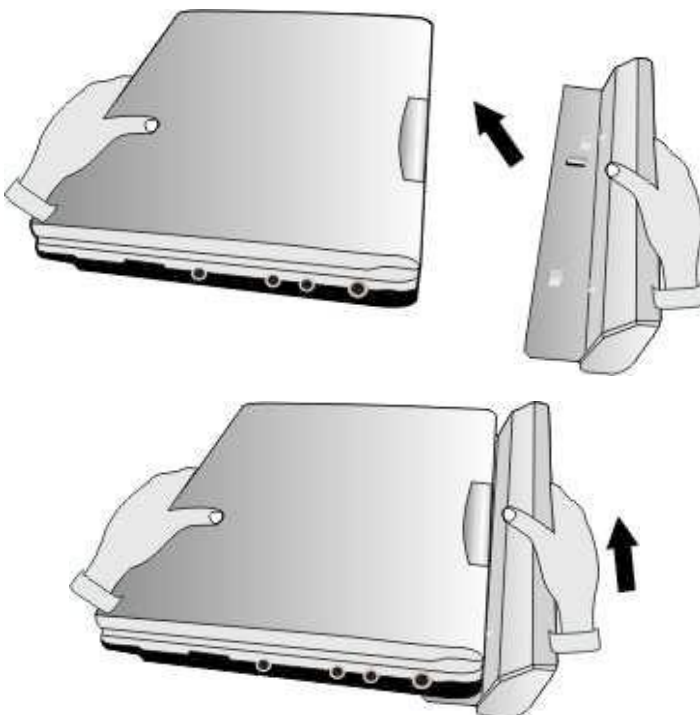


1. Align the plastic tabs on the battery pack with latches on the unit.
2. Push the battery pack in the direction shown in the diagram.
3. Slide the battery pack to the direction shown in the diagram until it clicks and locks into place.

  6.3 Detaching Battery Pack

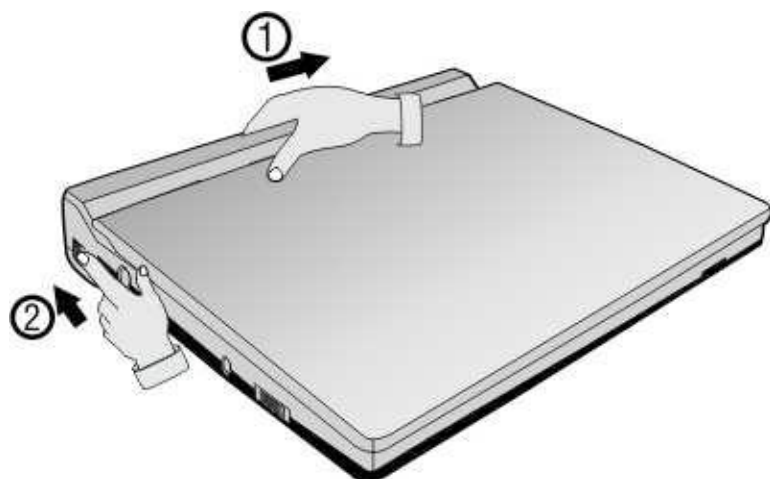

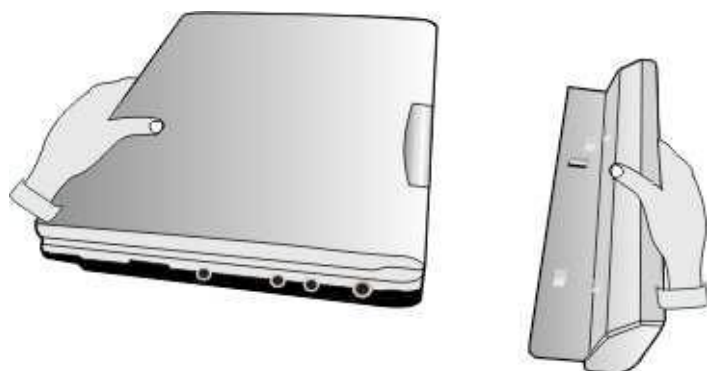

1. Slide and hold the tab on the left side of the device in the direction ①, shown in the diagram.
2. Gently slide the battery pack in the direction ②, shown in the diagram.



3. Remove the battery pack from the device with cautions.

7 Software Compatibility

7.1 Compatible Disc Format

Disc Format	Disc Logo	Disc Size	Playback Time/ Playable Sides
DVD		12cm	133 min (SS-SL)
			242 min (SS-DL)
			266 min (DS-SL)
			484 min (DS-DL)
		8cm	41 min (SS-SL)
			75 min (SS-DL)
			82 min (DS-SL)
			150 min (DS-DL)
CD		12cm	74 min
		8cm	20 min
JPEG	N/A	12cm	N/A
MP3		12cm	600 min

7.2 Disc Maintenance

- **Holding Discs**

Avoid touching the playing surface of discs for it may damage the disc surface.



- **Cleaning Discs**

Fingerprints or stain on the disc may affect the quality of sound and picture. Gently wipe the surface of disc by clean soft cloth for cleaning purpose. Moisten a soft cloth with diluted neutral detergent to remove heavy dirt or fingerprints if necessary.



Do not wipe in a circular motion (concentric scratches on the disc surface tend to cause noise). Gently wipe from the center of the disc to the outer edge as the right figure.



8 General Operation

Please read through the instructions below before operating **Prestigio PPDP710** for the first time.

 
 


WARNING:

Do NOT play poor quality discs for it will damage the lens.

8.1 Before Playing

1. Connect **Prestigio PPDP710** to power supply or wall plug via power adapter provided.
2. Turn on unit by sliding power switch at the left side of unit to ON position.
3. Push the **OPEN** switch to open disc tray cover. Place the disc in the disc tray with printing side face up. Close the disc tray cover.

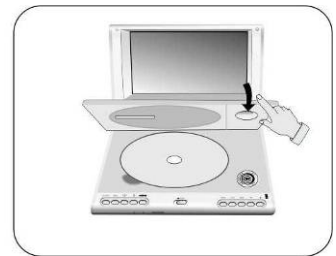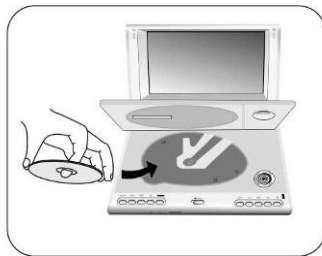

4. The device will automatically begin disc playback process.
5. Adjust the volume by scrolling volume control at the right side of unit to an appropriate level before playback.
6. Turn off unit by sliding power switch at the left side of unit to OFF position.

8.2 Adjusting Screen Aspect Ratio

MODE button

 


Press **MODE** button to change the brightness color, and contrast level. Adjust these values with + and - buttons on the front panel. Press and hold the **MODE** button to change the screen aspect ratio between 16:9 and 4:3 options. Refer below images for simple illustration.

Normal WIDE 16:9




Normal LB/4:3

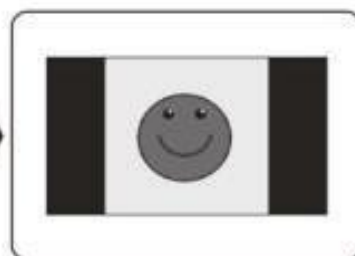

Normal

 8.3 Switching between Media Sources

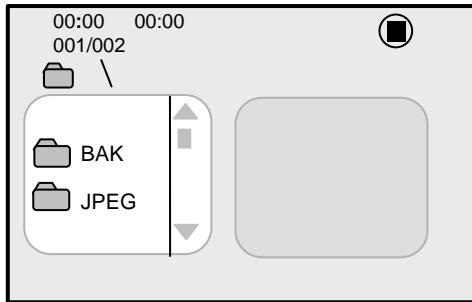

Press **SOURCE** button to switch between media sources including disc, SD/MS/MMC, and USB drive. The default media source is pointed at disk playback mode.


- Press ▲▼ button to select folder and press **ENT** button to enter.
- Press ▲▼ button to select the desired track and press **PLAY** button to start playback.
- Press ■ button to stop playback. Press **PLAY** button to resume.

NOTE:

The USB drive mode is only intended for playback of files stored in USB drive only. All other devices with USB connectivity is not accessible through the device.

9 DVD Disc Playback Operations


▶ button	➡	Press PLAY/▶ button to pause during playback. Press PLAY/▶ button again to resume playback.
STOP/■ button	➡	During playback, press Stop/■ button once to stop playing. Press PLAY/▶ button to resume normal playback from the stopped point. Press STOP/■ button twice to stop playback completely. Then press PLAY/▶ button to start playback from the beginning of file.
⏮/⏭ buttons	➡	Press ⏮ button to go to the previous chapter. Press ⏭ button to skip to the next chapter.
⏮/⏭ buttons	➡	Press ⏭ button to fast forward through the file. Press it repeatedly to fast forward at the speed of 2X, 4X, 8X, 16X, 32X and normal playback in sequence. Press ⏮ button to rewind. Press it repeatedly to rewind at the speed of 2X, 4X, 8X, 16X, 32X, and normal playback in sequence. Press PLAY/▶ button to resume normal playback.
SLOW button	➡	Press SLOW button during playback to view in slow mode. Press it repeatedly to slow playback at the speed of 1/2, 1/4, 1/6, 1/8, 1/16 and normal playback in sequence. Press PLAY/▶ button to resume normal playback during slow mode.
ZOOM button	➡	Press ZOOM button repeatedly during playback to cycle through 2X, 3X, 4X, 1/2, 1/3, and 1/4 zooming effects and normal playback.
A-B button	➡	Press A-B button once to set the starting point A , press it again to designate end point B . The segment from A to B will be played repeatedly. Press the button again to stop A-B repeat function.
MENU button	➡	Press MENU button during playback to return to main menu. Press ▲▼▶◀ directional buttons to select the title/chapter to start playback, and press the ENTER/ENT button to confirm selection, or press 0-9/+10 buttons to select specific title/ chapter directly.

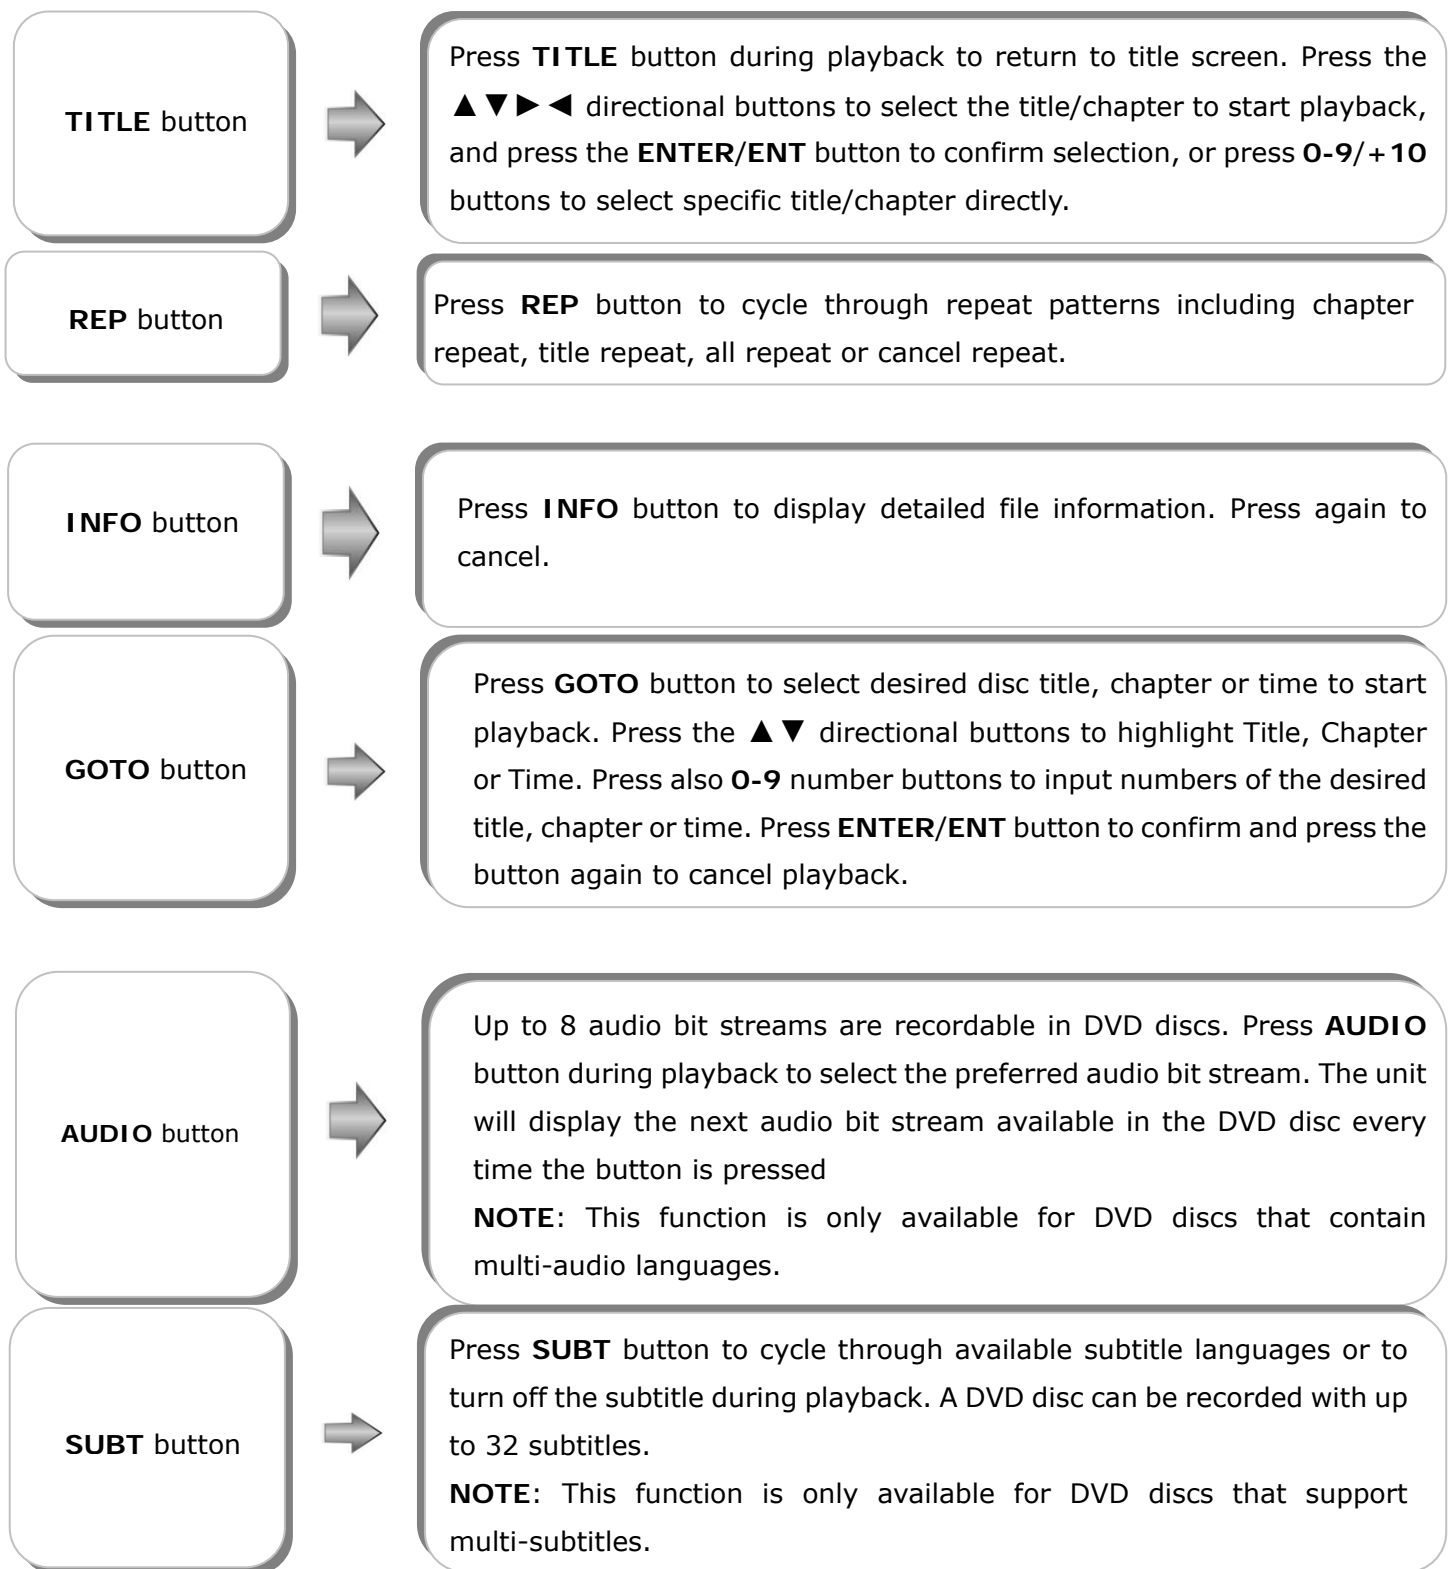 

ANGLE button



 Press **ANGLE** button to play the disc in multi-angle mode. Multi-angle mode allows a scene to be viewed from different angles (files with multi-angle feature only). Refer to the example below:



Press **ANGLE** button to select the angle desired. Press the button repeatedly to cycle through different viewing angles if there are multiple angles in a scene.

NOTE: This function is only available for the DVD discs coded with multi-angles.

10 CD Disc Playback Operations

A CD disc will be automatically loaded when placed in the unit. A playback menu will be displayed on the screen and the files in the disc will be played automatically by the default sequence of the disc. Press **⏮/⏭** buttons to select the desired track or press the **0-9/+10** number buttons to input the number of the desired track.

▶|| button



Press **PLAY/▶||** button to pause during playback. Press **PLAY/▶||** button again to resume playback.

STOP/■ button



During playback, press **STOP/■** button once to stop playing. Press **PLAY/▶||** button to resume normal playback from the stopped point. Press **STOP/■** button twice to stop playback completely. Then press **PLAY/▶||** button to start playback from the beginning of file.

⏮/⏭ buttons



Press **⏭** button to fast forward through the file. Press it repeatedly to fast forward at the speed of 2X, 4X, 8X, 16X, 32X and normal playback in sequence. Press **⏮** button to rewind. Press it repeatedly to rewind at the speed of 2X, 4X, 8X, 16X, 32X and normal playback in sequence. Press **PLAY/▶||** button to resume normal playback.

⏮/⏭ buttons



Press **⏮** button to go to the previous track.
Press **⏭** button to skip to the next track.

GOTO button



Press **GOTO** button to select desired disc track, disk time, or track time to start playback. Press the **▲▼** buttons to highlight Title, Chapter or Time. Press **0-9/+10** number buttons to input numbers of the desired title, chapter or time and press **ENTER/ENT** button to confirm. Press the button again to cancel playback.

REP button



Press **REP** button to cycle through repeat patterns including chapter repeat, title repeat, all repeat or cancel repeat.

INFO button



Press **INFO** button to display detailed file information. Press again to cancel.

AUDIO button




Press AUDIO button repeatedly to cycle through different sound output modes as follows:

Mono Left → Mono Right → Mix Mono → Stereo

11 JPEG File Viewing Operations

● Before Viewing JPEG Files

1. A disc with JPEG files will be automatically loaded when placed in disc tray.
2. The root folder with several subdirectories/subfolders will be displayed. Press **ENTER/ENT** button to enter. Use **▲▼** buttons to select a desired folder and press **ENTER/ENT** button to confirm selection.
3. Upon entering the selected subfolder, pictures with JPEG format will be displayed. Press **▲▼** buttons to select the desired picture and press **ENTER/ENT** button to start playback.
4. Press **▲▼** buttons to highlight  **, or press **◀** button to return to the last folder or directory.

NOTE: Discs may contain files other than JPEG files.

▶|| button



Press **PLAY/▶||** button to pause during playback. Press **PLAY/▶||** button again to resume playback.

STOP/■ button



Press **STOP/■** button to enter picture preview mode during playback. Press **▲▼▶◀** directional buttons to highlight a picture and press **PLAY/▶||** button to view.

◀◀/▶▶ buttons



During the playback, press **◀◀** button to go to the previous picture, press **▶▶** button to skip to the next picture

ZOOM button



Press **ZOOM** button and press **◀◀/▶▶** buttons to cycle through zoom in options (125% → 150% → 200%) and zoom out options (75% → 50%) respectively

MENU button



Press **MENU** button during playback to return to folder mode. Press **▲▼▶◀** directional buttons to select picture to start playback, and press the **ENTER/ENT** button to confirm selection, or press **0-9/+10** buttons to select specific picture directly.

REP button



Press **REP** button to cycle through repeat patterns including **Shuffle** → **Random** → **Single Repeat** → **Repeat One** → **Repeat All** → **Cancel Repeat**.

GOTO button



 
Press **GOTO** button to enter selection menu. Press **0-9** number buttons to input numbers of the picture. In folder mode, press **GOTO** button and **0-9** number buttons to input folder number to view folder contents.

Picture Rotate

 


During browsing a picture, use ►◄ directional buttons to rotate the current picture.


 
 
Press ► button to rotate the current picture 90° clockwise, as shown below:

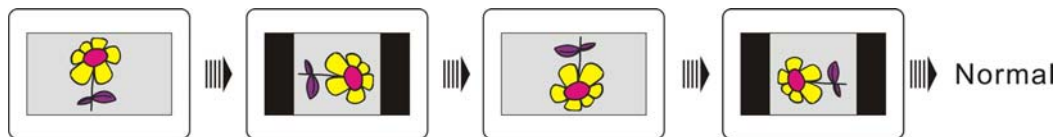

Press ◄ button to rotate the current picture 270° clockwise, as shown below:

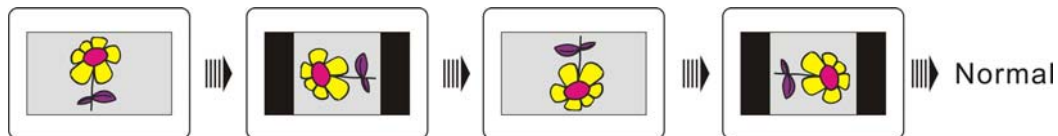

12 MP3 Disc Playback Operations

 button	→	Press PLAY/▶ button to pause during playback. Press PLAY/▶ button again to resume playback.
STOP/■ button	→	During playback, press STOP/■ button once to stop playing. Press PLAY/▶ button to resume normal playback from the stopped point.
 buttons	→	Press ▶▶ button to fast forward through the file. Press it repeatedly to fast forward at the speed of 2X, 4X, 8X, 16X, 32X and normal playback in sequence. Press ◀◀ button to rewind. Press it repeatedly to rewind at the speed of 2X, 4X, 8X, 16X, 32X and normal playback in sequence. Press PLAY/▶ button to resume normal playback.
 buttons	→	Press ◀◀ button to go to the previous chapter. Press ▶▶ button to skip to the next chapter.
GOTO button	→	Press GOTO button to select desired disc track or track time to start playback. Press 0-9 number buttons to input numbers of the desired track or track time.
INFO button	→	Press INFO button to display detailed file information. Press again to cancel.
REP button	→	Press REP button to cycle through repeat patterns including Shuffle → Random → Single Repeat → Repeat One → Repeat All → Cancel Repeat .

13 System Setup

Please follow below procedures to change the default settings to customize its performance to user preference.

Follow the steps below to set up device:

- 1. Press **SETUP** button and the setup menu will be displayed on the screen.
- 2. Press ◀/▶ buttons to select between menu tabs desired for setup. Press **ENTER/ENT** or ▼ button to enter the menu or confirm.
- 3. Press the ◀ button to return to the previous menu. Or press the **SETUP** button again at any time during the setting to exit from the setup menu.

- **General Setup Page**


-- General Setup Page --

TV Display	Wide
Angle Mark	On
OSD Lang	ENG
Captions	Off
Screen Saver	On
Last Memory	Off

Go To General Setup Page

TV Display	<p>Normal/PS: The aspect ratio is set to 4:3. Blank spaces are marked black and located to the left and right of screen.</p> <p>Normal/LB: The aspect ratio is set to 4:3. Blank spaces are marked black and located to the top and bottom of screen.</p> <p>Wide: The aspect ratio is set to 16:9. The picture is stretched in proportion to fit the screen.</p>
Angle Mark	<p>On: An angle symbol will be displayed on the screen if the function is supported.</p> <p>Off: The angle symbol will not be displayed.</p>
OSD Lang	<p>Select between languages to be displayed on the system menu.</p>
Captions	<p>On: Displays the captions if available.</p> <p>Off: Turn off the captions function.</p>
Screen Saver	<p>On: The screen saver mode will be activated if system remains idle for several minutes.</p> <p>Off: The screen saver mode is deactivated.</p>
Last Memory	<p>On: The device recognizes the last played file and starts at the point when the same medium is inserted.</p> <p>Off: The last memory function is deactivated.</p>

 - **Speaker Setup Page**

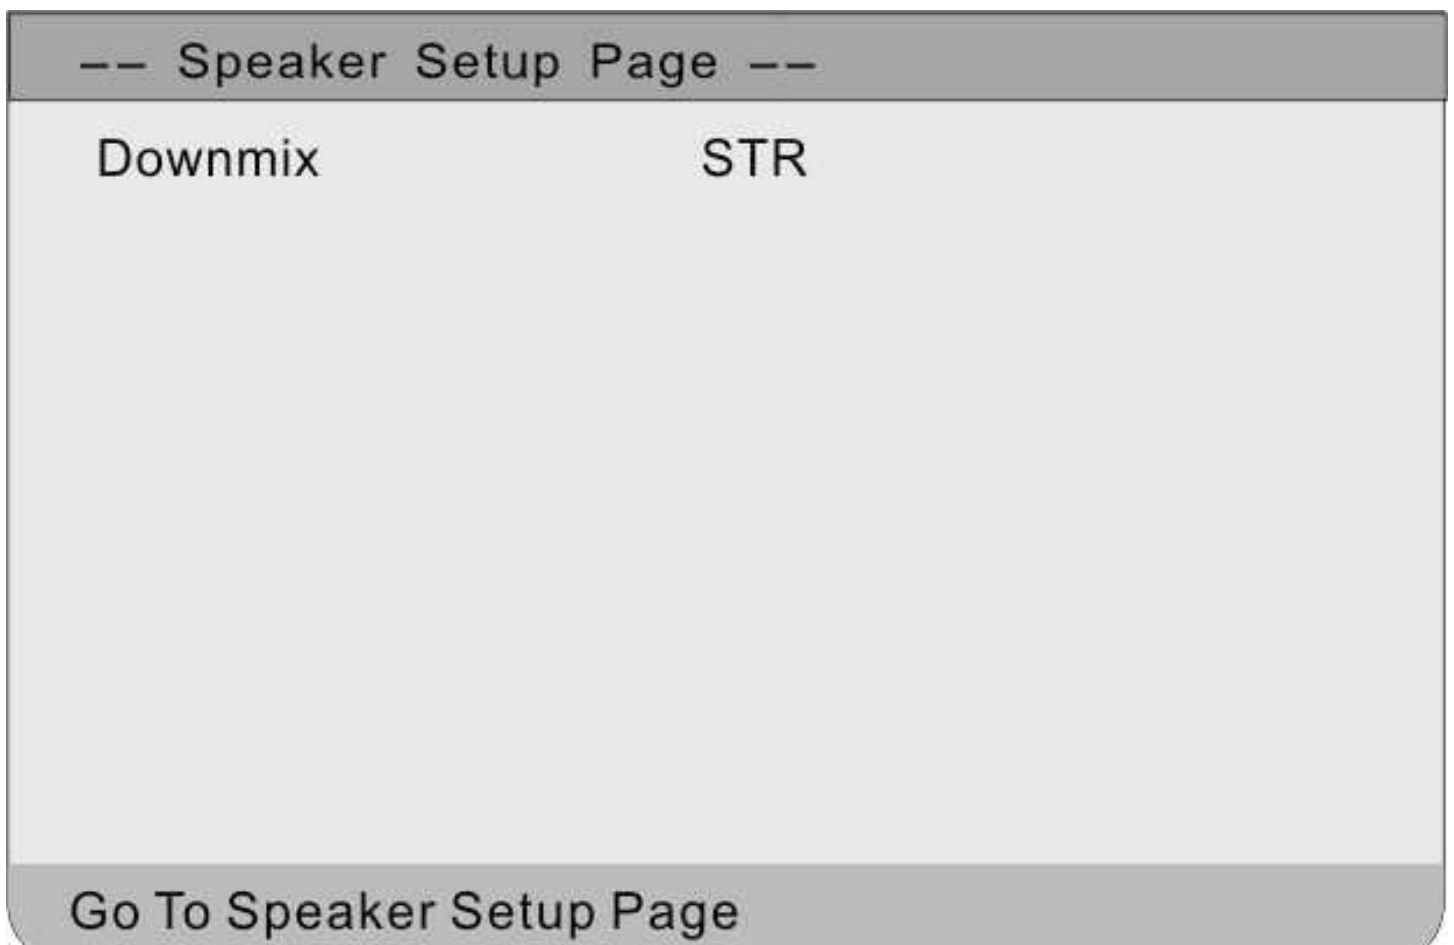


Downmix

LT/RT: Device outputs mixed audio signals in Dolby® format.

Stereo: Device outputs stereo signals.

 - **Dolby Digital Setup**

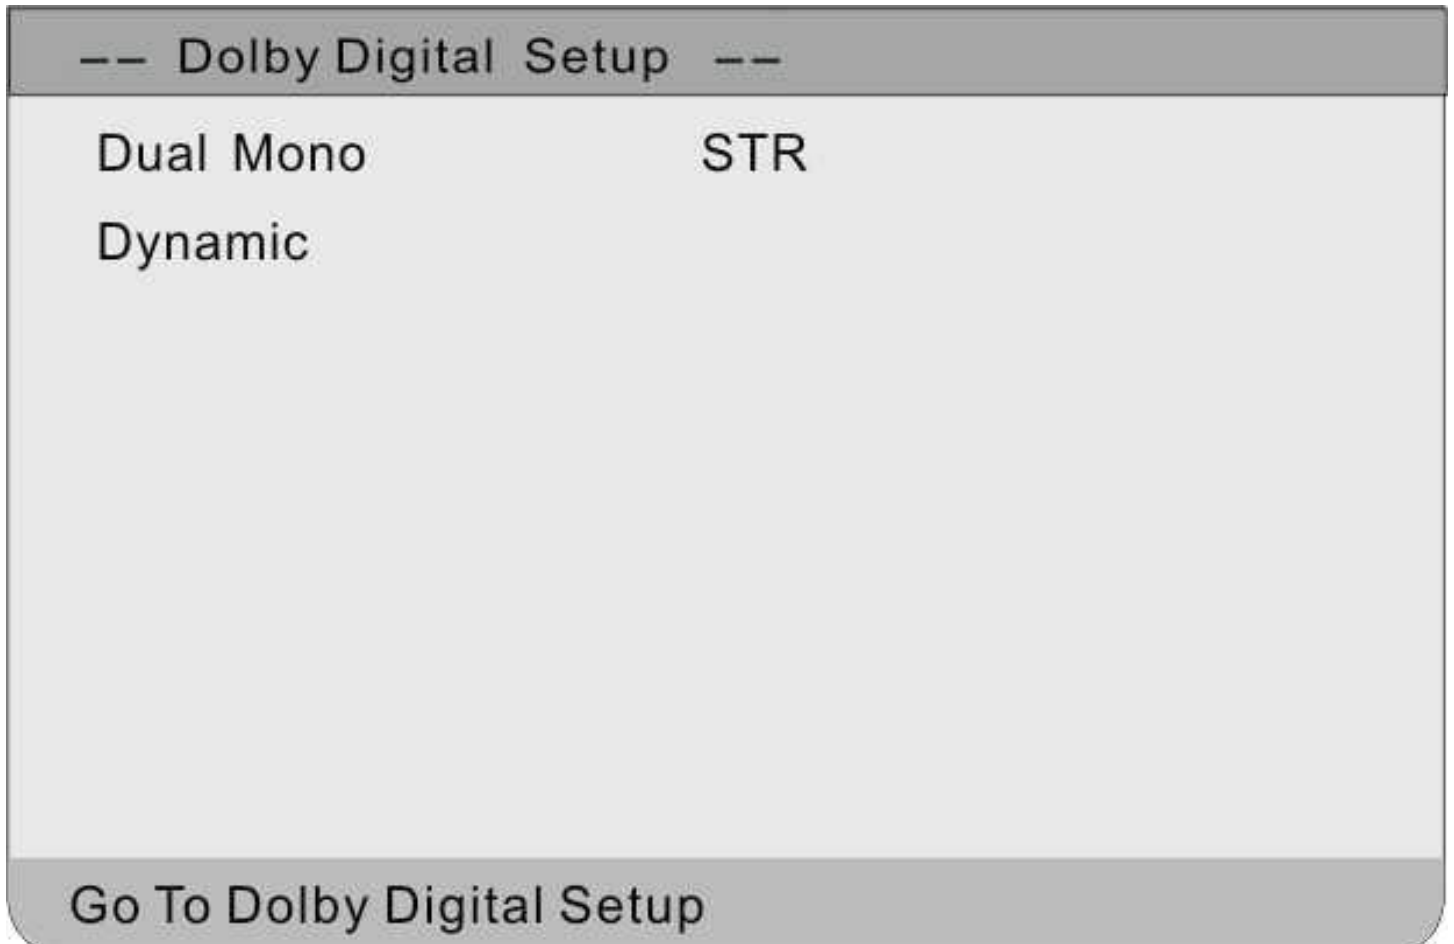

Dual Mono

Stereo: Device outputs stereo signals.

L-Mono: Device outputs signals from left track (L+L)

R-Mono: Device outputs signals from right track (R+R)

Mix-Mono: Device outputs signals from both left track and right track (L+R)

Dynamic

The option adjusts linear dynamic compression rate to render different signal compression effects.

- **Video Setup Page**

-- Video Setup Page --

Sharpness	Low
Brightness	00
Contrast	00

Go To Video Setup Page

- | | |
|-------------------|---|
| Sharpness | The option adjusts screen display sharpness. |
| Brightness | The option adjusts screen display brightness. |
| Contrast | The option adjusts screen display contrast. |

- Preference Page

-- Preference Page --

TV Type	PAL
Audio	ENG
Subtitle	ENG
Disc Menu	ENG
Parental	
Password	
Default	

Go To Preference Page

TV Type The option adjusts the device to conform to TV standard.

Audio The option adjusts the preferred audio language.

Subtitle The option adjusts the preferred subtitle language.

Disc Menu The option adjusts the preferred system language.

Parental The option adjusts the safety level of parental control.

The option sets password for privacy protection.

Password **NOTE:**

The default setting of password is empty.

Default The option resets the device to factory setting upon selection.

14 Using Carrying Case

Follow the steps below to attach the **Prestigio PPDP710** onto the car seat headrest.

1. Unzip the main compartment that holds the device.
2. Locate the set of rings tucked inside the top edge of the case as shown in illustration **A** below.
3. Locate the two straps with hooks on each end.
4. Hook one end of each strap to the rings at the top of the case as shown in illustration **A** below.
5. Cross the straps around the front of the headrest as shown in illustration **B** below.
6. Hook the straps to a second set of rings on the lower part of the case as shown in illustration **C** below.
7. Tighten up the straps until they are secured.



15 Troubleshooting

Take steps described in the tables below to solve simple problems before contacting customer service.



WARNING:

Immediately turn off the unit and disconnect the power adapter if the unit is not working properly. Never try to repair the unit without authorized professionals for it may damage the unit.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The unit does not interact with discs	The disc cover is not properly closed.	Close the disk cover and press firmly to ensure fully closure.
	There is not disc in the disc tray.	Place a disc with playable format files.
	The disc is not placed with label side facing up.	Place the disc with label side facing up.
	The disc may not be clean or scratched.	Clean the data side of disc to prevent misreading.
	The disc region code may not match that of the unit.	Make sure the both region code match.
	There is liquid on the lens.	Remove the disc and keep the unit powered off for at least 2 hours.
There is no sound.	The connection between the unit and audio system is bad.	Re-connect the audio system and the unit and make sure the connection is secured.
	The speaker may be off.	Turn on the speaker.
	The sound of the disc may not be setup correctly.	Try setup the disc sound again.
	The disc may not be clean or scratched.	Clean the data side of disc to prevent misreading.

There is no picture.	The LCD panel may be off or not in proper video mode.	Turn on the LCD panel or adjust to a proper video mode.
	The connection between the unit and video system is bad.	Re-connect the video system and the unit and make sure the connection is secured.
	The unit is not in AV OUT mode.	Press AV IN/OUT button at the bottom of the unit to switch from AV OUT mode to AV IN mode.
Poor AV performance.	The disc may not be clean or scratched.	Clean the data side of disc to prevent misreading.
The remote control is not functioning properly or not working at all.	There may be obstacles between remote control and the receiving port on the unit.	Remove obstacles between remote control and the receiving port on the unit.
	The remote control is not aligned with the unit	Try pointing the remote control towards the receiving port on the unit.
	The battery on the remote control is not properly inserted.	Adjust the battery position in the remote control as instructed.
	The battery in the remote control is weak or depleted.	Replace the battery.



WARNING:

Static or other external interference may cause Prestigio GeoVision 430 to function abnormally. In order to remove abnormality, please unplug the power cord and then plug it into the outlet again to reset the device. If the problem persists, please unplug the power cord and consult local service center or the qualified technician.

16 Appendix

16.1 Product Specification

TFT screen size	10.2 inches 16:9 panel
Screen Resolution	800 X 480
Laser Wavelength	780/650 nm
Video System	PAL/NTSC
Frequency Response	20Hz ~ 20kHz ± 2.5 dB
Audio Signal-to-Noise Rate	≥ 85 dB
Audio distortion + noise	≤ -70 dB (1kHz)
Channel Separation	≥ 70 dB (1kHz)
Dynamic Range	≥ 80 dB (1kHz)
Audio Out	Output Level: $1.5V \pm_{1.0}^{0.2}$, Load: 10K Ω
Video Out	Output Level: $1V_{p-p} \pm 0.2$, Load: 75 Ω Unbalanced Negative
Power	AC100~240V (50/60Hz)
Dimensions	269mm X 203mm X 38mm (L*W*D)
Weight	Approximately 1.83kg

16.2 Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and warranty information.

16.3 Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. **Prestigio** reserves the right to make any changes without further notice to any products herein.