

1. Important safety instructions	2
2. Accessories	3
3. View of main unit	4
4. Device connections	6
5. Cautions on battery charging	8
6. Getting started	9
7. Device Settings.....	10
8. Connecting to Wi-Fi.....	12
9. FM Transmitter.....	13
10. Navi Menu	14
11. Programme Interface.....	15
12. Autorouting	19
13. Additional Features.....	21
14. Troubleshooting	22

Important Safety Instructions

EN



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

1. To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.
2. The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer or authorized unit.

WARNING

The device should not be exposed to dripping or splashing and no objects filled with liquids should be placed on the device.

Accessories List

ITEM	NAME	QTY
	Car Charger	1
	USB Cable	1
	Stylus Pen	1
	Stylish Carry Case	1
	User Manual	1
	Warranty Card	1
	Driver/Document CD	1
	Smart Mount	1
	User guide (for smart mount)	1

View of Main Unit

EN

Front and Side View



1. LCD Touch Screen

Tap the screen with touch pen or finger to select menu commands or to enter information.

2. Battery Status Indicator

The indicator glows in bright green colour when battery is fully charged and in red color when charging.

3. Earphone Jack

Connects to earphones or headsets.

4. microSD Slot

Receiving microSD memory card for data access or memory expansion.


5. mini USB Port

Connection to USB Cable for data access or battery charging

6. Microphone

Records sound.

Rear and Top View

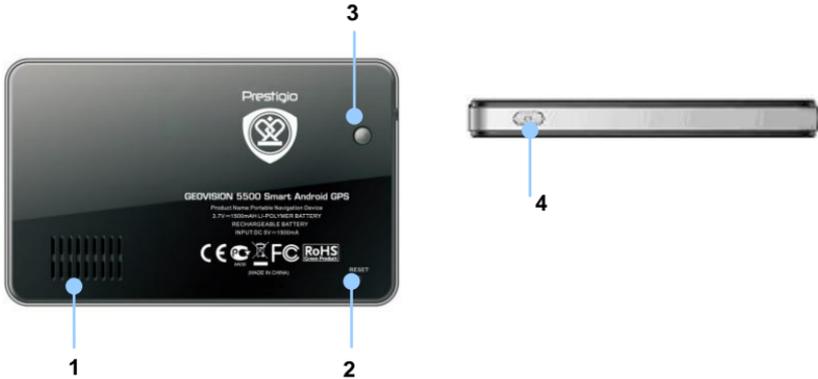

- 1. Speaker**
Emits sound, voice or music.
- 2. Reset Button**
Press to reboot the device.
- 3. Light Sensor**
Adjust the brightness of touch screen
- 4. Power Button**
Press to power the device ON/OFF.

Inserting microSD Card



- To insert a microSD card, place the connector towards the device and the card label towards the front side of the device.
- To remove a microSD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

**NOTE:**

Please always make sure that no application is accessing the microSD card before extraction.

Connecting to External USB Device (Charging)



- Insert the USB connector into the appropriate USB port.
- Insert the other USB connector into the USB port on PC to start charging.

Connecting to Car Charger



- Insert the USB connector into the appropriate USB port.
- Insert car charger connector into vehicle 12V accessory/cigarette socket to start charging.

**NOTE:**

Please connect the car charger to vehicle 12V accessory/cigarette socket after the vehicle engine is started to protect the device from sudden surges in current.

Cautions on Battery Charging

About Rechargeable Battery


The device is equipped with a built-in rechargeable battery. Please fully charge the battery (for at least 5 hours) before initial use. The battery status indicator glows in red color when charging and turns bright green color when charging is complete. Charging time is approximately 4 hours.

Working conditions and precautions for the rechargeable battery

- Devices with new batteries should be fully charged before initial use.
- It is not necessary to start charging the device before the battery is fully discharged.

Getting Started

EN

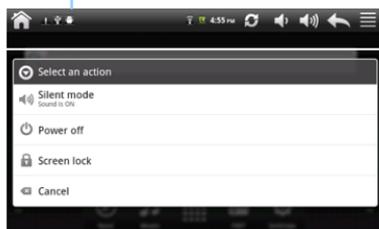

1. Press and hold **Power Button** to turn on the device.
2. Shortly after the greeting screen is shown, the main menu will be displayed.
3. Tap the corresponding buttons with touch pen included to navigate through various functions.
4. Press and hold Power Button to turn off the device for about 8 seconds, the left side interface will be shown
5. Tap **Silent mode** to silence all sounds ; Tap **Power off** to turn the device off; Tap **Screen lock** to sleep the device; Tap **Cancel** to close the current window

Device Settings

EN



- In the main menu, tap on  to enter the device settings.
- Move up & down to display other settings.

Wireless&network

Configure the wireless connections, eg: Wi-Fi

FM Transmit

Transmit audio signals from the navigator to radio set

Sound

Adjust sound volume, mute device, or enable warning messages

Display

Set the screen brightness, auto-rotate, animation & screen timeout

Location&security

Select the sources to use when determining the location, such as wireless networks, GPS satellites, Set up SIM card lock.

Applications

Manage applications & installation of new programs

Accounts &sync

Log in / out from the social network accounts, such as Google Account, Exchange ActiveSync account.

Privacy

Erases all data on the device

SD card & device storage

Check the available storage card & device memory



- In the main menu, tap on  to enter the device settings.
- Move up & down to display other settings.

Search

Choose what to search on the device & set Google search options

Language & keyboard

Set the operating system language & onscreen keyboard options

Date & time

Set up Time Zone/Date/Time.

Touch screen calibrate

Calibrate the screen when position deviation occurs.

About device

View the device system info, such as network type & name, battery power level, Model number, legal information & software version of the device.


Update

Update to the latest available software


Connecting to Wi-Fi

Connecting to Wi-Fi

- Select **Settings** icon to access the list of options. Select **Wireless & networks**.

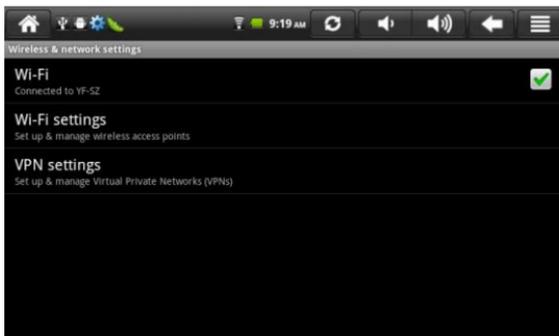

- If the Wi-Fi is off, tap on  and switch it to . Then select the **Wi-Fi settings**.
- The device will scan for available Wi-Fi networks and display them at the bottom of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Done**, and then tap on **Connect**.
- Your device will now attempt to establish a connection to the Wi-Fi access point with the network parameters you entered. After connecting to a Wi-Fi network, the  icon appears on the status bar on the right side of the Home screen.

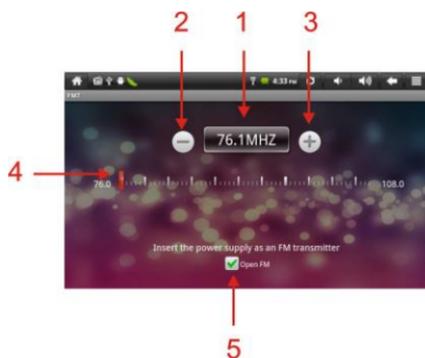

1. FM radio frequency
2. Tap on **-** or drag the cursor to tune FM frequency down.
3. Tap on **+** or drag the cursor to tune FM frequency up.
4. Drag to tune in to a frequency on FM band
5. Switch on/off FM radio

(Note: Please make sure GPS is connected to the car charger before using FM Transmitter)

Navi Menu

EN

Tap on the icon  on the Home screen to enter the following interface:



Tap on the sub-menu , the interface will show as below:



In this interface, there is a list of navigation applications if you have loaded in the device, here the device comes with Navitel 5.0.



No.	Name	Function
1	Next maneuver	Next maneuver on the way and distance up to it. Press this Icon to open route options menu.
2	Compass	Press the compass loon to edit map rotation mode, map view and day/night mode.
3	Sound	Press this button to turn on/off voice and sound effects.
4	Information panels	Display time until the end of the trip, total route length, and arrival time.
5	GPS-cursor	If GPS connection is established, displays your current location.
6	Route	Route you are currently navigating displays as a wide blue line.
7	Search	Press this button to enter the search menu and to find specific address or object (you can find more Info about Search In ~Functionality~ section)
8	Information panel	Shows street name you are currently moving on. Available only if GPS or GLONASS connection is established. If there is no street name, the direction will be shown.
9	Scale	Map current scale.

Program interface

EN

No.	Name	Function
10	Return to current location	You can see the green arrow at the top of the screen if the map was moved relative to your position. Press it to return view to your current location.
11	Autoscale	If you zoom In/out with ~Autozoom~ function activated, this function will deactivate for a period according to settings. Press this button to activate ~Autozoom~ function manually.
12	MENU	Press to enter the Main Menu.
13	Zoom Out	Decrease map scale.
14	Zoom In	Increase map scale.
15	Map slope	Press "Up"/"Down" to slope the map. Available only if scale is between 5 and 300 m.
16	Speedcam window	When you approach a speed camera with visual warnings being activated the window will appear In upper right corner at the screen. This window shows you permitted speed and distance left. Press the window to turn On/Off speed exceeding sound warnings.
17	Speed	Current speed. Available only with GPS connection established.
18	Information panel	Shows street name you are currently moving on. Available only if GPS or GLONASS connection is established. If there is no street name, the direction will be shown.
19	Battery	Icon displays battery life. Press it to open window with full information about battery life and remaining memory.
20	GPS	GPS connection button. Green icon - connection enabled, white icon – function disabled. Green icon also has a dot at different color: red - no connection, yellow - poor connection, green - connection established.



No.	Name	Function
21	Waypoint	Waypoints are manually created by the user and display with red flags on a map.
22	"SaveWP"	Saves current mark on map as a waypoint.

Program interface

No.	Name	Function
23	"Cursor"	Shows the menu of mark on map
24	Mark on map	Touch the screen with a stylus to set a mark. You can save this mark as a way point add it to the route or see object's characteristics the mark was set on.
25	Track record	Track record. Green icon - track record enabled, white icon function disabled.
26	Traffic Jams	Press this icon to edit "Navitel.Traffic Jams." function.
27	Navitel.SMS	Button is used to read/send SMS-messages and to work with coordinates given there. Figure near the icon displays number of unread messages.
28	"Go To"	"Mark on map" becomes the end point of the route.
29	Insert	"Mark on map" becomes the middle point of the route
30	"Add"	"Mark on map" becomes the end point of the route, whereas previous end point becomes middle point.
31	"Start"	"Mark on map" becomes the start point of the route. You should turn off your GPS/GLOANASS-receiver.
32	Back	Depends on way you got to this screen , returns back to "Map" screen or to find menu.
33	Info	Info about current "Mark on map" position. Tap to see more.
34	Back to map	Returns to the "Map" page
35	Object of interest	Different objects on map (traffic lights, metro stations, petrol stations etc.).

Autorouting

In order to create a route automatically, from the current position to the destination point, tap with the stylus pen on the place on the map where the final point is, tap on the "Cursor" button and in the context menu choose "Go to" (Fig. 1). The calculated route will be shown on the map in blue color with highly visible dark border (Fig. 2). Please, note that in case of non-routable maps, the route will represent a straight green line from your position to the destination point, ignoring the existing buildings, roads, etc.


1

2

Autorouting

EN

Autorouting using search

Find an object of interest using “Search” and press it with stylus, then select “Go To” item from the menu. Apart from this item there are also “Insert” — add a point between two points of existing route, and “Add” — point is added to the end of a route and continues it. Both items are available only with existing route.

Manual route creation

The difference of this route creation method from previous two is what you can set a start point and a destination point.

To create a route, press a map using stylus, press the “Cursor” (Fig. 1) button and “Start” button after the menu appears (Fig. 2). Then find the destination point and press “Cursor” — “Go To” (Fig. 3). If you using maps supports autorouting, route will be created referring to this data and will be the shortest or the quickest. Otherwise waypoints will be connected with straight green lines.


Please note! If GPS-receiver is active, you cannot set the start point!



1



2

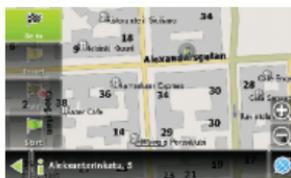

3

If your device has GPRS-module, or provides Internet connection via the GPRS-module of your mobile phone through Bluetooth, you will be able to use some «Navitel.Navigator» software features like «Navitel.Traffic» and «Navitel.SMS» services.

Navitel.Traffic



Using this service you can see the traffic situation in Russia, Ukraine, Belarus or any other country you have official map for. To set the service, go to "Settings" -> «On-line services» -> "Traffic Jams".

When the service is active, the roads are colored in different colors, which mean: red - traffic jam, pink - movement is complicated, yellow - movement is a bit complicated, green - favorable traffic(1).

Navitel.SMS

The special window will appear on the screen when you receive the Navitel.SMS[2]. Select "Hide" to hide it or "Accept" to see options.

Note:

For more detailed information regarding the functionality of Navitel 5.0 software, please, refer to the complete user manual on CD, or to www.prestigio.com.

Troubleshooting



NOTE:

Immediately turn off the device and disconnect the power adapter if the device is not working properly. Never try to repair the unit without authorized professionals for it may damage the unit.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Users can't turn on the unit.	The adaptor doesn't connect well.	Connect the adaptor correctly.
	The built-in rechargeable battery is weak.	Use the adaptor to supply power or charge the battery.
There is no sound.	The volume may be turned down or mute.	Turn up the volume or turn on the sound output.
There is no picture.	The brightness may be turned down.	Adjust the brightness of the LCD.
The unit can't receive satellite signals or can't orient.	The unit may be obstructed by buildings or metal block.	Make sure to use the unit out of room; if in the vehicle, you can use the external GPS antenna to solve this problem.

Troubleshooting

EN

PROBLEM

POSSIBLE CAUSE

POSSIBLE SOLUTION

The unit can receive signals now but can't then; signals received are not stable.

The built-in rechargeable battery is weak.

Use the adaptor to supply power or charge the battery.

The unit may be obstructed by veil, such as heat insulation paper.

Remove the veil.

Swing of the unit is too great.

Avoid great swing of the unit.

Disclaimer

As the Prestigio products are constantly updated and improved, your device may have a slightly different appearance or modified functionality than presented in this Quick start Guide.

To establish connection with PC for data access and synchronization, please execute setup file included in the Driver/Documentation CD or download the file from Microsoft website to install:

Microsoft Active Sync® software for operating system **Microsoft XP or earlier versions**

(<http://www.microsoft.com/windowsmobile/en-us/downloads/microsoft/activesync-download.msp>)

and/or

Microsoft Mobile Device Center® software for operating system **Microsoft Vista**

(<http://www.microsoft.com/windowsmobile/en-us/downloads/microsoft/device-center-download.msp>).

Please refer to the Microsoft website for more detailed instructions.