


Important Safety Instructions

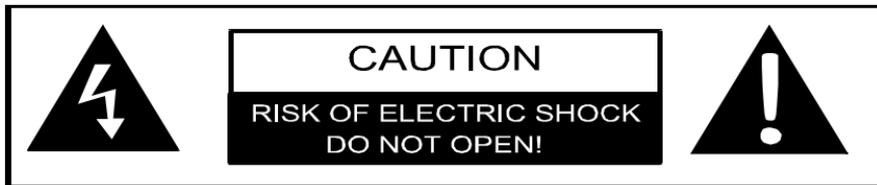

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.

CAUTION

1. To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is unused for a long period of time.
2. The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer or authorized unit.
3. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Accessories

EN

Prestigio GeoVision 4120BT/5120BT – Accessories List

ITEM	NAME	QTY
	Car Charger	1
	Mounting Cradle	1
	USB Cable	1
	Touch Pen	1
	Leather Carrying Case (GeoVision 5120BT Only)	1
	Driver/Documentation CD	1
	User Manual	1
	Warranty Card	1

Front and Side View



1. LCD Touch Screen

Tap the screen with touch pen or finger to select menu commands or to enter information.

2. Battery Status Indicator

The indicator glows in bright amber color when battery is fully charged and in red color when charging.

3. microSD Slot

Receives microSD memory card for data access or memory expansion.

4. Mini-USB Port

Connects to USB Cable for data access or battery charging

5. Headphone Port


Connects to stereo headphones or headsets.

6. Reset Button

Press to reboot the device.

View of Main Unit

Rear and Top View

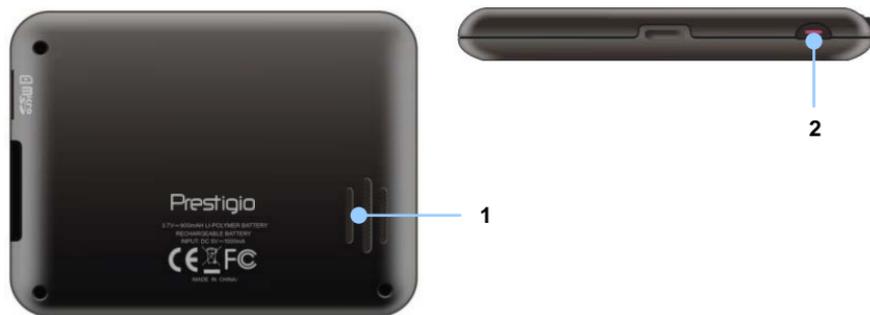

- 1. Speaker**
Emits sound, voice or music.
- 2. Power Button**
Press to power ON/OFF device.

Device Connections



NOTE:

Please always make sure that the device and any other external device connected to the device are powered off and unplugged from the power supply before attempting to connect the device to any external device.

Inserting microSD Card



- To insert a microSD card, place connector towards device and card label towards the front side of the device.
- To remove a microSD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.



NOTE:


Please always make sure that no application is accessing the microSD card before extraction.

Connecting to External USB Device (Charging)



- Flip open the protective rubber cover towards the front of the device.
- Insert USB connector into the appropriate USB port.
- Insert the other USB connector into USB port on PC to start charging.

Connecting to Earphones

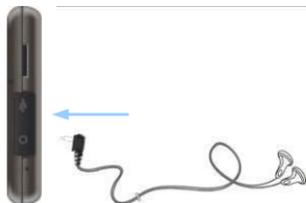

- Flip open the protective rubber cover towards the front of the device.
- Insert earphone jack (earphones not included) into the appropriate earphone port to switch audio output from device speaker to earphone.



NOTE:

Excessively loud volume is potentially detrimental to hearing. Please turn down the volume before connecting the earphone and gradually turn up the volume to a comfortable level.

Connecting to Car Charger



- Flip open the protective rubber cover towards the front of the device.
- Insert USB connector into the appropriate USB port.
- Insert car charger connector into vehicle 5V accessory/cigarette socket to start charging.



NOTE:

Please connect the car charger to vehicle 5V accessory/cigarette socket after vehicle engine is started to protect the device from sudden surges in current.

Cautions on Battery Charging

About Rechargeable Battery

The device is equipped with a built-in rechargeable battery. Please fully charge the battery (for at least 8 hours) before initial use. The battery status indicator glows in red color when charging and turns bright amber color when charging is complete. Charging time is approximately 2 hours.

Working conditions and precautions for the rechargeable battery

- Device with new batteries should be fully charged before initial use.
- Battery should only be used and charged when temperatures are between 0° ~ 37°C.
- It is not necessary to start charging the device before the battery is fully discharged.

**NOTE:**

Please connect the car charger to vehicle 5V accessory/cigarette socket after vehicle engine is started to protect the device from sudden surges in current.

Using Mounting Cradle



NOTE:

- Do not operate the device while driving.
- Please select an appropriate location on the dashboard or windshield where the device will not obstruct driver field of vision.

Device Mounting Procedures

The device can be securely mounted on vehicle dashboard or windshield with the mounting cradle included. Please follow procedures below to operate mounting cradle:

1. Select an appropriate location on windshield or dashboard where the device and mounting cradle will not obstruct driver field of vision.
2. Please also make sure that the device has a clear view of sky to attain best GPS reception.




- Place device on the bracket with bottom positioned on the appropriate socket as illustrated by **Arrow 1**.
- Push on the top edge as illustrated by **Arrow 2** to securely install device onto the cradle.
- Lift the suction cup lever and press the suction cup at desired location.
- Press down the suction cup lever as illustrated by **Arrow 3** to secure the mounting cradle on the surface.
- Rotate the knob to adjust device to desired viewing angle.

To Dismount Device

1. Push the tap on top of the mounting cradle to release the device.
2. Lift the suction cup lever to easily remove the suction cup from windshield or dashboard.

Getting Started

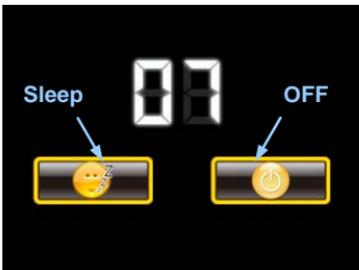

1. Press and hold **Power Button** to turn on device.


2. Shortly after the greeting screen is shown, the main menu will be displayed.

3. Tap the corresponding buttons with touch pen included to navigate various functions.

4. Press and hold **Power Button** to turn off the device or to allow device to enter sleep mode.

5. Tap **Sleep** icon to instruct device to enter sleeping mode or **OFF** icon to complete turn off the device.

Bluetooth Function Main Menu

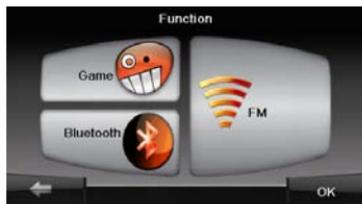


1. Tap on **Function** icon on the main menu.
2. Tap on **Bluetooth** icon to start using Bluetooth function.
3. Tap on **ON/OFF** icon to enable/disable Bluetooth function.
4. Tap **Info** icon to review Bluetooth information.
5. Tap on  to reset a new PIN code. The default setting is **1234**.

Bluetooth Connection



1. Tap on **DUN** icon or **HF** icon on the main menu.
2. Tap on **Paired List** icon to start pairing with mobile phone device with GPRS function.
3. Please make sure Bluetooth function on mobile phone is detectable by other devices.
4. Tap on  to start searching process.
5. Mobile phone name desired for connection will be displayed on the list when search is completed.
6. Tap on the mobile phone name and tap on  to establish connection.
7. Enter **PIN code 1234** when PIN number is required on mobile phone device.
8. Tap on  to disconnect current Bluetooth connection.
9. Select mobile phone name from **Paired List** and tap on  to re-connect from previously connected mobile phone.
10. Select mobile phone name from **Paired List** and tap on  to remove it from the list.

Hands Free Function

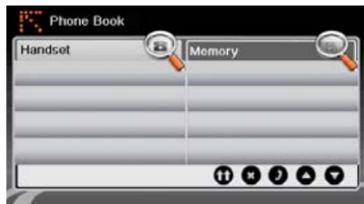


1. Tap on **HF** icon on the main menu.

NOTE:

Please refer to **Bluetooth Connection** section before connecting by Hands Free function.


2. Tap on **Dial** icon to make phone calls.
3. Tap on digit buttons and tap on  to start dialing.
4. Tap on  to answer a call if it is on standby.
5. Tap on  to end call.
6. Tap on  to switch the call to mobile phone or switch it back to device.
7. Tap on  to show dialing keypad to dial more numbers.
8. Tap on **Phone Book** icon to view phonebook entries.
9. Tap on  to browse phonebook entries stored in SIM card.
10. Tap / to scroll pages up/down.
11. Select a phonebook entry and tap  to make the call.
12. Select a phonebook entry and tap  to delete it.

Hands Free Function

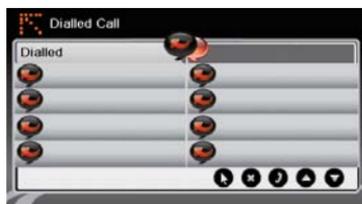


13. Tap on **Calls List** icon to review call history.
14. Tap  to view **Dialed Call** list, **Received Call** list, and **Missed Call** list.
15. Tap   to scroll pages up/down.
16. Select a phonebook entry and tap  to make the call.
17. Select a phonebook entry and tap  to delete it.

FM Function

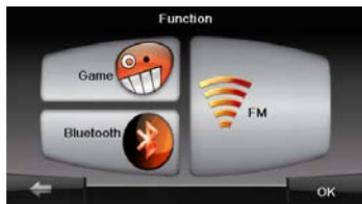

1. Tap on **Function** icon on the main menu.
2. Tap on **FM** icon to start using Bluetooth function.
3. Tap on   to tune FM frequency down/up.
4. Tap on  to adjust volume.
5. Tap on  to save current FM station.
6. Tap on  to cancel settings and exit.

Initialization and Software Activation

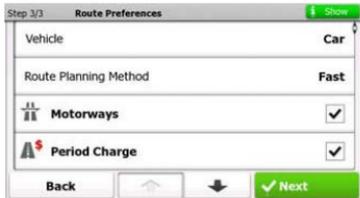

1. Tap and language option to select system language.
2. Tap to confirm selection
3. Carefully read through Software and Database End User License Agreement. Tap to agree with the terms of use.
4. The configuration wizard will be displayed in the selected language. Tap to continue.
5. Tap to display all available voice guidance language profile. Tap on a language for a short voice sample and tap to confirm selection.
6. Select desired time format and units and tap to confirm selection.
7. Select desired route navigation option and tap to confirm selection.
8. The initialization is now complete. Tap to continue.
9. Tap to start tutorial that review the basic steps of navigation. Tap to skip introduction.
10. Tap to activate navigation software right away.



NOTE:

Device must be connected to an active Internet connection to start activation process.

Navigation

Introduction



Tap on **Navigation** icon to start navigation software. The options are displayed as below:



Tap **Destination** icon to start navigation function by entering an address or selecting a **Place Of Interest (POI)**, a location on the map, or one of **Favorite** destinations. Recent destinations can also be displayed from the **Smart History**.



Tap **My Route** icon to display routing parameters including cancelling current route, selecting route alternatives, simulating navigation, and adding destination to **Favorites**.

NOTE:

The button remains inactive when no destination is selected.



Tap **More...** icon to adjust software settings, go through Demo & Tutorial, execute additional applications, or received extra content from www.naviextras.com



Tap **Show Map** icon to start navigating on the map.



Tap **Exit** icon to stop navigation and exit the software.

Navigation

Destination Menu



In the navigation menu, tap on **Destination** icon to start navigation function.



Enter an address as routing destination.



Select a **POI** as routing destination.



Select a location on the map to navigate to.



Select a routing destination from favorite list.



Navigate to the latest destination as displayed.



Select one of latest destinations from history list.


Navigating to An Address



1. In the navigation menu, tap **Destination** icon and then **Find Address** icon.
2. Current country/state/town (location attributes) is set as default location.
3. Tap **Select Street** to continue or **Back** to return.
4. Tap location attributes desired to change its values.
5. After tapping a few characters, the device automatically matches character strings with names of location in database.
6. Tap  to confirm selection or  to correct entry.
7. Tap  **List** to browse a list of location names matching input. Tap an item to select.



8. Tap **<Street Name>** and enter a few characters of desired street name.
9. Tap  to select street name automatically generated or tap  **List** to browse a list of all street names matching input. Tap an item to select.
10. Tap **<House Number>** to enter house number.
11. Tap  to complete address entry.
12. Tap  to start navigation after system calculation of best desired route.

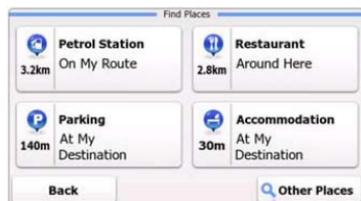Navigating to a Place Of Interest (POI)

 
In the navigation menu, tap **Destination** icon and then **Find Places** icon.




Displays a list of petrol stations along the route, around current position, or last known location



Displays a list of restaurants along the route, around current position, or last known location.



 Displays a list of parking lots near destination.



Displays a list of accommodations near destination.



Displays all available POI near the following locations:



Near current position.



In a desired city/town.



Near destination of active route



Along the active route.

Map Screen



The Map screen displays a virtual view of current position and various other information such as Vehimarker represent current position, orange line showing the recommended route, buttons and data fields assisting navigating function.

- Information of current location is displayed at the top of the screen when destination is not selected. With a confirmed destination, next instruction of maneuver or next street/road in the route navigation will be displayed.
- Tap anywhere on the map to open quick menu with control options.
- Tap  to explore around the current location. Press directional buttons to navigate.
- Tap  to toggle between distance reminders including remaining distance to destination, estimated time of arrival at destination, and remaining time of the trip.
- Tap  to return to navigation menu

More Menu



In the navigation menu, tap **More...** icon to enter menu. The options are shown as below:



Games

Tap any of the preinstalled games to start in Demo mode.



Get More

Obtain an activation key to play in full version

Download additional games from www.naviextras.com



Travel

Tap any of the travel applications to start program.



Demo & Tutorial

Start tutorial and demo session that offers basic device function introduction.



Get Extras
naviextras.com

Obtain additional content such as new maps or 3D landmarks.



Settings

Configure device settings

Please activate your device

Activate Now


Activate the software



NOTE:

Some of the applications may require system activation.

Settings

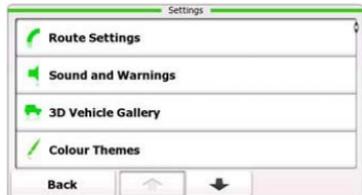

- In the navigation menu, tap  and then  to configure device settings.
- Tap  to display other settings options.

Route Settings

Select vehicle type, road types used in route planning, and route calculation methods.

Sounds and Warnings

Adjust sound volume, mute device, or enable warning messages.

3D Vehicle Gallery

Replace current Vehimarker (position arrow) with images.

Colour Themes

Set device daytime and night time color themes.

Starting Position

Temporarily disable GPS receiver function and set a different starting position.

Regional

Change system language, voice profile, time format/units, and input language.

Content

List all content items installed in the device.

Start Configuration Wizard

Adjust basic system parameters set during the initialization.

Reset to Defaults

Restore all system settings to factory default values.

About

Display Software and Database End User License Agreement, content licenses, and unique identifier of the software.

Take steps described in the tables below to solve simple problems before contacting customer service.


NOTE:

Immediately turn off the device and disconnect the power adapter if the device is not working properly. Never try to repair the unit without authorized professionals for it may damage the unit.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Users can't turn on the unit.	The adaptor doesn't connect well.	Connect the adaptor correctly.
	The built-in rechargeable battery is weak.	Use the adaptor to supply power or charge the battery.
There is no sound.	The volume may be turned down or mute.	Turn up the volume or turn on the sound output.
There is no picture.	The brightness may be turned down.	Adjust the brightness of the LCD.
The unit can't receive satellite signals or can't orient.	The unit may be obstructed by buildings or metal block.	Make sure to use the unit out of room; if in the vehicle, you can use the external GPS antenna to solve this problem.

Troubleshooting

PROBLEM

The unit can receive signals now but can't then; signals received are not stable.

POSSIBLE CAUSE

The built-in rechargeable battery is weak.

The unit may be obstructed by veil, such as heat insulation paper.

Swing of the unit is too great.

POSSIBLE SOLUTION

Use the adaptor to supply power or charge the battery.

Remove the veil.

Avoid great swing of the unit.