

Before operating the monitor please read this manual thoroughly.
This manual should be retained for future reference.

NOTE: This specification is subject to change without notices.

ENG

FOR YOUR SAFETY

FCC Class B Radio Frequency Interference Statement

WARNING:(FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced electric technician for help.

NOTICE

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

WARNING:

To prevent fire or shock hazard, do not expose the monitor to rain or moisture. Dangerous high voltages are present inside the monitor. Do not open the cabinet. Refer servicing to qualified personnel only.

PRECAUTIONS

- Do not use the monitor near water, or lay it at a moisture place.
- Openings in the back of the cabinet are provided for ventilation. To ensure reliable operation of the monitor and to protect it from overheating, be sure these openings are not blocked or covered.
- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.
- Do not overload the wall outlets and extend cords. Overloading can result in fire or electric shock.
- Do not attempt to service the monitor by yourself, opening or removing covers can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel.



- To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100-240V AC, Min. 1.2A.
- The wall socket shall be installed near the equipment and shall be easily accessible.

ENG

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitor and do not indicate a problem.

NOTES

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears. Or you can use of AUTO function.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- The life of the fluorescent light used in the LCD monitor is approximately 50,000 hours. Contact your dealer for replacement when the screen is dark, flickering or not lighting up. Never attempt to replace it by yourself.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- 43.2cm(17") TFT Color LCD Monitor
- Crisp, Clear Display for Windows
- Recommend Resolutions: 1280 X 1024 @75Hz
- EPA ENERGY STAR
- Space Saving, Compact Case Design

POWERCORD

Power Source:

1. Make sure the power cord is the correct type that required in your area.
2. This LCD monitor has a universal power supply that allows operation in either 100/120V AC or 220/240V AC voltage area (No user adjustment is required.)
3. Connect the AC-power cord into your LCD monitor's External Adapter input socket, and then plug the other end of External adapter to LCD monitor's DC-power-input. The AC-power cord may be connected to either a wall power outlet or the power outlet socket on your PC, depending on the type of power cord supplied with your LCD monitor.



CONTROLS AND CONNECTORS

VIDEO CABLE

Connecting the Video Cable:

Plug one of the signal cable's 15-pin connector into the Computer's video port and tighten the two screws on the cable connector. Then plug the other 15-pin connector into the LCD's video port, and tighten the two screws on the cable connector.

Connecting the Audio Cable:

Plug one of the signal cable's 15-pin connector into the Computer's audio port and tighten the two screws on the cable connector. Then plug the other 15-pin connector into the Audio signal inlet.

Plug the AC-power cord into the External Adapter. Then plug the DC-jack power cable into DC-IN Inlet. According to the type of the power code which suit with the LCD monitor.

ADJUSTING THE VIEWING ANGLE

- For optimal viewing it is recommended to look at the full face of the monitor, then adjusting the monitor's angle to your own preference.
- Hold the stand so you do not topple the monitor when you change the monitor's angle.
- You are able to adjust the monitor's angle from 5° to 15°.

NOTES

- Do not touch the LCD screen when you change. It may cause damage or break the LCD screen.
- Careful attention is required not to catch your fingers or hands when you change the angle.

ENG

OPERATING INSTRUCTIONS

GENERAL INSTRUCTIONS

Press the power switch to turn the monitor on or off. The other control knobs are located at front panel of the monitor. By changing these settings, the picture can be adjusted to your personal preferences.

- The power cord should be connected.
- Connect the video cable from the monitor to the video card.
- Press the power switch to turn on the monitor position. The power indicator LED will light up.

FRONT PANEL CONTROL

- **Auto Adjust Key:**

When OSD menu is in off status, press this button direct to activate the Auto adjustment function.

The Auto Adjustment function is used to set the Hpos, Vpos, Clock and Focus.

- **Brightness <:**

Adjust brightness or adjust function

- **Contrast >:**

Adjust contrast or adjust function.

- **MENU :**

Activate the OSD menu or confirm the function adjusting.

- **Power Key:**

Press this button to switch ON/OFF of monitor's power.

- **Power Indicator:**

Blue - Power On mode.

Orange - Off mode.

NOTES

- Do not install the monitor in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, or excessive dust or mechanical vibration or shock.
- Save the original shipping carton and packing materials, as they will come in handy if you ever have to ship your monitor.
- For maximum protection, repackage your monitor as it was originally packed at the factory.
- To keep the monitor looking new, periodically clean it with a soft cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution. Never use strong solvents such as thinner, benzene, or abrasive cleaners, since these will damage the cabinet. As a safety precaution, always unplug the monitor before cleaning it.

HOW TO ADJUST A SETTING

1. Press the MENU button to activate the OSD window.
2. Press > or < to select the desired function, then press the MENU button again.
3. Press > or < to change the settings of the current function, press the MENU button to confirm it.
4. If you want to adjust any other function, repeat steps 2-3.
5. If you want to exit the OSD image, select the "exit function/EXIT OSD", or leave the monitor alone for 20 seconds (Windows default), the OSD window will close and sure automatically.
6. When the OSD window is active, it shows the input signal timing.

ADJUSTING THE PICTURE

1. AUTO SETTING

1.1 AUTO GAIN CONTROL

Adjust the gain automatically.

1.2 BRIGHTNESS

Adjust the brightness automatically.

1.3 CONTRAST

Adjust the contrast automatically.

1.4 EXIT

2. COLOR

2.1 AUTO COLOR

Adjust the color automatically.

2.2 Exit

3. IMAGE

3.1 AUTO CONFIGURATION

Adjust the image position.

3.2 CLOCK

Adjust the image clock.

3.3 PHASE

Adjust the image focus

3.4 H-Position

Adjust the image horizontal position

3.5 V-Position

Adjust the image vertical position.

3.6 Exit

4. TOOLS

4.1 OSD TIMEOUT

Control the quit time of quit the OSD menu automatically.

4.2 OSD H.Position

Adjust the horizontal position of OSD menu.

4.3 OSD V.-Position

Adjust the vertical position of OSD menu.

4.4 VOLUME

Adjust the volume of the speaker.

4.5 FACTORY REST

Recall to factory setting

4.6 EXIT

5. COLOR TEMP

selection 5000k warm

6500k standard

9300k cool

If 5000k, 6500k, 9300k can't meet your need, you can do like this adjust the red, green and blue pluses through user-defined menu.

6. LANGUAGE

Choose the language of OSD menu, you can choose English, Czech, Russia, German, Polish etc.

7. EXIT

Exit OSD menu.

HOW TO OPTIMIZE THE DOS-MODE

1. Get the full screen pattern at MS-DOS mode, type in C:\>EDIT [press enter] You will be in the Dos-Editor screen
2. Press "AUTO" button (at front pane) about 2 seconds, the monitor will do all the adjustment automatically. You can adjust the image manually, if the screen has a flicker or blur, or not fit in the display
3. press ALT-F, and then X to exit from the Dos-Editor screen

If the DOS-MODE characters still have distortion

Example:

- The picture can't go to full screen
- The background of white pattern has vertical stripe noise
- The character twisted

That means your monitor parameter was in wrong resolution, please check if your VGA-CARD supports 720x400@70Hz

Generally speaking, most of the Dos mode was set by VGA-CARD in resolution 720x400@70Hz, but minor was set in 640x400@70Hz

PLUG AND PLAY

Plug & Play DDC1/2B Feature

This monitor is equipped with VESA DDC1/2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity, and depending on the level of DDC used, communicate additional information about its display capabilities. The communication channel is defined in two levels, DDC1 and DDC2B.

The DDC1 is a unidirectional data channel from the display to the host that continuously transmits EDID information. The DDC2B is a bidirectional data channel based on the I²C protocol. The host can request EDID information over the DDC2B channel.

THIS MONITOR WILL APPEAR TO BE NON-FUNCTIONAL IF THERE IS NO VIDEO INPUT SIGNAL. IN ORDER FOR THIS MONITOR TO BE PROPERLY OPERATED, THERE MUST BE A VIDEO INPUT SIGNAL.

This monitor meets the Green monitor standards as set by the Video Electronics Standards Association (VESA) and/or the United States Environmental Protection Agency (EPA) and The Swedish Confederation Employees (NUTEK). This feature is designed to conserve electrical energy by reducing power consumption when there is no video-input signal present. When there is no video input signal this monitor, following a time-out period, will automatically switch to an OFF mode. This reduces the monitor's internal power supply consumption. After the video input signal is restored, full power is restored and the display is automatically redrawn. The appearance is similar to a "Screen Saver" feature except the display is completely off. The display is restored by pressing a key on the keyboard, or clicking the mouse.

ENG

TECHNICAL SUPPORT (FAQ)

Problem & Question	Possible Solution
Power LED is not on	Check if the Power Switch is in the ON position Power Cord should be connected
No Plug & Play	Check if the PC system is Plug & Play compatible Check if the Video Card is Plug & Play compatible Check if the D-15 plug pin of Video Cable is bent
Picture is fuzzy	Adjust the Contrast and Brightness Controls.
Picture bounces or a wave pattern is present in the picture	Move electrical devices that may cause electrical interference.
The power LED is ON (Red) but there's no video or no picture.	Computer Power Switch should be in the ON position. Computer Video Card should be snugly seated in its slot Make sure monitor's video cable is properly connected to the computer. Inspect monitor's video cable and make sure none of the pins are bent. Make sure computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary colors(RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that none of the pins are bent.
Screen image is not centered or sized properly.	Adjust pixel frequency(CLOCK) and PHASE or press hot-key (AUTO)
Picture has color defects (white does not look white)	Adjust RGB color or select color temperature
Poor brightness or contrast	The life time of the back-light is limited. In 30000 Hours the luminance of the light has been reduced to half of its original value. Please send the monitor to an authorized service Agent for service.
Horizontal or vertical disturbances on the screen	Use win 95/98/2000/XP shut-down mode Adjust CLOCK and PHASE or perform hot-key (AUTO-key).

CLOCK (pixel frequency) controls the number of pixels scanned by one horizontal sweep. If the frequency is not correct, the screen shows vertical stripes and the picture has not correct width.

PHASE adjust the phase of the pixel clock signal. With a wrong phase adjustment the picture has horizontal disturbances in light picture.

For PHASE and CLOCK adjustment use "dot-pattern" or win 95/98/2000/XP shut-down mode pattern.

ERROR MESSAGE AND POSSIBLE SOLUTION

CABLE NOT CONNECTED:

1. Check that the signal-cable is properly connected. If the connector is loose, tighten the connector's screws.
2. Check the signal-cable's connection pins for damage.

INPUT NOT SUPPORTED:

Your computer has been set to unsuitable display mode. Set the computer to display mode given in the following table.

UNSUPPORTED MODE, TRY DIFFERENT VIDEO CARD SETTING:

Your computer resolution is out of VESA-SPEC

ENG

RESOLUTION:


RESOLUTION	VERTICAL FREQUENCY	RESOLUTION	VERTICAL FREQUENCY
640×480	60Hz	800×600	75Hz
720×400	70Hz	1024×768	60Hz
640×480	72Hz	1024×768	70Hz
640×480	75Hz	1024×768	75Hz
800×600	56Hz	1280×1024	60Hz
800×600	60Hz	1280×1024	75Hz
800×600	72Hz		

FACTORY PRESET TIMING TABLE

STANDARD	RESOLUTION	HORIZONTAL FREQUENCY	VERTICAL FREQUENCY
VGA	720×400	31.47 kHz	70.00 Hz
	640×480	31.469 kHz	60.00 Hz
	640×480	37.861 kHz	72.00 Hz
	640×480	37.5 kHz	75.00 Hz
SVGA	800×600	35.156 kHz	56.00 Hz
	800×600	37.879 kHz	60.00 Hz
	800×600	48.077 kHz	72.00 Hz
	800×600	46.875 kHz	75.00 Hz
XGA	1024×768	48.363 kHz	60.00 Hz
	1024×768	56.476 kHz	70.00 Hz
	1024×768	60.023 kHz	75.00 Hz
SXGA	1280×1024	63.981kHz	60.020Hz
	1280×1024	79.976kHz	75.025Hz

ENG

CONNECTOR PIN ASSIGNMENT FOR VGA SIGNAL INPUT

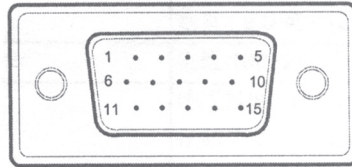

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1.	Red	9.	NC
2.	Green	10.	Ground
3.	Blue	11.	NC
4.	NC	12.	DDC-Serial Data
5.	Ground	13.	H-Sync
6.	R-Ground	14.	V-Sync
7.	G-Ground	15.	DDC-Serial Clock
8.	B-Ground		

SPECIFICATIONS

Basic Parameter

LCD Panel	Driving system	TFT Color LCD
	Size	43.2cm(17")
	Pixel pitch	0.264mm(H)×0.264mm(V)
	Display Colors	16M
Max .Resolution		1280X1024@75Hz
Plug & Play	VESA DDC1/2BTM	
Maximum Screen Size		Horizontal:13.3'(337.9mm) Vertical:10.6'(270.3mm)
Environmental Considerations		Operating Temp: 0°C to 40°C Storage Temp:-20°C to 60°C Operating Humidity: 10% to 80%.
External Controls	Switch	Auto Adjust Key/ Exit Brightness Contrast Menu/Enter Power Key
Functions	Brightness	Contrast Color Language Auto Adjust Exit Factory Reset
EPA Energy Star	ON Mode	<40W(For 2 CCFL)
	OFF Mode	<3W
Regulatory Compliance		FCC, CB, CE, UL

ENG

Chief Parameter (Different parameter with different model)

Viewable angle (Horizontal/Vertical)	140°/130°
Response time	8ms
Contrast	500:1
Brightness	300 cd/m ²



CHECKING THE CONTENTS OF THE PACKAGE

The product package should include the following items:

ENG

1. LCD Monitor	1 set
2. Owner's Manual	1 pcs
3. Power Cord	1 pcs
4. VGA signal cable	1 pcs
5. Audio cable	1 pcs
6. Adapter	1 pcs

