


1. Packing List

- | | |
|-----------------------------|------------------|
| 1. Prestigio MultiPad | 2. AC Adapter |
| 3. USB Cable | 4. Carrying Case |
| 5. Quick Start Guide | 6. Warranty Card |
| 7. Legal and Safety Notices | |

2. Device Overview

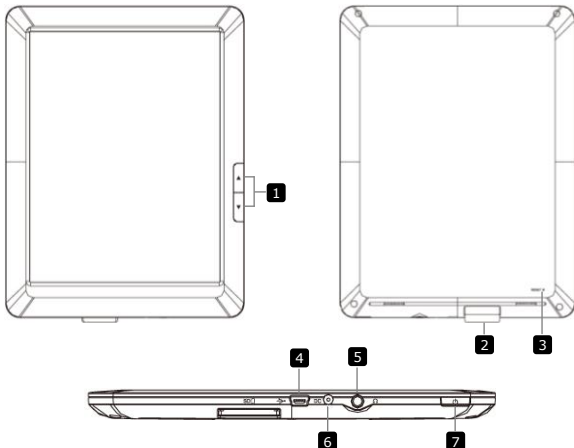

- | | |
|----------------------------|--|
| 1 Page Jump Buttons | Turn to the previous/next page in eBook Reading Mode
Press and hold the Previous Page Button to return to Home page. Press and hold the Next Page Button to return to previous page. |
| 2 SD Card Slot | Insert SD card |
| 3 Reset Button | Reset the device to default settings |
| 4 Mini USB Port | USB connection |
| 5 Earphone Jack | Earphones connection |
| 6 DC Port | AC adapter connection |
| 7 Power Button | Turn on/off the device; Suspend/Activate the device. |

3. Charging

- Insert the AC connector to the DC port on the device and connect the power adapter to the wall socket for charging.
- Normally it takes approximately 5 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charging.


4. Power on/Power off

- Press and hold the **Power Button** to turn on the device. It will automatically enter the **Home** screen after the start-up screen.
- Press the **Power Button** once to enter sleep mode and press it again to awake the device.
- Press and hold the **Power Button**, and then tap on **Power off/Standby** to power off the device or to enter sleep mode.

5. Inserting a Memory Card

- The device supports SD/SDHC cards.
- To insert a SD card, place the card connector towards the device and the card label towards the rear side of the device.
- To remove the SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.
- To access the files on the memory card, select **Explorer** mode and tap on **SD Card**.




6. Transferring Content to the device

1. Connect the device to your PC/Notebook using the USB cable.
2. Select the content you want to transfer from your PC/Notebook.
3. Drag the content from the PC/Notebook to the device.
4. Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
5. Left click on  to disconnect the device and PC/Notebook safely.

NOTE:

Content can also be transferred to SD card on the device.

7. Connecting to Wi-Fi

- Select **Settings** icon to access the list of options. Select **Wireless & networks**.
- If the Wi-Fi is off, tap on  and switch it to . Then select the **Wi-Fi settings**.
- The device will scan for available Wi-Fi networks and display them at the bottom of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Done**, and then tap on **Connect**.
- Your device will now attempt to establish a connection to the Wi-Fi access point with the network parameters you entered. After connecting to a Wi-Fi network, the  icon appears on the status bar on the right side of the Home screen.

8. Automatic Upgr0061de

- If there is a new system version, a system update dialog-box will pop up.
- Click "download" to download new firmware package. (This process will take a long time, please be patient)
- When finishing to download the new firmware package, click "installation" to upgrade your firmware.

Notice:

- During automatic updates the charger should always be connected to the device in order to avoid power shortage and as a result interruption of the upgrade process.
- New firmware package should be downloaded in a good WI-FI network environment.
- During upgrade some user data may be lost (installed applications). Before upgrade please backup the important files.

Technical Specifications

Processor	High performance ARM Cortex A8 at 1GHz
RAM	512MB DDR3
OS	Android 2.3 (Gingerbread)
Display	8.4" TFT LCD, Resistive dual touch
Resolution	800 x 600 pixels
Storage capacity	4 GB flash memory (2.8GB are accessible by user), Memory card slot supports SDHC card up to 32 GB
Interfaces	USB 2.0, SD (SDHC compatible), USB Host
Communications	Wi-Fi (802.11 b/g/n)
Audio Format	MP3/WAV/OGG/FLAC/APE/AAC/WMA
Video Format	AVI/3GP/MP4/RM/RMVB/FLV/MKV/MOV/VOB/WMV/DAT
Photo Format	JPEG(Baseline) :96*32pixels to 8000*8000 pixels; BMP; GIF (Static); PNG
Battery	4000 mAh Li-Polymer battery
Dimensions	212.8x161.4x11 (mm)
Weight	500 g

Disclaimer

As the Prestigio products are constantly updated and improved, your device's software may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.