


1. Packing List

1. Prestigio MultiPad
2. AC Adapter
3. Carrying Case
4. USB Cable
5. Quick Start Guide
6. Warranty Card
7. Legal and Safety Notices

2. Device Overview

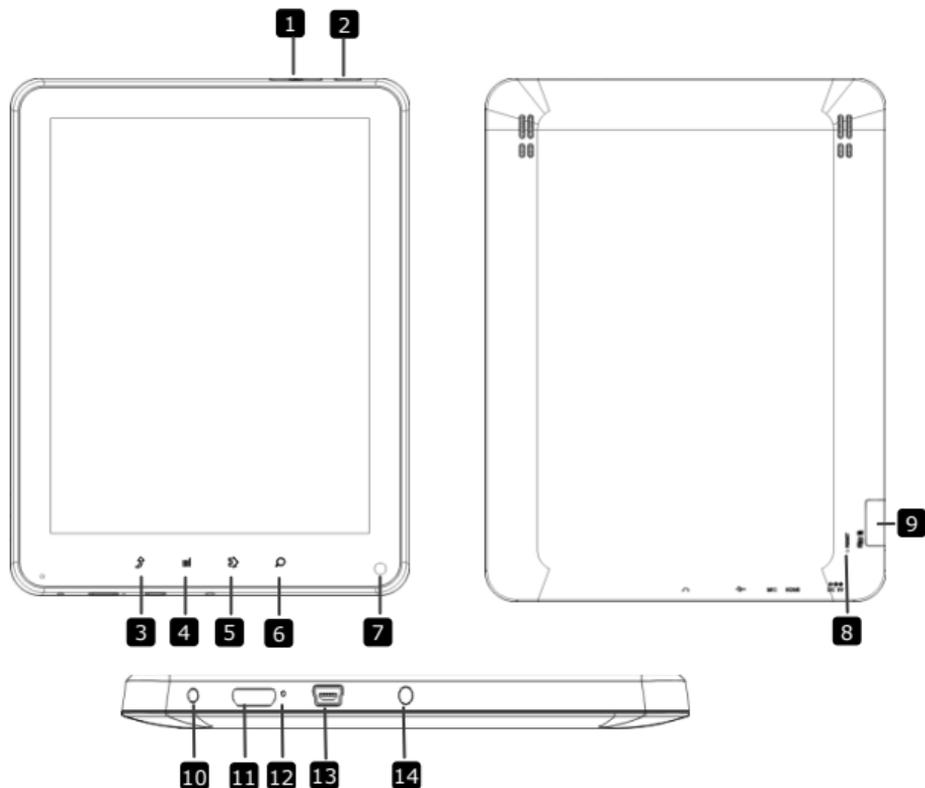

1	Vol + \ Vol - Button	Adjust the volume level
2	Power	Turn on/off the device; Suspend/Activate the device
3	ESC	Back up to the previous page
4	Menu	Display menu options
5	Home	Back to the Home screen
6	Search	Go to Google home search page directly
7	Camera	Take photos
8	Reset	Reset the device if it fails to operate correctly.
9	Micro SD Card Slot	Insert Micro SD card.
10	DC Port	AC adapter connection.
11	Mini-HDMI video output	HDMI cable connection.
12	Built-in Microphone	Record sounds.
13	USB port	USB connection.
14	Earphone Jack	Earphones connection.

Getting Started

3. Charging

- Insert the AC connector to the DC port on the device and connect the power adapter to the wall socket for charging.
- Normally it takes approximately 4 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charging.

4. Power on/Power off

- Press and hold the **Power Button** to turn on the device. It will automatically enter the **Home** screen after the start-up screen.
- Press the **Power Button** once to enter sleep mode and press it again to awake the device.
- Press and hold the **Power Button**, and then tap on **Power off/Standby** to power off the device or to enter sleep mode.

5. Inserting a Memory Card

- The device supports micro SD/SDHC cards.
- To insert a Micro SD card, place the card connector towards the front side of the device and the printing side of the card towards the rear side of the device.
- To remove the micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.
- To access the files on the memory card, select **File** icon and tap on **SD Card**.

Notice:

When you are reading the file from micro SD card, please don't remove it, or the device could fail to operate correctly.

6. Home Menu



More Applications
Tap to pop up
applications page

Weather Forecast
(Wi-Fi connection is
required)

7. Shortcuts

On the **Home** screen the following shortcuts are available:



Back - returns to the previous screen.



Menu - offers menu options according to the current screen.



Home - press once: return to the **Home** screen. Press and hold: jump to one of the recent applications.



Volume - adjust the volume

8. Using the Keypad



- Tap on the **Caps Lock** button to toggle between uppercase/lowercase letter input methods.
- Tap on the **Shift** button to toggle between number/symbol/letter input methods.
- Press the **Backspace** button to delete a character before the cursor. Press the **Enter** button to confirm the option. Press the **Space** button to input a space.

9. Connecting to WiFi

- In the Home menu press the  icon and select **Settings** icon to access the list of options. Select **Wireless & networks**.
- If the WiFi is off, tap on the Wi-Fi line to turn it on. Then select the **Wi-Fi settings**.

- The device will scan for available WiFi networks and display them at the bottom of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Done**, and then tap on **Connect**.
- Your device will now attempt to establish a connection to the WiFi access point with the network parameters you entered.

10. Transferring content from PC

- Connect the device to your PC/Notebook using the USB cable.
- Select the content you want to transfer from your PC/Notebook.
- Drag the content from the PC/Notebook to the device.
- Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
- Left click on  to disconnect the device and PC/Notebook safely.

11. Downloading content from AppsLib

- You can download free or paid applications directly from your device using the **AppsLib** application marketplace.
- Before entering the **AppsLib** make sure the **WiFi connection** is established.
- With Internet connection established, press the icon  on the **Home** screen.
- Upon entering the **AppsLib** you can view the list of free and purchasable applications as well as install the preferred applications.
- After pressing the **Menu** tab the device will offer the following options:

My apps	View the list of installed applications. Update or uninstall apps.
Settings	Change AppsLib account settings, Clear cache and Clear search cache .
About	Access the AppsLib End User Licence Agreement .
Exit	Exit the program.

Technical Specifications

Processor	High performance ARM Cortex A8 at 1 GHz
RAM	512MB DDR3
OS	Android 2.3 (Gingerbread)
Display	8" TFT LCD, Capacitive multitouch
Resolution	800 x 600 pixels
Supported File Formats	Video: AVI, 3GP, MP4, RM, RMVB, FLV, MOV Audio: MP3/WMA/WAV/OGG/FLAC/APE/AAC Picture: JPEG(Baseline), BMP, GIF (Static), PNG
Storage capacity	4 GB flash memory (2.81GB are accessible by user), Memory card slot supports micro SDHC card up to 32 GB
Interfaces	USB 2.0, Micro SD (micro SDHC compatible), USB Host, HDMI
Communications	WiFi (802.11 b/g/n)
Battery	5400 mAh Li-Pol battery
Dimensions	203.1*153.4*11.2 (mm) (L x W x H)
Weight	510 g

Disclaimer

As the Prestigio products are constantly updated and improved, your device's software may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.