


1. Packing List

1. Prestigio MultiPad
2. AC Adapter
3. Carrying Case
4. USB Cable
5. Quick Start Guide
6. Warranty Card
7. Legal and Safety Notices

2. Device Overview

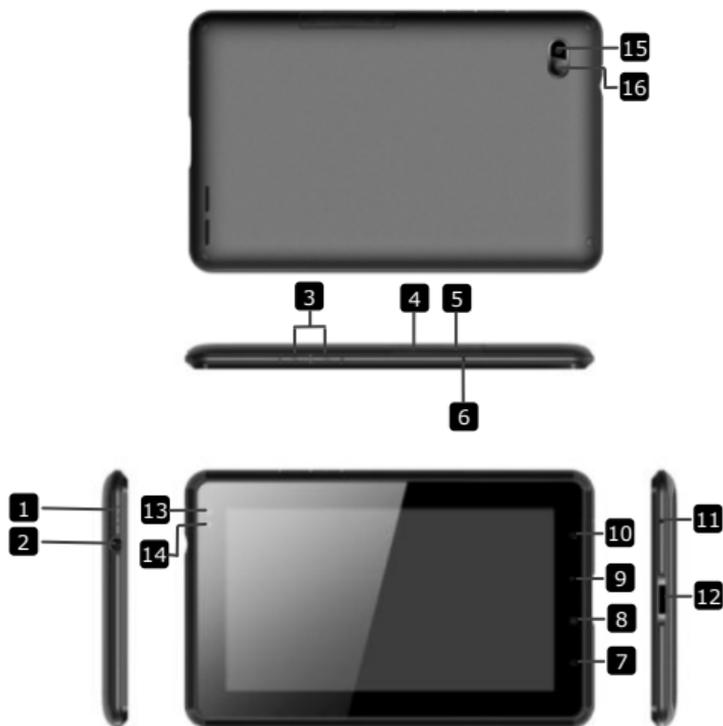

1	Power	Turn on/off the device; Suspend/Activate the device
2	Earphone Jack	Earphones connection.
3	Vol + \ Vol - Button	Adjust the volume level
4	SIM Slot	Insert the SIM card
5	Micro SD Card Slot	Insert the Micro SD card
6	Built-in Microphone	Record sounds or chat with others
7	Home	Back to the Home screen
8	Menu	Display menu options.
9	Return	Back to the previous page
10	Search	Go to Google home search page directly
11	Reset	Reset the device if it fails to operate correctly
12	USB / DC port	USB / DC connection
13	Front camera lens	Take photos
14	Ambient light sensor	Induct the changing light
15	Flash lamp	Increase light
16	Back camera lens	Take photos

Getting Started

3. Charging


- Insert the AC connector to the DC port on the device and connect the power adapter to the wall socket for charging.
- Normally it takes approximately 3 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charging.

Notice: The device cannot be charged via USB.

4. Power on/Power off

- Press and hold the **Power Button** to turn on the device. It will automatically enter the **Home** screen after the start-up screen.
- Press the **Power Button** once to enter sleep mode and press it again to awake the device.
- Press and hold the **Power Button**, and then tap on **Power off/Standby** to power off the device or to enter sleep mode.

5. Inserting a Memory Card

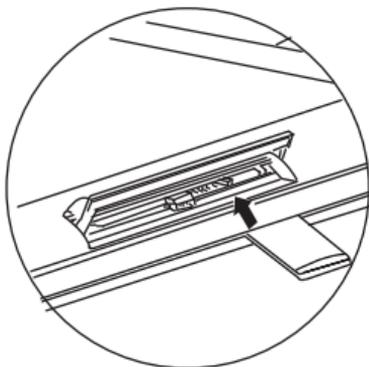

Correct





Incorrect

- The device supports micro SD/SDHC cards.
- To insert a Micro SD card, place the card connector towards the front side of the device and the printing side of the card towards the rear side of the device.
- To remove the micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.
- To access the files on the memory card, select **File** icon and tap on **SD Card**.

Notice: When you are reading the file from micro SD card, please don't remove it, otherwise the device could fail to operate correctly.

6. Inserting a SIM Card

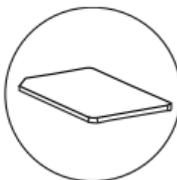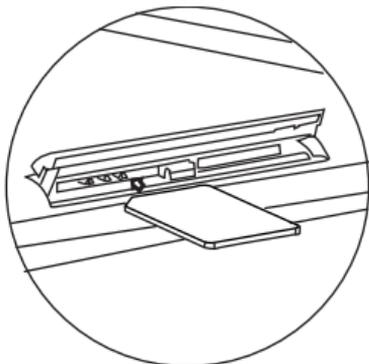

Correct



Incorrect

- To insert a SIM card, place the metal side of SIM card towards the front side of the device and the triangular cut of the card will be inserted into the device.
- To remove the SIM card, gently press the edge of the card to release the safety lock and pull the card out of the slot.
Notice: Don't insert or remove the SIM card while the device is on. Please insert or remove the SIM card while the device is off.

7. Auto Calibrate

- Please turn off the tablet when you calibrate the touch screen
- Press and hold the Volume “-” button on the right of the device and press and hold the Power button simultaneously to turn on the device.
- Release the Power button when the device vibrates, then release the Volume “-” button when the “Touch Screen Calibration, Don't Touch The Screen...OK” displays on the screen.
Notice: Don't touch the screen during the calibration process.

8. Automatic Upgrade

- If there is a new system version, a system update dialog-box will pop up.
- Click “download” to download new firmware package. (This process will take a long time, please be patient)
- When finishing to download the new firmware package, click “installation” to upgrade your firmware.
Notice:
- Ensure that the Micro SD card has been inserted before downloading the new firmware, and the remaining storage of Micro SD card is more than 200MB.
- During automatic updates the charger should always be connected to the device in order to avoid power shortage and as a result interruption of the upgrade process.
- New firmware package should be downloaded in a good 3G or WI-FI network environment.
- During upgrade some user data may be lost (installed applications, call records, etc). Before upgrade please backup the important files.

9. Connecting to Wi-Fi

- Select **Settings** icon to access the list of options. Select **Wireless & networks**.
- If the Wi-Fi is off, tap on  and switch it to . Then select the **Wi-Fi settings**.
- The device will scan for available Wi-Fi networks and display them at the bottom of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Done**, and then tap on **Connect**.
- Your device will now attempt to establish a connection to the Wi-Fi access point with the network parameters you entered. After connecting to a Wi-Fi network, the  icon appears on the status bar on the right side of the Home screen.

10. Using 3G network

- Insert a SIM card, and then select **Settings** icon to access the list of options.
- Select **Wireless & networks**, then touch **Mobile networks**.
- If the **Data enabled** is off, tap on  and switch it to .
- Select **Access Point Names**, If you find nothing, please touch **Menu** button. Select **New APN** option, then fill in the information that you got from the operator of the SIM card.
- Select **Network operators** option, then select the operator of the SIM card. The  icon appears on the right side of the status bar. You can go on line directly without Wi-Fi now.

11. Transferring content from PC

- Connect the device to your PC/Notebook using the USB cable.
- Select the content you want to transfer from your PC/Notebook.
- Drag the content from the PC/Notebook to the device.
- Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
- Left click on  to disconnect the device and PC/Notebook safely.

Technical Specifications

Processor	High performance ARM Cortex A8 at 800MHz
RAM	512MB DDR2
OS	Android 2.3 (Gingerbread)
Display	7" TFT LCD, Capacitive multi touch
Resolution	800 x 480 pixels
Storage capacity	4 GB flash memory (2.73GB are accessible by user), Memory card slot supports micro SDHC card up to 32 GB
Interfaces	USB 2.0, Sim card, Micro SD (micro SDHC compatible), USB Host
Communications	Wi-Fi (802.11 b/g/n), 3G(WCDMA), Bluetooth
GPS	On board
GSM Band	HSDPA/UMTS 2100/900 MHz GSM/GPRS/EDGE 850/900/1800/1900 MHz
Sensor	3-axis-accelerometer 3-axis-compass Light sensor
Battery	4000 mAh Li-Polymer battery
Dimensions	192*122*12.2 (mm) (L x W x H)
Weight	460 g

Disclaimer

As the Prestigio products are constantly updated and improved, your device's software may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.