

1. Packing List

- | | |
|-----------------------|------------------|
| 1. Prestigio MultiPad | 2. AC Adapter |
| 3. Earphone | 4. USB Cable |
| 5. Quick Start Guide | 6. Warranty Card |

2. Device Overview



- | | | |
|-----------|---------------------------------|---|
| 1 | Vol + \ Vol - | Adjust the volume level |
| 2 | Power \ Reset Button | Turn on/off the device; Suspend/Activate the device; Reset the device to default settings |
| 3 | Power \ Charge Indicator | On \ off status; charging indicator |
| 4 | Earphone Jack | Earphones connection |
| 5 | USB Host Port | Connecting a USB device |
| 6 | Micro USB Port | USB connection |
| 7 | Micro SD Card Slot | Insert SD card |
| 8 | Mini-HDMI video output | Connecting an optional HDMI cable |
| 9 | DC Port | AC adapter connection |
| 10 | Web-camera | Video-conferences and other applications |
| 11 | Microphone | Voice recording |

Getting Started

3. Charging

- Insert the AC connector to the DC port on the device and connect the power adapter to the wall socket for charging. The charging indicator blinks when fully charged, glows steadily when charging and blinks rapidly when the device battery is too low to start it.
- Normally it takes approximately 3 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charging.

4. Power on/Power off

- Press and hold the **Power Button** to turn on the device. It will automatically enter the **Home** screen after the start-up screen.
- Press the **Power Button** once to enter sleep mode and press it again to awake the device.
- Press and hold the **Power Button**, and then tap on **Power off/Standby** to power off the device or to enter sleep mode.

5. Startup wizard

- When using the device for the first time (or after resetting all user's personalized settings) the device will automatically launch the **Startup Wizard**.
- The **Startup wizard** interface will offer to choose the system language from the language list and the Time Zone.
- During the **Startup Wizard** the device's accelerometer will be calibrated. To perform the calibration, please, follow the on-screen instructions.

Main functions

6. Main menu

After the **Startup Wizard** the device will enter the **Home** screen, containing installed and default applications. The basic applications are detailed as follows.



By pressing the **Guide** icon the device will playback an introductions video, which guides through its major functions, the Prestigio graphic user interface and installed applications useful in daily life, in the office and for games.



In the **Gallery** application the images can be viewed as a photo wall, one-by-one, or as a running slideshow. Drag the finger horizontally to jump from one image to another.



The **Video** application allows to playback AVI, MP4, MKV, MOV, WMV, MPG, PS, TS, VOB, FLV, RM, RMVB, ASF and 3GP file formats.

Hint:

Video playback can be stopped anytime and then recovered by tapping on the "+" symbol, on the right of the file name.

The **Browser** application allows surfing the Internet using the Android default browser.

Note:

For Internet connection, please, see **8. Connecting to WiFi**.

Hint: The Browser application can work with multiple pages open at once.



The **email** application supports POP or IMAP e-mail accounts.

Main functions

7. Shortcuts

On the **Home** screen the following shortcuts are available:



Back - returns to the previous screen.



Menu - offers menu options according to the current screen.



Home – press once: return to the **Home** screen. Press and hold: jump to one of the recent applications.



Search - allows to search for an item on the device or in Internet.

8. Connecting to WiFi

- In the Home menu press the **Settings** icon to access the list of options. Select **Wireless & networks**.
- If the WiFi is off, tap on the Wi-Fi line to turn it on. Then select the **Wi-Fi settings**.
- The device will scan for available WiFi networks and display them at the bottom of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Done**, and then tap on **Connect**.
- Your device will now attempt to establish a connection to the WiFi access point with the network parameters you entered.

Transferring content

9. Transferring content from PC

- Connect the device to the PC with the USB cable provided. The device will automatically enter the USB screen. Please, follow the on-screen instructions to enable USB data transfer.
- The device will be automatically recognized by the PC.
- Please, transfer the necessary content using **Windows Explorer**.

10. Downloading content from AppsLib

- You can download free or paid applications directly from your device using the **AppsLib** application marketplace.
- Before entering the **AppsLib** make sure the **WiFi connection** is established.



- With Internet connection established, press the **AppsLib** icon on the **Home** screen.
- Upon entering the **AppsLib** you can view the list of free and purchasable applications as well as install the preferred applications.
- After pressing the **Menu** tab the device will offer the following options:

My apps	View the list of installed applications. Update or uninstall apps.
Settings	Change AppsLib account settings, Clear cache and Clear search cache .
About	Access the AppsLib End User Licence Agreement .
Exit	Exit the program.

Technical Specifications

Processor	ARM Cortex A8 at 1 GHz with DSP; OpenGL ES 2.0 Hardware 3D Graphic accelerator
OS	Android 2.2 (Froyo)
Display	10" TFT LCD, Capacitive multitouch
Resolution	High resolution, 1024x600 pixels, 16 million colors
Supported File Formats	Video: AVI, MP4, MKV, MOV, WMV, MPG, PS, TS, VOB, FLV, RM, RMVB, ASF, 3GP Audio: MP3 CBR & VBR, WMA, WMA-Pro 5.1, WAV (PCM/ADPCM), AAC, AAC+ 5.13, OGG Vorbis, FLAC Picture: JPEG, BMP, PNG, GIF
Storage capacity	From 8 GB flash memory, Micro SD Slot
Interfaces	USB slave 2.0, Full size USB host, Micro SD (SDHC compatible), HDMI output
Communications	WiFi (802.11 b/g/n); Bluetooth 2.1 EDR
Battery	Li-Pol battery
Dimensions	270 x 150 x 12 mm (L x W x H)
Weight	480 g

Disclaimer

As the Prestigio products are constantly updated and improved, your device's software may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.