




Upgrading Guide

1. Power off the device, and open the back cover of the device to take out the memory card.

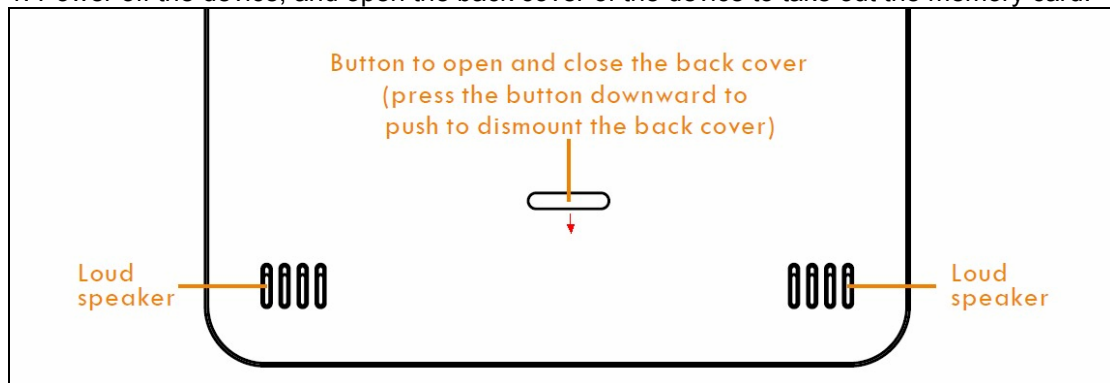

2. Use a card reader to connect the memory card with a computer
3. Decompress the downloaded software, and open the file folder. Copy the software named "Sibrary" into the root directory of the memory card.



4. Put the memory card back to the device. Press and hold the Navigation button , and then press Power button  till the indicator flashes to release both buttons. In this way, the device will enter the upgrading mode.
5. Wait the upgrading to be finished (it takes about 20 minutes). After upgrading, the system will re-start and boot automatically.

NOTE:

It takes longer time of the boot-strap the first time after upgrading. To make the whole process smoothly, please wait the device to do it automatically.