


## Upgrading Instruction

1. Connect the device with a computer via USB cable, and choose **“Yes”** when a prompt **“Do you want to connect to PC?”** pops up on the device.
2. Decompress the downloaded file named **“PER5162EN-V1.4 (220811)”**, and open the file folder. Copy the Firmware named **“sysfw.img”** into the root directory of the memory card, then shutdown the device.



4. Press and hold the Navigation button, and then press Power button till the indicator flashes to release both buttons. In this way, the device will enter the upgrading mode, and relevant indications will be displaying on the screen.

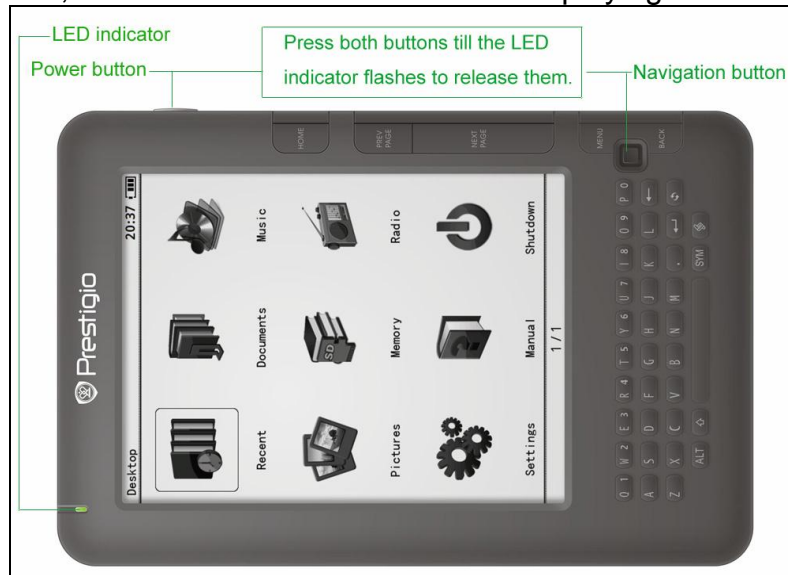

5. Wait the upgrading to be finished (it takes about 20 minutes). After upgrading, the system will re-start and boot automatically.

### NOTE:

1. It takes longer time (about 10 minutes) of the boot-strap the first time after upgrading. To make the whole process smoothly, please wait the device to do it automatically.
2. Could also use a card reader to copy the firmware into the root directory of the memory card:
  - 1) Power off the device, and open the back cover of the device to take out the memory card; 2) Use a card reader to connect it with PC, and copy the FW **“sysfw.img”** into its root directory.