


Sadržaj pakovanja

- | | |
|---------------------------|-----------------------|
| 1 Prestigio iPod™ zvučnik | 2 Daljinski upravljač |
| 3 DC adapter napajanja | 4 AUX kabl |
| 5 Brze instrukcije | 6 Garatni list |

Prikaz uređaja

Kontrolni panel

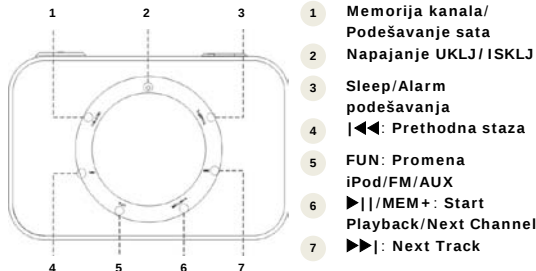


- 1 Memorija kanala/
Podešavanje sata
- 2 Napajanje UKLJ/ ISKLJ
- 3 Sleep/Alarm
podešavanja
- 4 |◀◀: Prethodna staza
- 5 FUN: Promena
iPod/FM/AUX
- 6 ▶▶/MEM+: Start
Playback/Next Channel
- 7 ▶▶|: Next Track

Odozgo



- 1 Jačina zvuka
- 2 SNOOZE/
Kontrola osvetljenosti


Odozdo

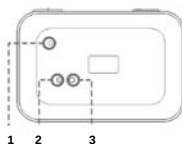

- 1 FM Antena
- 2 Input port napajanja
- 3 Pomoćni input port

Daljinski upravljač

- | | |
|-------|--|
| | Taster za UKLJ/ ISKLJ napajanja |
| MENU | Taster za povratak u meni |
| ▲ | Taster za kretanje kroz
meni-gore |
| ▼ | Taster za kretanje kroz meni -
dole |
| ▶ | Play/Pause/Next FM stanica |
| ENTER | Taster za potvrdu funkcija |
| ◀◀ | Prethodna staza / premotavanje |
| ▶▶ | Sledeća staza / unapred |



Osnovne funkcije

- Izvucite taster na kraju **Daljinskog upravljača** da omogućite rad jedinice.
- Postavite odgovarajući priključak DC adaptera napajanja u zidnu utičnicu.
- Postavite konektor napajanja DC adaptera napajanja u uređaj
- Pritisnite taster na uređaju za izmenu **Standby Moda i Music Moda**.

Muzičke funkcije

Selekcija moda

Pritisnite /FUN za kretanje kroz **AUX**, **iPod™**, i **FM** mod.

iPod™ Mod

Insert iPod™ u željeni port sa gornje strane uređaja. Muzika će krenuti automatski.

- Pritisnite **MENU** za povratak na prethodnu stranu
- Pritisnite **▲/▼** za selekciju stavki i **ENTER** za potvrdu.

AUX Mod

Povežite eksterni audio uređaj sa AUX priloženim kablom. Uključite

eksterni uređaj za start reprodukcije.

Radio Mod

- Pritisnite |◀◀/▶▶| za pretragu FM stanica ručno.
- Pritisnite i zadržite ▲/▼ na 2 sekunde za pretragu FM stanica automatski.
- Pritisnite **MEM/SET** na uređaju za smeštaj FM stanice na memoriju. Pritisnite ▶||/MEM+ da odredite kanal memorije i **SET/MEM** da potvrdite.
- Pritisnite ▶|| za prelazak na sledeću FM stanicu smeštenu u memoriji.

Playback Pauza

Pritisnite ▶|| da zaustavite reprodukciju. Pritisnite taster ponovo da nastavite.

Selekcija staza

Pritisnite |◀◀/▶▶| za povratak/prelazak na prethodnu/narednu stazu.

Podešavanje jačine

Pritisnite **Volume taster** da pojačate/utišate zvuk.

Ekstra funkcije

Podešavanje vremena

- Pritisnite i zadržite **MEM/SET** da pokrenete podešavanje vremena.
- Pritisnite |◀◀/▶▶| da selektujete format vremena (12/24 sat), u satima, minutima i dan u nedelji.
- Pritisnite **MEM/SET** da potvrdite i završite sa podešavanjima

Adjusting Alarm Time

- During **Standby Mode**, press and hold **SLEEP/AL** on device to start adjusting alarm time.
- Press |◀◀/▶▶| to select time hour, time minute, day of the week, and alarm method (FM/iPod™/Beep).
- Press **SLEEP/AL** to confirm each setting and to complete setup.

Sleep Function

- During **Music Mode**, press **SLEEP/AL** on device to cycle through sleep counter from **90, 60, 30, 15, 10, 5, and off**.

Charging Dock

Simply connect iPod™ to appropriate port on top of device to charge

iPod™.

Backup Batteries

2 X AA batteries can be stored at the button of device to ensure proper functioning of device clock only.

NOTE:

Alkaline batteries will not be functional when DC Power Adapter is connected to device. The design is to avoid damages to Alkaline batteries as a result of difference in electricity voltage.