


Package Contents


1. Prestigio Mouse Main Unit
2. Quick Guide
3. Warranty Card

Product Overviews


Top View

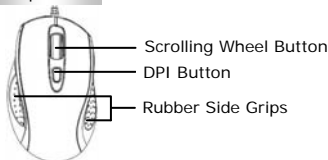


Side View



Getting Started

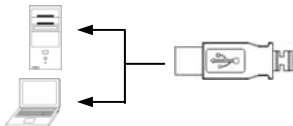

- Turn on PC or notebook.
- Insert USB connector to any of the USB slot on PC or notebook.
- The device now is ready for use.

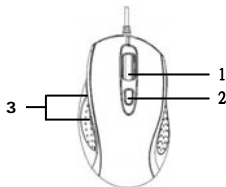

1. Press DPI switch to toggle between DPI 800/1600 modes.
2. Slide scrolling wheel to fast-scroll between pages.
3. Press Forward/Backward button to go to next/previous pages when using browser.

Cautions

- Do not attempt to disassemble or alter any part of the device that is not described in this guide.

- Do not place the device in contact with water or any other liquids. The device is NOT designed to be liquid proof of any sort.
- In the event of liquid entry into interior of device, immediately disconnect the device from the computer. Continuing use of the device may result in fire or electrical shock. Please consult your product distributor or the closest support center.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
- Do not place the device near a heat source or directly expose it to flame or heat.

Technical Specifications

Model Name	PJ-MSO2R
Lens	Dual Lens
Light Source	LED
Resolution	800/1600 DPI Switchable
Frame Rate	3000
Report Rate	125
Buttons	5
OS Supported	Windows 2000/ME/XP(32bit)/Vista
USB Cable Length	1.5m
Weight	95g
Dimensions (mm)	109(L) X 66.0(W) X 38.5(H)

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.