


Package Contents

1. Prestigio Mouse Main Unit
2. Quick Guide
3. Warranty Card
4. AA or AAA Alkaline Battery X 2


Product Overviews

PJ-MSL1W & PJ-MSL2W(R) models

Top View

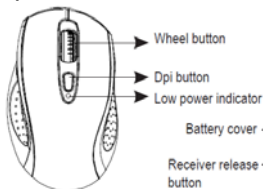


Button View

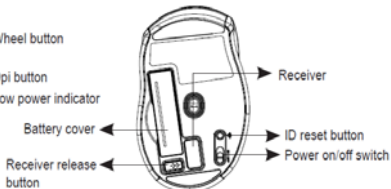

Side View

Internet Forward & Backward button




Receiver





PJ-MSL3W models

Top View

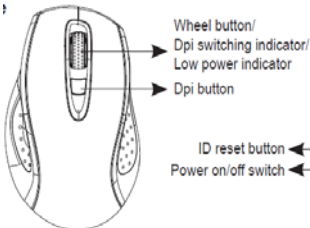


Button View

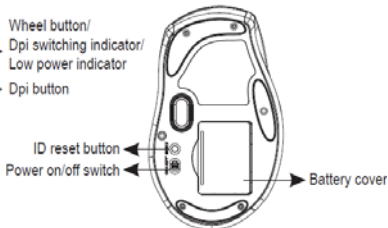


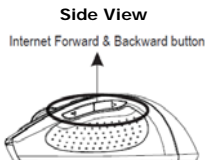

Receiver




Getting Started



- Remove battery cabinet cover at the button of device.
- Insert batteries as indicated on the diagram attached.
- Fit in battery cabinet cover.
- Slide power switch to ON position.


NOTE:

Low power LED blinks for 3 seconds if the device is powered on.

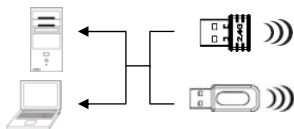

- Turn on PC or notebook.
- Release USB receiver from the button of the device.
- Insert USB receiver to any of the USB slot on PC or notebook.
- The device now is ready for use.

- The radio connection will be automatically established once receiver is properly inserted.
- Upon interference, the device will automatically switch to a new channel with slight delay in device operation.

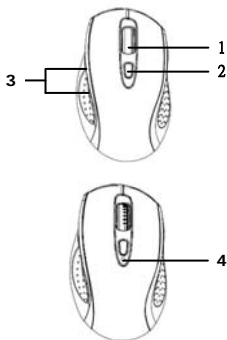

1. Press DPI switch to toggle between DPI 800/1600 modes.
2. Slide scrolling wheel to fast-scroll between pages.
3. Press Forward/Backward button to go to next/previous pages when using browser.
4. The Low power indicator will be illuminated in red (PJ-MSL1W & PJ-MSL2W(R) models only) if batteries are in need to replacement. Please immediately replace batteries as instructed above.

NOTE:

The device automatically enters sleep mode when not used. Click any button to recall normal function.

Cautions



- Do not direct the laser beam at eyes at all times.
- Do not attempt to disassemble or alter any part of the device that is not described in this guide.
- Do not place the device in contact with water or any other liquids. The device is NOT designed to be liquid proof of any sort.
- In the event of liquid entry into interior of device, immediately disconnect the device from the computer. Continuing use of the device may result in fire or electrical shock. Please consult your product distributor or the closest support center.
- To avoid risk of electrical shock, do not connect or disconnect the device with wet hands.
- Do not place the device near a heat source or directly expose it to flame or heat.

Technical Specifications

Model Name	PJ-MSL2WR
Lens	Laser Lens
Light Source	Laser Diode with Built-In Sensor
Resolution	800/1600 DPI Switchable
Frame Rate	3000
Report Rate	125 cycle/second
Connection Type	2.4GHz Dual Direction RF Technology
Sensitivity	~ -85dbm
Channel/ID	16 Channels / 2 ⁸ ID per Channel
Buttons	5
OS Supported	Windows 2000/ME/XP(32bit)/Vista
Power Source	Alkaline Battery AA or AAA X 2
Power Consumption	<ul style="list-style-type: none"> ● Operation Mode : < 5.5~8.5mA ● Idle Mode: 0.6~0.65mA (Operation Mode to Idle Mode: 0~1second) ● Sleep Mode 1: 0.1~0.12mA (Idle Mode to Sleep Mode 1: 5 second) ● Sleep Mode 2 : 0.03~0.05mA (Sleep Mode 1 to Sleep Mode 2: 420 second)
Weight	75g
Dimensions (mm)	109(L) X 66.0(W) X 38.5(H)

Technical Support and Warranty Information

Please refer to www.prestigio.com for technical support and included warranty card for warranty information.

Disclaimer

We make every effort to ensure that the information and procedures in this user manual are accurate and complete. No liability can and will be accepted for any errors or omissions. Prestigio reserves the right to make any changes without further notice to any products herein.